

## Operating Guide

# PS 9000 3U

## DC High Efficiency Power Supply



Attention! This document is only valid for devices with TFT display and firmwares "KE: 3.04" (standard version) resp. "KE: 2.07" (GPIB, 3W) and "HMI: 2.01" or higher. For availability of updates for your device check our website or contact us.



Doc ID: PS93UTEN  
Revision: 08  
Date: 10/2018





# TABLE OF CONTENTS

## 1 GENERAL

1.1	About this document.....	5
1.1.1	Retention and use.....	5
1.1.2	Copyright.....	5
1.1.3	Validity.....	5
1.1.4	Explanation of symbols.....	5
1.2	Warranty.....	5
1.3	Limitation of liability.....	5
1.4	Disposal of equipment.....	6
1.5	Product key.....	6
1.6	Intended usage.....	6
1.7	Safety.....	7
1.7.1	Safety notices.....	7
1.7.2	Responsibility of the user.....	8
1.7.3	Responsibility of the operator.....	8
1.7.4	User requirements.....	8
1.7.5	Alarm signals.....	9
1.8	Technical data.....	9
1.8.1	Approved operating conditions.....	9
1.8.2	General technical data.....	9
1.8.3	Specific technical data (EU models).....	10
1.8.4	Specific technical data (US models).....	20
1.8.5	Views.....	30
1.8.6	Control elements.....	33
1.9	Construction and function.....	34
1.9.1	General description.....	34
1.9.2	Block diagram.....	34
1.9.3	Scope of delivery.....	35
1.9.4	Accessories.....	35
1.9.5	Options.....	35
1.9.6	The control panel (HMI).....	36
1.9.7	USB port.....	38
1.9.8	Ethernet port.....	38
1.9.9	Analog interface.....	39
1.9.10	Share Bus connection.....	39
1.9.11	Sense connector (remote sensing).....	39
1.9.12	GPIO port (optional).....	39

## 2 INSTALLATION & COMMISSIONING

2.1	Transport and storage.....	40
2.1.1	Transport.....	40
2.1.2	Packaging.....	40
2.1.3	Storage.....	40
2.2	Unpacking and visual check.....	40
2.3	Installation.....	40
2.3.1	Safety procedures before installation and use.....	40
2.3.2	Preparation.....	41
2.3.3	Installing the device.....	41
2.3.4	Connection to AC supply.....	42
2.3.5	Connection to DC loads.....	45

2.3.6	Connection of remote sensing.....	46
2.3.7	Grounding of the DC output.....	47
2.3.8	Connecting the "Share" bus.....	47
2.3.9	Connecting the analog interface.....	47
2.3.10	Connecting the USB port.....	47
2.3.11	Initial commission.....	48
2.3.12	Initial network setup.....	48
2.3.13	Commission after a firmware update or a long period of non-use.....	48

## 3 OPERATION AND APPLICATION

3.1	Important notes.....	49
3.1.1	Personal safety.....	49
3.1.2	General.....	49
3.2	Operating modes.....	49
3.2.1	Voltage regulation / Constant voltage.....	49
3.2.2	Current regulation / constant current / current limiting.....	49
3.2.3	Power regulation / constant power / power limiting.....	50
3.3	Alarm conditions.....	51
3.3.1	Power Fail.....	51
3.3.2	Overtemperature.....	51
3.3.3	Overvoltage.....	51
3.3.4	Overcurrent.....	51
3.3.5	Overpower.....	51
3.4	Manual operation.....	52
3.4.1	Switching the device on.....	52
3.4.2	Switching the device off.....	52
3.4.3	Configuration in the setup menu.....	52
3.4.4	Adjustment limits.....	57
3.4.5	Manual adjustment of set values.....	58
3.4.6	Switching the main screen view.....	58
3.4.7	The quick menu.....	59
3.4.8	Switching the DC output on or off.....	59
3.5	Remote control.....	60
3.5.1	General.....	60
3.5.2	Control locations.....	60
3.5.3	Remote control via a digital interface.....	60
3.5.4	Remote control via the analog interface (AI).....	61
3.6	Alarms and monitoring.....	65
3.6.1	Definition of terms.....	65
3.6.2	Device alarm handling.....	65
3.7	Control panel (HMI) lock.....	66
3.8	Loading and saving a user profile.....	67
3.9	Other applications.....	68
3.9.1	Parallel operation in Share bus mode.....	68
3.9.2	Series connection.....	69
3.9.3	Operation as battery charger.....	69
3.9.4	Two quadrants operation (2QO).....	70

## 4 SERVICE AND MAINTENANCE

4.1	Maintenance / cleaning.....	72
4.2	Fault finding / diagnosis / repair.....	72
4.2.1	Replacing a defect mains fuse .....	72
4.2.2	Firmware updates .....	73
4.3	Calibration (readjustment) .....	74
4.3.1	Preface .....	74
4.3.2	Preparation.....	74
4.3.3	Calibration procedure .....	74

## 5 CONTACT AND SUPPORT

5.1	General.....	76
5.2	Contact options .....	76

## 1. General

### 1.1 About this document

#### 1.1.1 Retention and use

This document is to be kept in the vicinity of the equipment for future reference and explanation of the operation of the device. This document is to be delivered and kept with the equipment in case of change of location and/or user.

#### 1.1.2 Copyright

Reprinting, copying, also partially, usage for other purposes as foreseen of this manual are forbidden and breach may lead to legal process.




#### 1.1.3 Validity

This manual is valid for the following equipment with colour TFT display, including derived variants.

Model	Article nr..	Model	Article nr..	Model	Article nr..
PS 9040-170 3U	06230250	PS 9080-340 3U	06230257	PS 9080-510 3U	06230264
PS 9080-170 3U	06230251	PS 9200-140 3U	06230258	PS 9200-210 3U	06230265
PS 9200-70 3U	06230252	PS 9360-80 3U	06230259	PS 9360-120 3U	06230266
PS 9360-40 3U	06230253	PS 9500-60 3U	06230260	PS 9500-90 3U	06230267
PS 9500-30 3U	06230254	PS 9750-40 3U	06230261	PS 9750-60 3U	06230268
PS 9750-20 3U	06230255	PS 91000-30 3U	06230262	PS 91000-40 3U	06230270
PS 9040-340 3U	06230256	PS 9040-510 3U	06230263	PS 91500-30 3U	06230269

#### 1.1.4 Explanation of symbols

Warning and safety notices as well as general notices in this document are shown in a box with a symbol as follows:

	<b>Symbol for a life threatening danger</b>
	Symbol for general safety notices (instructions and damage protection bans) or important information for operation
	<i>Symbol for general notices</i>

## 1.2 Warranty

EPS Stromversorgung guarantees the functional competence of the applied technology and the stated performance parameters. The warranty period begins with the delivery of free from defects equipment.

Terms of guarantee are included in the general terms and conditions (TOS) of EPS Stromversorgung.

## 1.3 Limitation of liability

All statements and instructions in this manual are based on current norms and regulations, up-to-date technology and our long term knowledge and experience. The manufacturer accepts no liability for losses due to:

- Usage for purposes other than designed
- Use by untrained personnel
- Rebuilding by the customer
- Technical changes
- Use of not authorized spare parts

The actual delivered device(s) may differ from the explanations and diagrams given here due to latest technical changes or due to customized models with the inclusion of additionally ordered options.

## 1.4 Disposal of equipment

A piece of equipment which is intended for disposal must, according to European laws and regulations (ElektroG, WEEE) be returned to the manufacturer for scrapping, unless the person operating the piece of equipment or another, delegated person is conducting the disposal. Our equipment falls under these regulations and is accordingly marked with the following symbol:



## 1.5 Product key

Decoding of the product description on the label, using an example:

**PS 9 080 - 510 3U zzz**

					Field for identification of installed options and/or special models <b>S01...S0x</b> = Special models <b>HS</b> = High Speed option installed <b>3W</b> = Option 3W installed (GPIB port instead of Ethernet port) <b>US208V</b> = 208 V model for US market
					Construction (not stated everywhere): <b>3U</b> = 19" frame with 3U
					Maximum current of the device in Ampere
					Maximum voltage of the device in Volt
					Series : <b>9</b> = Series 9000
					Type identification: <b>PS</b> = Power Supply, usually programmable

## 1.6 Intended usage

The equipment is intended to be used, if a power supply or battery charger, only as a variable voltage and current source, or, if an electronic load, only as a variable current sink.

Typical application for a power supply is DC supply to any relevant user, for a battery charger the charging of various battery types and for electronic loads the replacement of an ohmic resistor by an adjustable DC current sink in order to load relevant voltage and current sources of any type.



- Claims of any sort due to damage caused by non-intended usage will not be accepted.
- All damage caused by non-intended usage is solely the responsibility of the operator.

## 1.7 Safety

### 1.7.1 Safety notices

#### Mortal danger - Hazardous voltage



- Electrical equipment operation means that some parts can be under dangerous voltage. Therefore all parts under voltage must be covered! This basically applies to all models, though 40 V models according to SELV can not generate hazardous DC voltage!
- All work on connections must be carried out under zero voltage (output not connected to load) and may only be performed by qualified and informed persons. Improper actions can cause fatal injury as well as serious material damage!
- Never touch the contacts on DC output terminal directly after switching off the DC output, because there still can dangerous voltage present, sinking more or less slowly depending on the load! There also can be dangerous potential between negative DC output to PE or positive DC output to PE due to charged X capacitors, which don't discharge at all or only very slowly.
- Always follow 5 safety rules when working with electric devices:
  - Disconnect completely
  - Secure against reconnection
  - Verify that the system is dead
  - Carry out earthing and short-circuiting
  - Provide protection from adjacent live parts



- The equipment must only be used as intended
- The equipment is only approved for use within the connection limits stated on the product label.
- Do not insert any object, particularly metallic, through the ventilator slots
- Avoid any use of liquids near the equipment. Protect the device from wet, damp and condensation.
- For power supplies and battery chargers: do not connect users, particularly low resistance, to devices under power; sparking may occur which can cause burns as well as damage to the equipment and to the user.
- For electronic loads: do not connect power sources to equipment under power, sparking may occur which can cause burns as well as damage to the equipment and to the source.
- ESD regulations must be applied when plugging interface cards or modules into the relative slot
- Interface cards or modules may only be attached or removed after the device is switched off. It is not necessary to open the device.
- Do not connect external power sources with reversed polarity to DC input or outputs! The equipment will be damaged.
- For power supply devices: avoid where possible connecting external power sources to the DC output, and never those that can generate a higher voltage than the nominal voltage of the device.
- For electronic loads: do not connect a power source to the DC input which can generate a voltage more than 120% of the nominal input voltage of the load. The equipment is not protected against over voltage and may be irreparably damaged.
- Never insert a network cable which is connected to Ethernet or its components into the master-slave socket on the back side of the device!
- Always configure the various protecting features against overvoltage overpower etc. for sensitive loads to what the currently used application requires

### 1.7.2 Responsibility of the user

The equipment is in industrial operation. Therefore the operators are governed by the legal safety regulations. Alongside the warning and safety notices in this manual the relevant safety, accident prevention and environmental regulations must also be applied. In particular the users of the equipment:

- must be informed of the relevant job safety requirements
- must work to the defined responsibilities for operation, maintenance and cleaning of the equipment
- before starting work must have read and understood the operating manual
- must use the designated and recommended safety equipment.

### 1.7.3 Responsibility of the operator

Operator is any natural or legal person who uses the equipment or delegates the usage to a third party, and is responsible during its usage for the safety of the user, other personnel or third parties.

The equipment is in industrial operation. Therefore the operators are governed by the legal safety regulations. Alongside the warning and safety notices in this manual the relevant safety, accident prevention and environmental regulations must also be applied. In particular the operator has to

- be acquainted with the relevant job safety requirements
  - identify other possible dangers arising from the specific usage conditions at the work station via a risk assessment
  - introduce the necessary steps in the operating procedures for the local conditions
  - regularly control that the operating procedures are current
  - update the operating procedures where necessary to reflect changes in regulation, standards or operating conditions.
  - define clearly and unambiguously the responsibilities for operation, maintenance and cleaning of the equipment.
  - ensure that all employees who use the equipment have read and understood the manual. Furthermore the users are to be regularly schooled in working with the equipment and the possible dangers.
  - provide all personnel who work with the equipment with the designated and recommended safety equipment
- Furthermore, the operator is responsible for ensuring that the device is at all times technically fit for use.

### 1.7.4 User requirements

Any activity with equipment of this type may only be performed by persons who are able to work correctly and reliably and satisfy the requirements of the job.

- Persons whose reaction capability is negatively influenced by e.g. drugs, alcohol or medication may not operate the equipment.
- Age or job related regulations valid at the operating site must always be applied.



#### **Danger for unqualified users**

Improper operation can cause person or object damage. Only persons who have the necessary training, knowledge and experience may use the equipment.

**Delegated persons** are those who have been properly and demonstrably instructed in their tasks and the attendant dangers.

**Qualified persons** are those who are able through training, knowledge and experience as well as knowledge of the specific details to carry out all the required tasks, identify dangers and avoid personal and other risks.



### 1.7.5 Alarm signals

The equipment offers various possibilities for signalling alarm conditions, however, not for danger situations. The signals may be optical (on the display as text) acoustic (piezo buzzer) or electronic (pin/status output of an analog interface). All alarms will cause the device to switch off the DC output.

The meaning of the signals is as follows:

Signal <b>OT</b> (OverTemperature)	<ul style="list-style-type: none"> <li>• Overheating of the device</li> <li>• DC output will be switched off temporarily</li> <li>• Non-critical</li> </ul>
Signal <b>OVP</b> (OverVoltage)	<ul style="list-style-type: none"> <li>• Overvoltage shutdown of the DC output due to high voltage entering the device or generated by the device itself due to a defect</li> <li>• Critical! The device and/or the load could be damaged</li> </ul>
Signal <b>OC</b> (OverCurrent)	<ul style="list-style-type: none"> <li>• Shutdown of the DC output due to excess of the preset limit</li> <li>• Non-critical, protects the load from excessive current consumption</li> </ul>
Signal <b>OPP</b> (OverPower)	<ul style="list-style-type: none"> <li>• Shutdown of the DC output due to excess of the preset limit</li> <li>• Non-critical, protects the load from excessive power consumption</li> </ul>
Signal <b>PF</b> (Power Fail)	<ul style="list-style-type: none"> <li>• DC output shutdown due to AC undervoltage or defect of the AC input circuit</li> <li>• Critical on overvoltage! AC mains input circuit could take damage</li> </ul>

## 1.8 Technical data

### 1.8.1 Approved operating conditions

- Use only inside dry buildings
- Ambient temperature 0-50°C
- Operational altitude: max. 2000 m above sea level
- Maximum 80% humidity, non-condensing

### 1.8.2 General technical data

Display: Color TFT display, 480pt x 128pt

Controls: 2 rotary knobs with button function, 5 pushbuttons

The nominal values for the device determine the maximum adjustable ranges.

## 1.8.3 Specific technical data (EU models)

3.3 kW / 5 kW	Model EU				
	PS 9040-170	PS 9080-170	PS 9200-70	PS 9360-40	PS 9500-30
<b>AC Input</b>					
Voltage (L-L)	340...460 V AC, 45 - 65 Hz				
Input connection	2ph, PE	2ph, PE	2ph, PE	2ph, PE	2ph, PE
Input fuse (internal)	2x T16 A	2x T16 A	2x T16 A	2x T16 A	2x T16 A
Leak current	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA
Power factor	> 0.99	> 0.99	> 0.99	> 0.99	> 0.99
<b>DC Output</b>					
Max. output voltage $U_{Max}$	40 V	80 V	200 V	360 V	500 V
Max. output current $I_{Max}$	170 A	170 A	70 A	40 A	30 A
Max. output power $P_{Max}$	3.3 kW	5 kW	5 kW	5 kW	5 kW
Overvoltage protection range	0...44 V	0...88 V	0...220 V	0...396 V	0...550 V
Overcurrent protection range	0...187 A	0...187 A	0...77 A	0...44 A	0...33 A
Overpower protection range	0...3.63 kW	0...5.5 kW	0...5.5 kW	0...5.5 kW	0...5.5 kW
Temperature coefficient for set values $\Delta/K$	Voltage / current: 100 ppm				
Output capacitance (approx.)	8500 $\mu F$	8500 $\mu F$	2500 $\mu F$	400 $\mu F$	250 $\mu F$
<b>Voltage regulation</b>					
Adjustment range	0...40.8 V	0...81.6 V	0...204 V	0...367.2 V	0...510 V
Accuracy <sup>(1)</sup> (at $23 \pm 5^\circ C$ )	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$
Load regulation at 0...100% load	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$
Rise time 10...90%	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms
Settling time after load step	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 1.5 ms
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$
Ripple <sup>(2)</sup>	< 200 mV <sub>PP</sub> < 16 mV <sub>RMS</sub>	< 200 mV <sub>PP</sub> < 16 mV <sub>RMS</sub>	< 300 mV <sub>PP</sub> < 40 mV <sub>RMS</sub>	< 550 mV <sub>PP</sub> < 65 mV <sub>RMS</sub>	< 350 mV <sub>PP</sub> < 70 mV <sub>RMS</sub>
Remote sensing compensation	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$
Fall time at no load after switching DC output off	-	Down from 100% to <60 V: less than 10 s			
<b>Current regulation</b>					
Adjustment range	0...173.4 A	0...173.4 A	0...71.4 A	0...40.8 A	0...30.6 A
Accuracy <sup>(1)</sup> (at $23 \pm 5^\circ C$ )	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$
Load regulation at 0...100% $\Delta U_{OUT}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$
Ripple <sup>(2)</sup>	< 80 mA <sub>RMS</sub>	< 80 mA <sub>RMS</sub>	< 22 mA <sub>RMS</sub>	< 5.2 mA <sub>RMS</sub>	< 16 mA <sub>RMS</sub>
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$
<b>Power regulation</b>					
Adjustment range	0...3.36 kW	0...5.1 kW	0...5.1 kW	0...5.1 kW	0...5.1 kW
Accuracy <sup>(1)</sup> (at $23 \pm 5^\circ C$ )	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$
Load reg. at 10-90% $\Delta U_{OUT} \cdot \Delta I_{OUT}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.75\% P_{Max}$	$\leq 0.8\% P_{Max}$	$\leq 0.8\% P_{Max}$	$\leq 0.8\% P_{Max}$	$\leq 0.8\% P_{Max}$
Efficiency <sup>(3)</sup>	~ 93%	~ 93%	~ 95%	~ 95%	~ 95,5%

(1) Related to the nominal values, the accuracy defines the maximum deviation between an adjusted values and the true (actual) value.

Example: a 80 V model has min. 0.1% voltage accuracy, that is 80 mV. When adjusting the voltage to 5 V, the actual value is allowed to differ max. 80 mV, which means it might be between 4.92 V and 5.08 V.

(2) RMS value: LF 0...300 kHz, PP value: HF 0...20MHz

(3) Typical value at 100% output voltage and 100% power

(4) The display error adds to the error of the related actual value on the DC output

3.3 kW / 5 kW	Model EU				
	PS 9040-170	PS 9080-170	PS 9200-70	PS 9360-40	PS 9500-30
<b>Analog interface <sup>(1)</sup></b>					
Set value inputs	U, I, P	U, I, P	U, I, P	U, I, P	U, I, P
Actual value output	U, I	U, I	U, I	U, I	U, I
Control signals	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off
Status signals	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT
Galvanic isolation to the device	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC
Sample rate of inputs & outputs	500 Hz				
<b>Insulation</b>	Allowed float (potential shift) on the DC output:				
Negative terminal to PE Max.	±400 V DC	±400 V DC	±400 V DC	±400 V DC	±725 V DC
Positive terminal to PE Max.	±400 V DC	±400 V DC	±600 V DC	±600 V DC	±1000 V DC
<b>Miscellaneous</b>					
Cooling	Temperature controlled fans, front inlet, rear exhaust				
Ambient temperature	0..50°C				
Storage temperature	-20...70°C				
Humidity	< 80%, not condensing				
Standards	EN 61010 EMC TÜV approved acc. IEC 61000-6-2:2005 and IEC 61000-6-3:2006 Class B				
Overvoltage category	2				
Protection class	1				
Pollution degree	2				
Operational altitude	< 2000 m				
<b>Digital interfaces</b>					
Featured	1x USB-B, 1x Ethernet <sup>(2)</sup> , 1x GPIB (optional with option 3W)				
Galvanic isolation from device	Max. 1500 V DC				
USB specification	USB 2.0, socket type B, VCOM driver				
USB response time	SCPI: max. 2 ms, ModBus RTU: max. 2 ms				
Ethernet specification <sup>(2)</sup>	RJ45, 10/100Mbit, TCP/IP, ICMP, HTTP, DHCP				
Ethernet response time	SCPI: max. 7 ms, ModBus RTU: 9-17 ms				
GPIB specification (optional)	24 pin Centronics socket acc. IEEE-488, for standard GPIB cables				
GPIB response time	max. 5 ms				
<b>Terminals</b>					
Rear side	Share Bus, DC output, AC input, remote sensing, analog interface, USB-B, Ethernet				
<b>Dimensions</b>					
Enclosure (WxHxD)	19" x 3 U x 609 mm				
Total (WxHxD)	483 x 133 x 714 mm				
<b>Weight</b>	~ 17 kg	~ 17 kg	~ 17 kg	~ 17 kg	~ 17 kg
<b>Article number <sup>(3)</sup></b>	06230250	06230251	06230252	06230253	06230254

(1) For technical specifications of the analog interface see „3.5.4.4 Analog interface specification“ on page 62

(2) Only in the standard EU version

(3) Article number of the standard EU version, devices with options will have a different number

5 kW / 6.6 kW / 10 kW	Model EU				
	PS 9750-20	PS 9040-340	PS 9040-510	PS 9080-340	PS 9200-140
<b>AC Input</b>					
Voltage (L-L)	340...460 V AC, 45 - 65 Hz				
Input connection	2ph,PE	3ph,PE	3ph,PE	3ph,PE	3ph,PE
Input fuse (internal)	2x T16 A	4x T16 A	4x T16 A	4x T16 A	4x T16 A
Leak current	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA
Power factor	> 0.99	> 0.99	> 0.99	> 0.99	> 0.99
<b>DC Output</b>					
Max. output voltage $U_{Max}$	750 V	40 V	40 V	80 V	200 V
Max. output current $I_{Max}$	20 A	340 A	510 A	340 A	140 A
Max. output power $P_{Max}$	5 kW	6.6 kW	10 kW	10 kW	10 kW
Overvoltage protection range	0...825 V	0...44 V	0...44 V	0...88 V	0...220 V
Overcurrent protection range	0...22 A	0...374 A	0...561 A	0...374 A	0...154 A
Overpower protection range	0...5.5 kW	0...7.26 kW	0...11 kW	0...11 kW	0...11 kW
Temperature coefficient for set values $\Delta/K$	Voltage / current: 100 ppm				
Output capacitance (approx.)	100 $\mu$ F	16900 $\mu$ F	25380 $\mu$ F	16900 $\mu$ F	5040 $\mu$ F
<b>Voltage regulation</b>					
Adjustment range	0...765 V	0...40.8 V	0...40.8 V	0...81.6 V	0...204 V
Accuracy <sup>(1)</sup>	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$
Load regulation at 0...100% load	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$
Rise time 10...90%	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms
Settling time after load step	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 1.5 ms
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$
Ripple <sup>(2)</sup>	< 800 mV <sub>PP</sub> < 200 mV <sub>RMS</sub>	< 320 mV <sub>PP</sub> < 25 mV <sub>RMS</sub>	< 320 mV <sub>PP</sub> < 25 mV <sub>RMS</sub>	< 320 mV <sub>PP</sub> < 25 mV <sub>RMS</sub>	< 300 mV <sub>PP</sub> < 40 mV <sub>RMS</sub>
Remote sensing compensation	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$
Fall time at no load after switching DC output off	Down from 100% to <60 V: less than 10 s	-	-	Down from 100% to <60 V: less than 10 s	Down from 100% to <60 V: less than 10 s
<b>Current regulation</b>					
Adjustment range	0...20.4 A	0...346.8 A	0...520.2 A	0...346.8 A	0...142.8 A
Accuracy <sup>(1)</sup>	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$
Load regulation at 0...100% $\Delta U_{OUT}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$
Ripple <sup>(2)</sup>	< 16 mA <sub>RMS</sub>	< 160 mA <sub>RMS</sub>	< 120 mA <sub>RMS</sub>	< 160 mA <sub>RMS</sub>	< 44 mA <sub>RMS</sub>
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$
<b>Power regulation</b>					
Adjustment range	0...5.1 kW	0...6.72 kW	0...10.2 kW	0...10.2 kW	0...10.2 kW
Accuracy <sup>(1)</sup>	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$
Load reg. at 10-90% $\Delta U_{OUT} * \Delta I_{OUT}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.8\% P_{Max}$	$\leq 0.7\% P_{Max}$	$\leq 0.7\% P_{Max}$	$\leq 0.8\% P_{Max}$	$\leq 0.85\% P_{Max}$
Efficiency <sup>(3)</sup>	~ 94%	~ 93%	~ 93%	~ 93%	~ 95%

(1) Related to the nominal values, the accuracy defines the maximum deviation between an adjusted values and the true (actual) value.

Example: a 80 V model has min. 0.1% voltage accuracy, that is 80 mV. When adjusting the voltage to 5 V, the actual value is allowed to differ max. 80 mV, which means it might be between 4.92 V and 5.08 V.

(2) RMS value: LF 0...300 kHz, PP value: HF 0...20MHz

(3) Typical value at 100% output voltage and 100% power

(4) The display error adds to the error of the related actual value on the DC output

5 kW / 6.6 kW / 10 kW	Model EU				
	PS 9750-20	PS 9040-340	PS 9040-510	PS 9080-340	PS 9200-140
<b>Analog interface <sup>(1)</sup></b>					
Set value inputs	U, I, P	U, I, P	U, I, P	U, I, P	U, I, P
Actual value output	U, I	U, I	U, I	U, I	U, I
Control signals	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off
Status signals	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT
Galvanic isolation to the device	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC
Sample rate of inputs & outputs	500 Hz				
<b>Insulation</b>	Allowed float (potential shift) on the DC output:				
Negative terminal to PE      Max.	±725 V DC	±400 V DC	±400 V DC	±400 V DC	±400 V DC
Positive terminal to PE      Max.	±1000 V DC	±400 V DC	±400 V DC	±400 V DC	±600 V DC
<b>Miscellaneous</b>					
Cooling	Temperature controlled fans, front inlet, rear exhaust				
Ambient temperature	0..50°C				
Storage temperature	-20...70°C				
Humidity	< 80%, not condensing				
Standards	EN 61010 EMC TÜV approved acc. IEC 61000-6-2:2005 and IEC 61000-6-3:2006 Class B				
Overvoltage category	2				
Protection class	1				
Pollution degree	2				
Operational altitude	< 2000 m				
<b>Digital interfaces</b>					
Featured	1x USB-B, 1x Ethernet <sup>(2)</sup> , 1x GPIB (optional with option 3W)				
Galvanic isolation from device	Max. 1500 V DC				
USB specification	USB 2.0, socket type B, VCOM driver				
USB response time	SCPI: max. 2 ms, ModBus RTU: max. 2 ms				
Ethernet specification <sup>(2)</sup>	RJ45, 10/100Mbit, TCP/IP, ICMP, HTTP, DHCP				
Ethernet response time	SCPI: max. 7 ms, ModBus RTU: 9-17 ms				
GPIB specification (optional)	24 pin Centronics socket acc. IEEE-488, for standard GPIB cables				
GPIB response time	max. 5 ms				
<b>Terminals</b>					
Rear side	Share Bus, DC output, AC input, remote sensing, analog interface, USB-B, Ethernet				
<b>Dimensions</b>					
Enclosure (WxHxD)	19" x 3 U x 609 mm				
Total (WxHxD)	483 x 133 x 714 mm				
<b>Weight</b>	~ 17 kg	~ 24 kg	~ 30 kg	~ 24 kg	~ 24 kg
<b>Article number <sup>(3)</sup></b>	06230255	06230256	06230263	06230257	06230258

(1) For technical specifications of the analog interface see „3.5.4.4 Analog interface specification“ on page 62

(2) Only in the standard EU version

(3) Article number of the standard EU version, devices with options will have a different number

10 kW / 15 kW	Model EU				
	PS 9360-80	PS 9500-60	PS 9750-40	PS 91000-30	PS 9080-510
<b>AC Input</b>					
Voltage (L-L)	340...460 V AC, 45 - 65 Hz				
Input connection	3ph,PE	3ph,PE	3ph,PE	3ph,PE	3ph,PE
Input fuse (internal)	4x T16 A	4x T16 A	4x T16 A	4x T16 A	6x T16 A
Leak current	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA
Power factor	> 0.99	> 0.99	> 0.99	> 0.99	> 0.99
<b>DC Output</b>					
Max. output voltage $U_{Max}$	360 V	500 V	750 V	1000 V	80 V
Max. output current $I_{Max}$	80 A	60 A	40 A	30 A	510 A
Max. output power $P_{Max}$	10 kW	10 kW	10 kW	10 kW	15 kW
Overvoltage protection range	0...396 V	0...550 V	0...825 V	0...1100 V	0...88 V
Overcurrent protection range	0...88 A	0...66 A	0...44 A	0...33 A	0...561 A
Overpower protection range	0...11 kW	0...11 kW	0...11 kW	0...11 kW	0...16.5 kW
Temperature coefficient for set values $\Delta/K$	Voltage / current: 100 ppm				
Output capacitance (approx.)	800 $\mu$ F	500 $\mu$ F	210 $\mu$ F	127 $\mu$ F	25380 $\mu$ F
<b>Voltage regulation</b>					
Adjustment range	0...367.2 V	0...510 V	0...765 V	0...1020 V	0...81.6 V
Accuracy <sup>(1)</sup>	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$
Load regulation at 0...100% load	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$
Rise time 10...90%	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms
Settling time after load step	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 2 ms
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$
Ripple <sup>(2)</sup>	< 550 mV <sub>PP</sub> < 65 mV <sub>RMS</sub>	< 350 mV <sub>PP</sub> < 70 mV <sub>RMS</sub>	< 800 mV <sub>PP</sub> < 200 mV <sub>RMS</sub>	< 1600 mV <sub>PP</sub> < 350 mV <sub>RMS</sub>	< 320 mV <sub>PP</sub> < 25 mV <sub>RMS</sub>
Remote sensing compensation	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$
Fall time at no load after switching DC output off	Down from 100% to <60 V: less than 10 s				
<b>Current regulation</b>					
Adjustment range	0...81.6 A	0...61.2 A	0...40.8 A	0...30.6 A	0...520.2 A
Accuracy <sup>(1)</sup>	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$
Load regulation at 0...100% $\Delta U_{OUT}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$
Ripple <sup>(2)</sup>	< 10.4 mA <sub>RMS</sub>	< 32 mA <sub>RMS</sub>	< 32 mA <sub>RMS</sub>	< 22 mA <sub>RMS</sub>	< 240 mA <sub>RMS</sub>
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$
<b>Power regulation</b>					
Adjustment range	0...10.2 kW	0...10.2 kW	0...10.2 kW	0...10.2 kW	0...15.3 kW
Accuracy <sup>(1)</sup>	< 1.2% $P_{Max}$	< 1.2% $P_{Max}$	< 1.2% $P_{Max}$	< 1.2% $P_{Max}$	< 1.2% $P_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$
Load reg. at 10-90% $\Delta U_{OUT} \cdot \Delta I_{OUT}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.8\% P_{Max}$	$\leq 0.85\% P_{Max}$	$\leq 0.85\% P_{Max}$	$\leq 0.85\% P_{Max}$	$\leq 0.8\% P_{Max}$
Efficiency <sup>(3)</sup>	~ 93%	~ 95%	~ 94%	~ 95%	~ 93%

(1) Related to the nominal values, the accuracy defines the maximum deviation between an adjusted values and the true (actual) value.

Example: a 80 V model has min. 0.1% voltage accuracy, that is 80 mV. When adjusting the voltage to 5 V, the actual value is allowed to differ max. 80 mV, which means it might be between 4.92 V and 5.08 V.

(2) RMS value: LF 0...300 kHz, PP value: HF 0...20MHz

(3) Typical value at 100% output voltage and 100% power

(4) The display error adds to the error of the related actual value on the DC output

10 kW / 15 kW	Model EU				
	PS 9360-80	PS 9500-60	PS 9750-40	PS 91000-30	PS 9080-510
<b>Analog interface <sup>(1)</sup></b>					
Set value inputs	U, I, P	U, I, P	U, I, P	U, I, P	U, I, P
Actual value output	U, I	U, I	U, I	U, I	U, I
Control signals	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off
Status signals	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT
Galvanic isolation to the device	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC
Sample rate of inputs & outputs	500 Hz				
<b>Insulation</b>	Allowed float (potential shift) on the DC output:				
Negative terminal to PE Max.	±400 V DC	±725 V DC	±725 V DC	±1000 V DC	±400 V DC
Positive terminal to PE Max.	±600 V DC	±1000 V DC	±1000 V DC	±1500 V DC	±400 V DC
<b>Miscellaneous</b>					
Cooling	Temperature controlled fans, front inlet, rear exhaust				
Ambient temperature	0..50°C				
Storage temperature	-20...70°C				
Humidity	< 80%, not condensing				
Standards	EN 61010 EMC TÜV approved acc. IEC 61000-6-2:2005 and IEC 61000-6-3:2006 Class B				
Overvoltage category	2				
Protection class	1				
Pollution degree	2				
Operational altitude	< 2000 m				
<b>Digital interfaces</b>					
Featured	1x USB-B, 1x Ethernet <sup>(2)</sup> , 1x GPIB (optional with option 3W)				
Galvanic isolation from device	Max. 1500 V DC				
USB specification	USB 2.0, socket type B, VCOM driver				
USB response time	SCPI: max. 2 ms, ModBus RTU: max. 2 ms				
Ethernet specification <sup>(2)</sup>	RJ45, 10/100Mbit, TCP/IP, ICMP, HTTP, DHCP				
Ethernet response time	SCPI: max. 7 ms, ModBus RTU: 9-17 ms				
GPIB specification (optional)	24 pin Centronics socket acc. IEEE-488, for standard GPIB cables				
GPIB response time	max. 5 ms				
<b>Terminals</b>					
Rear side	Share Bus, DC output, AC input, remote sensing, analog interface, USB-B, Ethernet				
<b>Dimensions</b>					
Enclosure (WxHxD)	19" x 3 U x 609 mm				
Total (WxHxD)	483 x 133 x 714 mm				
<b>Weight</b>	~ 24 kg	~ 24 kg	~ 24 kg	~ 24 kg	~ 30 kg
<b>Article number <sup>(3)</sup></b>	06230259	06230260	06230261	06230262	06230264

(1) For technical specifications of the analog interface see „3.5.4.4 Analog interface specification“ on page 62

(2) Only in the standard EU version

(3) Article number of the standard EU version, devices with options will have a different number



15 kW	Model EU		
	PS 9200-210	PS 9360-120	PS 9500-90
<b>AC Input</b>			
Voltage (L-L)	340...460 V AC, 45 - 65 Hz		
Input connection	3ph,PE	3ph,PE	3ph,PE
Input fuse (internal)	6x T16 A	6x T16 A	6x T16 A
Leak current	< 3.5 mA	< 3.5 mA	< 3.5 mA
Power factor	> 0.99	> 0.99	> 0.99
<b>DC Output</b>			
Max. output voltage $U_{Max}$	200 V	360 V	500 V
Max. output current $I_{Max}$	210 A	120 A	90 A
Max. output power $P_{Max}$	15 kW	15 kW	15 kW
Overvoltage protection range	0...220 V	0...396 V	0...550 V
Overcurrent protection range	0...231 A	0...132 A	0...99 A
Overpower protection range	0...16.5 kW	0...16.5 kW	0...16.5 kW
Temperature coefficient for set values $\Delta/K$	Voltage / current: 100 ppm		
Output capacitance (approx.)	7560 $\mu$ F	1200 $\mu$ F	760 $\mu$ F
<b>Voltage regulation</b>			
Adjustment range	0...204 V	0...367.2 V	0...510 V
Accuracy <sup>(1)</sup>	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$
Load regulation at 0...100% load	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$
Rise time 10...90%	Max. 30 ms	Max. 30 ms	Max. 30 ms
Settling time after load step	< 2 ms	< 2 ms	< 2 ms
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$
Ripple <sup>(2)</sup>	< 300 mV <sub>PP</sub> < 40 mV <sub>RMS</sub>	< 550 mV <sub>PP</sub> < 65 mV <sub>RMS</sub>	< 350 mV <sub>PP</sub> < 70 mV <sub>RMS</sub>
Remote sensing compensation	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$
Fall time at no load after switching DC output off	Down from 100% to <60 V: less than 10 s		
<b>Current regulation</b>			
Adjustment range	0...214.2 A	0...122.4 A	0...91.8 A
Accuracy <sup>(1)</sup>	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$
Load regulation at 0...100% $\Delta U_{OUT}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$
Ripple <sup>(2)</sup>	< 66 mA <sub>RMS</sub>	< 15.6 mA <sub>RMS</sub>	< 48 mA <sub>RMS</sub>
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$
<b>Power regulation</b>			
Adjustment range	0...15.3 kW	0...15.3 kW	0...15.3 kW
Accuracy <sup>(1)</sup>	< 1% $P_{Max}$	< 1.2% $P_{Max}$	< 1.2% $P_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$
Load reg. at 10-90% $\Delta U_{OUT} \cdot \Delta I_{OUT}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.8\% P_{Max}$	$\leq 0.85\% P_{Max}$	$\leq 0.85\% P_{Max}$
Efficiency <sup>(3)</sup>	~ 95%	~ 94%	~ 95%

(1) Related to the nominal values, the accuracy defines the maximum deviation between an adjusted values and the true (actual) value.

Example: a 80 V model has min. 0.1% voltage accuracy, that is 80 mV. When adjusting the voltage to 5 V, the actual value is allowed to differ max. 80 mV, which means it might be between 4.92 V and 5.08 V.

(2) RMS value: LF 0...300 kHz, PP value: HF 0...20MHz

(3) Typical value at 100% output voltage and 100% power

(4) The display error adds to the error of the related actual value on the DC output



15 kW	Model EU		
	PS 9200-210	PS 9360-120	PS 9500-90
<b>Analog interface <sup>(1)</sup></b>			
Set value inputs	U, I, P	U, I, P	U, I, P
Actual value output	U, I	U, I	U, I
Control signals	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off
Status signals	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT
Galvanic isolation to the device	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC
Sample rate of inputs & outputs	500 Hz		
<b>Insulation</b>	Allowed float (potential shift) on the DC output:		
Negative terminal to PE Max.	±400 V DC	±400 V DC	±725 V DC
Positive terminal to PE Max.	±600 V DC	±600 V DC	±1000 V DC
<b>Miscellaneous</b>			
Cooling	Temperature controlled fans, front inlet, rear exhaust		
Ambient temperature	0..50°C		
Storage temperature	-20...70°C		
Humidity	< 80%, not condensing		
Standards	EN 61010 EMC TÜV approved acc. IEC 61000-6-2:2005 and IEC 61000-6-3:2006 Class B		
Overvoltage category	2		
Protection class	1		
Pollution degree	2		
Operational altitude	< 2000 m		
<b>Digital interfaces</b>			
Featured	1x USB-B, 1x Ethernet <sup>(2)</sup> , 1x GPIB (optional with option 3W)		
Galvanic isolation from device	Max. 1500 V DC		
USB specification	USB 2.0, socket type B, VCOM driver		
USB response time	SCPI: max. 2 ms, ModBus RTU: max. 2 ms		
Ethernet specification <sup>(2)</sup>	RJ45, 10/100Mbit, TCP/IP, ICMP, HTTP, DHCP		
Ethernet response time	SCPI: max. 7 ms, ModBus RTU: 9-17 ms		
GPIB specification (optional)	24 pin Centronics socket acc. IEEE-488, for standard GPIB cables		
GPIB response time	max. 5 ms		
<b>Terminals</b>			
Rear side	Share Bus, DC output, AC input, remote sensing, analog interface, USB-B, Ethernet		
<b>Dimensions</b>			
Enclosure (WxHxD)	19" x 3 U x 609 mm		
Total (WxHxD)	483 x 133 x 714 mm		
<b>Weight</b>	~ 30 kg	~ 30 kg	~ 30 kg
<b>Article number <sup>(3)</sup></b>	06230265	06230266	06230267

(1) For technical specifications of the analog interface see „3.5.4.4 Analog interface specification“ on page 62

(2) Only in the standard EU version

(3) Article number of the standard EU version, devices with options will have a different number

15 kW	Model EU		
	PS 9750-60	PS 91000-40	PS 91500-30
<b>AC Input</b>			
Voltage (L-L)	340...460 V AC, 45 - 65 Hz		
Input connection	3ph,PE	3ph,PE	3ph,PE
Input fuse (internal)	6x T16 A	6x T16 A	6x T16 A
Leak current	< 3.5 mA	< 3.5 mA	< 3.5 mA
Power factor	> 0.99	> 0.99	> 0.99
<b>DC Output</b>			
Max. output voltage $U_{Max}$	750 V	1000 V	1500 V
Max. output current $I_{Max}$	60 A	40 A	30 A
Max. output power $P_{Max}$	15 kW	15 kW	15 kW
Overvoltage protection range	0...825 V	0...1100 V	0...1650 V
Overcurrent protection range	0...66 A	0...44 A	0...33 A
Overpower protection range	0...16.5 kW	0...16.5 kW	0...16.5 kW
Temperature coefficient for set values $\Delta/K$	Voltage / current: 100 ppm		
Output capacitance (approx.)	310 $\mu$ F	133 $\mu$ F	84 $\mu$ F
<b>Voltage regulation</b>			
Adjustment range	0...765 V	0...1020 V	0...1530 V
Accuracy <sup>(1)</sup>	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$
Load regulation at 0...100% load	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$
Rise time 10...90%	Max. 30 ms	Max. 30 ms	Max. 30 ms
Settling time after load step	< 2 ms	< 2 ms	< 2 ms
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$
Ripple <sup>(2)</sup>	< 800 mV <sub>PP</sub> < 200 mV <sub>RMS</sub>	< 2000 mV <sub>PP</sub> < 300 mV <sub>RMS</sub>	< 2400 mV <sub>PP</sub> < 400 mV <sub>RMS</sub>
Remote sensing compensation	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$
Fall time at no load after switching DC output off	Down from 100% to <60 V: less than 10 s		
<b>Current regulation</b>			
Adjustment range	0...61.2 A	0...40.8 A	0...30.6 A
Accuracy <sup>(1)</sup>	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$
Load regulation at 0...100% $\Delta U_{OUT}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$
Ripple <sup>(2)</sup>	< 48 mA <sub>RMS</sub>	< 10 mA <sub>RMS</sub>	< 26 mA <sub>RMS</sub>
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$
<b>Power regulation</b>			
Adjustment range	0...15.3 kW	0...15.3 kW	0...15.3 kW
Accuracy <sup>(1)</sup>	< 1.2% $P_{Max}$	< 1% $P_{Max}$	< 1.2% $P_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$
Load reg. at 10-90% $\Delta U_{OUT} \cdot \Delta I_{OUT}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.85\% P_{Max}$	$\leq 0.85\% P_{Max}$	$\leq 0.85\% P_{Max}$
Efficiency <sup>(3)</sup>	~ 94%	~ 94%	~ 95%

(1) Related to the nominal values, the accuracy defines the maximum deviation between an adjusted values and the true (actual) value.

Example: a 80 V model has min. 0.1% voltage accuracy, that is 80 mV. When adjusting the voltage to 5 V, the actual value is allowed to differ max. 80 mV, which means it might be between 4.92 V and 5.08 V.

(2) RMS value: LF 0...300 kHz, PP value: HF 0...20MHz

(3) Typical value at 100% output voltage and 100% power

(4) The display error adds to the error of the related actual value on the DC output

15 kW	Model EU		
	PS 9750-60	PS 91000-40	PS 91500-30
<b>Analog interface <sup>(1)</sup></b>			
Set value inputs	U, I, P	U, I, P	U, I, P
Actual value output	U, I	U, I	U, I
Control signals	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off
Status signals	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT
Galvanic isolation to the device	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC
Sample rate of inputs & outputs	500 Hz		
<b>Insulation</b>	Allowed float (potential shift) on the DC output:		
Negative terminal to PE Max.	±725 V DC	±725 V DC	±1500 V DC
Positive terminal to PE Max.	±1000 V DC	±1000 V DC	±1800 V DC
<b>Miscellaneous</b>			
Cooling	Temperature controlled fans, front inlet, rear exhaust		
Ambient temperature	0..50°C		
Storage temperature	-20...70°C		
Humidity	< 80%, not condensing		
Standards	EN 61010 EMC TÜV approved acc. IEC 61000-6-2:2005 and IEC 61000-6-3:2006 Class B		
Overvoltage category	2		
Protection class	1		
Pollution degree	2		
Operational altitude	< 2000 m		
<b>Digital interfaces</b>			
Featured	1x USB-B, 1x Ethernet <sup>(2)</sup> , 1x GPIB (optional with option 3W)		
Galvanic isolation from device	Max. 1500 V DC		
USB specification	USB 2.0, socket type B, VCOM driver		
USB response time	SCPI: max. 2 ms, ModBus RTU: max. 2 ms		
Ethernet specification <sup>(2)</sup>	RJ45, 10/100Mbit, TCP/IP, ICMP, HTTP, DHCP		
Ethernet response time	SCPI: max. 7 ms, ModBus RTU: 9-17 ms		
GPIB specification (optional)	24 pin Centronics socket acc. IEEE-488, for standard GPIB cables		
GPIB response time	max. 5 ms		
<b>Terminals</b>			
Rear side	Share Bus, DC output, AC input, remote sensing, analog interface, USB-B, Ethernet		
<b>Dimensions</b>			
Enclosure (WxHxD)	19" x 3 U x 609 mm		
Total (WxHxD)	483 x 133 x 714 mm		
<b>Weight</b>	~ 30 kg	~ 30 kg	~ 30 kg
<b>Article number <sup>(3)</sup></b>	06230268	06230270	06230269

(1) For technical specifications of the analog interface see „3.5.4.4 Analog interface specification“ on page 62

(2) Only in the standard EU version

(3) Article number of the standard EU version, devices with options will have a different number

## 1.8.4 Specific technical data (US models)

3.3 kW / 5 kW	Model US				
	PS 9040-170	PS 9080-170	PS 9200-70	PS 9360-40	PS 9500-30
<b>AC Input</b>					
Voltage (L-L)	208 V, $\pm 10\%$ , 45 - 65 Hz				
Input connection	2ph, PE	2ph, PE	2ph, PE	2ph, PE	2ph, PE
Input fuse (internal)	2x T16 A	2x T16 A	2x T16 A	2x T16 A	2x T16 A
Leak current	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA
Power factor	> 0.99	> 0.99	> 0.99	> 0.99	> 0.99
<b>DC Output</b>					
Max. output voltage $U_{Max}$	40 V	80 V	200 V	360 V	500 V
Max. output current $I_{Max}$	170 A	170 A	70 A	40 A	30 A
Max. output power $P_{Max}$	3.3 kW	5 kW	5 kW	5 kW	5 kW
Overvoltage protection range	0...44 V	0...88 V	0...220 V	0...396 V	0...550 V
Overcurrent protection range	0...187 A	0...187 A	0...77 A	0...44 A	0...33 A
Overpower protection range	0...3.63 kW	0...5.5 kW	0...5.5 kW	0...5.5 kW	0...5.5 kW
Temperature coefficient for set values $\Delta/K$	Voltage / current: 100 ppm				
Output capacitance (approx.)	8500 $\mu F$	8500 $\mu F$	2500 $\mu F$	400 $\mu F$	250 $\mu F$
<b>Voltage regulation</b>					
Adjustment range	0...40.8 V	0...81.6 V	0...204 V	0...367.2 V	0...510 V
Accuracy <sup>(1)</sup> (at $23 \pm 5^\circ C$ )	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$
Load regulation at 0...100% load	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$
Rise time 10...90%	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms
Settling time after load step	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 1.5 ms
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$
Ripple <sup>(2)</sup>	< 200 mV <sub>PP</sub> < 16 mV <sub>RMS</sub>	< 200 mV <sub>PP</sub> < 16 mV <sub>RMS</sub>	< 300 mV <sub>PP</sub> < 40 mV <sub>RMS</sub>	< 550 mV <sub>PP</sub> < 65 mV <sub>RMS</sub>	< 350 mV <sub>PP</sub> < 70 mV <sub>RMS</sub>
Remote sensing compensation	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$
Fall time at no load after switching DC output off	-	Down from 100% to <60 V: less than 10 s			
<b>Current regulation</b>					
Adjustment range	0...173.4 A	0...173.4 A	0...71.4 A	0...40.8 A	0...30.6 A
Accuracy <sup>(1)</sup> (at $23 \pm 5^\circ C$ )	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$
Load regulation at 0...100% $\Delta U_{OUT}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$
Ripple <sup>(2)</sup>	< 80 mA <sub>RMS</sub>	< 80 mA <sub>RMS</sub>	< 22 mA <sub>RMS</sub>	< 5.2 mA <sub>RMS</sub>	< 16 mA <sub>RMS</sub>
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$
<b>Power regulation</b>					
Adjustment range	0...3.36 kW	0...5.1 kW	0...5.1 kW	0...5.1 kW	0...5.1 kW
Accuracy <sup>(1)</sup> (at $23 \pm 5^\circ C$ )	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$
Load reg. at 10-90% $\Delta U_{OUT} \cdot \Delta I_{OUT}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.75\% P_{Max}$	$\leq 0.8\% P_{Max}$	$\leq 0.8\% P_{Max}$	$\leq 0.8\% P_{Max}$	$\leq 0.8\% P_{Max}$
Efficiency <sup>(3)</sup>	~ 93%	~ 93%	~ 95%	~ 95%	~ 95,5%

(1) Related to the nominal values, the accuracy defines the maximum deviation between an adjusted values and the true (actual) value.

Example: a 80 V model has min. 0.1% voltage accuracy, that is 80 mV. When adjusting the voltage to 5 V, the actual value is allowed to differ max. 80 mV, which means it might be between 4.92 V and 5.08 V.

(2) RMS value: LF 0...300 kHz, PP value: HF 0...20MHz

(3) Typical value at 100% output voltage and 100% power

(4) The display error adds to the error of the related actual value on the DC output

3.3 kW / 5 kW	Model US				
	PS 9040-170	PS 9080-170	PS 9200-70	PS 9360-40	PS 9500-30
<b>Analog interface <sup>(1)</sup></b>					
Set value inputs	U, I, P	U, I, P	U, I, P	U, I, P	U, I, P
Actual value output	U, I	U, I	U, I	U, I	U, I
Control signals	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off
Status signals	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT
Galvanic isolation to the device	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC
Sample rate of inputs & outputs	500 Hz				
<b>Insulation</b>	Allowed float (potential shift) on the DC output:				
Negative terminal to PE Max.	±400 V DC	±400 V DC	±400 V DC	±400 V DC	±725 V DC
Positive terminal to PE Max.	+400 V DC	+400 V DC	+600 V DC	+600 V DC	+1000 V DC
<b>Miscellaneous</b>					
Cooling	Temperature controlled fans, front inlet, rear exhaust				
Ambient temperature	0..50°C				
Storage temperature	-20...70°C				
Humidity	< 80%, not condensing				
Standards	EN 61010 EMC TÜV approved acc. IEC 61000-6-2:2005 and IEC 61000-6-3:2006 Class B				
Overvoltage category	2				
Protection class	1				
Pollution degree	2				
Operational altitude	< 2000 m				
<b>Digital interfaces</b>					
Featured	1x USB-B, 1x Ethernet <sup>(2)</sup> , 1x GPIB (optional with option 3W)				
Galvanic isolation from device	Max. 1500 V DC				
USB specification	USB 2.0, socket type B, VCOM driver				
USB response time	SCPI: max. 2 ms, ModBus RTU: max. 2 ms				
Ethernet specification <sup>(2)</sup>	RJ45, 10/100Mbit, TCP/IP, ICMP, HTTP, DHCP				
Ethernet response time	SCPI: max. 7 ms, ModBus RTU: 9-17 ms				
GPIB specification (optional)	24 pin Centronics socket acc. IEEE-488, for standard GPIB cables				
GPIB response time	max. 5 ms				
<b>Terminals</b>					
Rear side	Share Bus, DC output, AC input, remote sensing, analog interface, USB-B, Ethernet				
<b>Dimensions</b>					
Enclosure (WxHxD)	19" x 3 U x 670 mm				
Total (WxHxD)	483 x 133 x 775 mm				
<b>Weight</b>	~ 17 kg	~ 17 kg	~ 17 kg	~ 17 kg	~ 17 kg
<b>Article number <sup>(3)</sup></b>	06238250	06238251	06238252	06238253	06238254

(1) For technical specifications of the analog interface see „3.5.4.4 Analog interface specification“ on page 62

(2) Only in the standard US version

(3) Article number of the standard US version, devices with options will have a different number

5 kW / 6.6 kW / 10 kW	Model US				
	PS 9750-20	PS 9040-340	PS 9040-510	PS 9080-340	PS 9200-140
<b>AC Input</b>					
Voltage (L-L)	208 V, $\pm 10\%$ , 45 - 65 Hz				
Input connection	2ph,PE	3ph,PE	3ph,PE	3ph,PE	3ph,PE
Input fuse (internal)	2x T16 A	4x T16 A	4x T16 A	4x T16 A	4x T16 A
Leak current	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA
Power factor	> 0.99	> 0.99	> 0.99	> 0.99	> 0.99
<b>DC Output</b>					
Max. output voltage $U_{Max}$	750 V	40 V	40 V	80 V	200 V
Max. output current $I_{Max}$	20 A	340 A	510 A	340 A	140 A
Max. output power $P_{Max}$	5 kW	6.6 kW	10 kW	10 kW	10 kW
Overvoltage protection range	0...825 V	0...44 V	0...44 V	0...88 V	0...220 V
Overcurrent protection range	0...22 A	0...374 A	0...561 A	0...374 A	0...154 A
Overpower protection range	0...5.5 kW	0...7.26 kW	0...11 kW	0...11 kW	0...11 kW
Temperature coefficient for set values $\Delta/K$	Voltage / current: 100 ppm				
Output capacitance (approx.)	100 $\mu$ F	16900 $\mu$ F	25380 $\mu$ F	16900 $\mu$ F	5040 $\mu$ F
<b>Voltage regulation</b>					
Adjustment range	0...765 V	0...40.8 V	0...40.8 V	0...81.6 V	0...204 V
Accuracy <sup>(1)</sup>	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$
Load regulation at 0...100% load	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$
Rise time 10...90%	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms
Settling time after load step	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 1.5 ms
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$
Ripple <sup>(2)</sup>	< 800 mV <sub>PP</sub> < 200 mV <sub>RMS</sub>	< 320 mV <sub>PP</sub> < 25 mV <sub>RMS</sub>	< 320 mV <sub>PP</sub> < 25 mV <sub>RMS</sub>	< 320 mV <sub>PP</sub> < 25 mV <sub>RMS</sub>	< 300 mV <sub>PP</sub> < 40 mV <sub>RMS</sub>
Remote sensing compensation	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$
Fall time at no load after switching DC output off	Down from 100% to <60 V: less than 10 s	-	-	Down from 100% to <60 V: less than 10 s	Down from 100% to <60 V: less than 10 s
<b>Current regulation</b>					
Adjustment range	0...20.4 A	0...346.8 A	0...520.2 A	0...346.8 A	0...142.8 A
Accuracy <sup>(1)</sup>	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$
Load regulation at 0...100% $\Delta U_{OUT}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$
Ripple <sup>(2)</sup>	< 16 mA <sub>RMS</sub>	< 160 mA <sub>RMS</sub>	< 120 mA <sub>RMS</sub>	< 160 mA <sub>RMS</sub>	< 44 mA <sub>RMS</sub>
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$
<b>Power regulation</b>					
Adjustment range	0...5.1 kW	0...6.72 kW	0...10.2 kW	0...10.2 kW	0...10.2 kW
Accuracy <sup>(1)</sup>	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$	< 1% $P_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$
Load reg. at 10-90% $\Delta U_{OUT} * \Delta I_{OUT}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.8\% P_{Max}$	$\leq 0.7\% P_{Max}$	$\leq 0.7\% P_{Max}$	$\leq 0.8\% P_{Max}$	$\leq 0.85\% P_{Max}$
Efficiency <sup>(3)</sup>	~ 94%	~ 93%	~ 93%	~ 93%	~ 95%

(1) Related to the nominal values, the accuracy defines the maximum deviation between an adjusted values and the true (actual) value.

Example: a 80 V model has min. 0.1% voltage accuracy, that is 80 mV. When adjusting the voltage to 5 V, the actual value is allowed to differ max. 80 mV, which means it might be between 4.92 V and 5.08 V.

(2) RMS value: LF 0...300 kHz, PP value: HF 0...20MHz

(3) Typical value at 100% output voltage and 100% power

(4) The display error adds to the error of the related actual value on the DC output

5 kW / 6.6 kW / 10 kW	Model US				
	PS 9750-20	PS 9040-340	PS 9040-510	PS 9080-340	PS 9200-140
<b>Analog interface <sup>(1)</sup></b>					
Set value inputs	U, I, P	U, I, P	U, I, P	U, I, P	U, I, P
Actual value output	U, I	U, I	U, I	U, I	U, I
Control signals	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off
Status signals	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT
Galvanic isolation to the device	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC
Sample rate of inputs & outputs	500 Hz				
<b>Insulation</b>	Allowed float (potential shift) on the DC output:				
Negative terminal to PE Max.	±725 V DC	±400 V DC	±400 V DC	±400 V DC	±400 V DC
Positive terminal to PE Max.	+1000 V DC	±400 V DC	±400 V DC	±400 V DC	+600 V DC
<b>Miscellaneous</b>					
Cooling	Temperature controlled fans, front inlet, rear exhaust				
Ambient temperature	0..50°C				
Storage temperature	-20...70°C				
Humidity	< 80%, not condensing				
Standards	EN 61010 EMC TÜV approved acc. IEC 61000-6-2:2005 and IEC 61000-6-3:2006 Class B				
Overvoltage category	2				
Protection class	1				
Pollution degree	2				
Operational altitude	< 2000 m				
<b>Digital interfaces</b>					
Featured	1x USB-B, 1x Ethernet <sup>(2)</sup> , 1x GPIB (optional with option 3W)				
Galvanic isolation from device	Max. 1500 V DC				
USB specification	USB 2.0, socket type B, VCOM driver				
USB response time	SCPI: max. 2 ms, ModBus RTU: max. 2 ms				
Ethernet specification <sup>(2)</sup>	RJ45, 10/100Mbit, TCP/IP, ICMP, HTTP, DHCP				
Ethernet response time	SCPI: max. 7 ms, ModBus RTU: 9-17 ms				
GPIB specification (optional)	24 pin Centronics socket acc. IEEE-488, for standard GPIB cables				
GPIB response time	max. 5 ms				
<b>Terminals</b>					
Rear side	Share Bus, DC output, AC input, remote sensing, analog interface, USB-B, Ethernet				
<b>Dimensions</b>					
Enclosure (WxHxD)	19" x 3 U x 670 mm				
Total (WxHxD)	483 x 133 x 775 mm				
<b>Weight</b>	~ 17 kg	~ 24 kg	~ 30 kg	~ 24 kg	~ 24 kg
<b>Article number <sup>(3)</sup></b>	06238255	06238256	06238263	06238257	06238258

(1) For technical specifications of the analog interface see „3.5.4.4 Analog interface specification“ on page 62

(2) Only in the standard US version

(3) Article number of the standard US version, devices with options will have a different number



10 kW / 15 kW	Model US				
	PS 9360-80	PS 9500-60	PS 9750-40	PS 91000-30	PS 9080-510
<b>AC Input</b>					
Voltage (L-L)	208 V, $\pm 10\%$ , 45 - 65 Hz				
Input connection	3ph,PE	3ph,PE	3ph,PE	3ph,PE	3ph,PE
Input fuse (internal)	4x T16 A	4x T16 A	4x T16 A	4x T16 A	6x T16 A
Leak current	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA	< 3.5 mA
Power factor	> 0.99	> 0.99	> 0.99	> 0.99	> 0.99
<b>DC Output</b>					
Max. output voltage $U_{Max}$	360 V	500 V	750 V	1000 V	80 V
Max. output current $I_{Max}$	80 A	60 A	40 A	30 A	510 A
Max. output power $P_{Max}$	10 kW	10 kW	10 kW	10 kW	15 kW
Overvoltage protection range	0...396 V	0...550 V	0...825 V	0...1100 V	0...88 V
Overcurrent protection range	0...88 A	0...66 A	0...44 A	0...33 A	0...561 A
Overpower protection range	0...11 kW	0...11 kW	0...11 kW	0...11 kW	0...16.5 kW
Temperature coefficient for set values $\Delta/K$	Voltage / current: 100 ppm				
Output capacitance (approx.)	800 $\mu$ F	500 $\mu$ F	210 $\mu$ F	127 $\mu$ F	25380 $\mu$ F
<b>Voltage regulation</b>					
Adjustment range	0...367.2 V	0...510 V	0...765 V	0...1020 V	0...81.6 V
Accuracy <sup>(1)</sup>	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$
Load regulation at 0...100% load	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$
Rise time 10...90%	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms	Max. 30 ms
Settling time after load step	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 1.5 ms	< 2 ms
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$
Ripple <sup>(2)</sup>	< 550 mV <sub>PP</sub> < 65 mV <sub>RMS</sub>	< 350 mV <sub>PP</sub> < 70 mV <sub>RMS</sub>	< 800 mV <sub>PP</sub> < 200 mV <sub>RMS</sub>	< 1600 mV <sub>PP</sub> < 350 mV <sub>RMS</sub>	< 320 mV <sub>PP</sub> < 25 mV <sub>RMS</sub>
Remote sensing compensation	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$
Fall time at no load after switching DC output off	Down from 100% to <60 V: less than 10 s				
<b>Current regulation</b>					
Adjustment range	0...81.6 A	0...61.2 A	0...40.8 A	0...30.6 A	0...520.2 A
Accuracy <sup>(1)</sup>	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$
Load regulation at 0...100% $\Delta U_{OUT}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$
Ripple <sup>(2)</sup>	< 10.4 mA <sub>RMS</sub>	< 32 mA <sub>RMS</sub>	< 32 mA <sub>RMS</sub>	< 22 mA <sub>RMS</sub>	< 240 mA <sub>RMS</sub>
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$
<b>Power regulation</b>					
Adjustment range	0...10.2 kW	0...10.2 kW	0...10.2 kW	0...10.2 kW	0...15.3 kW
Accuracy <sup>(1)</sup>	< 1.2% $P_{Max}$	< 1.2% $P_{Max}$	< 1.2% $P_{Max}$	< 1.2% $P_{Max}$	< 1.2% $P_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$
Load reg. at 10-90% $\Delta U_{OUT} \cdot \Delta I_{OUT}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“				
Display: Accuracy <sup>(4)</sup>	$\leq 0.8\% P_{Max}$	$\leq 0.85\% P_{Max}$	$\leq 0.85\% P_{Max}$	$\leq 0.85\% P_{Max}$	$\leq 0.8\% P_{Max}$
Efficiency <sup>(3)</sup>	~ 93%	~ 95%	~ 94%	~ 95%	~ 93%

(1) Related to the nominal values, the accuracy defines the maximum deviation between an adjusted values and the true (actual) value.

Example: a 80 V model has min. 0.1% voltage accuracy, that is 80 mV. When adjusting the voltage to 5 V, the actual value is allowed to differ max. 80 mV, which means it might be between 4.92 V and 5.08 V.

(2) RMS value: LF 0...300 kHz, PP value: HF 0...20MHz

(3) Typical value at 100% output voltage and 100% power

(4) The display error adds to the error of the related actual value on the DC output



10 kW / 15 kW	Model US				
	PS 9360-80	PS 9500-60	PS 9750-40	PS 91000-30	PS 9080-510
<b>Analog interface <sup>(1)</sup></b>					
Set value inputs	U, I, P	U, I, P	U, I, P	U, I, P	U, I, P
Actual value output	U, I	U, I	U, I	U, I	U, I
Control signals	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off
Status signals	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT
Galvanic isolation to the device	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC
Sample rate of inputs & outputs	500 Hz				
<b>Insulation</b>	Allowed float (potential shift) on the DC output:				
Negative terminal to PE Max.	±400 V DC	±725 V DC	±725 V DC	±725 V DC	±400 V DC
Positive terminal to PE Max.	+600 V DC	+1000 V DC	+1000 V DC	+1000 V DC	±400 V DC
<b>Miscellaneous</b>					
Cooling	Temperature controlled fans, front inlet, rear exhaust				
Ambient temperature	0..50°C				
Storage temperature	-20...70°C				
Humidity	< 80%, not condensing				
Standards	EN 61010 EMC TÜV approved acc. IEC 61000-6-2:2005 and IEC 61000-6-3:2006 Class B				
Overvoltage category	2				
Protection class	1				
Pollution degree	2				
Operational altitude	< 2000 m				
<b>Digital interfaces</b>					
Featured	1x USB-B, 1x Ethernet <sup>(2)</sup> , 1x GPIB (optional with option 3W)				
Galvanic isolation from device	Max. 1500 V DC				
USB specification	USB 2.0, socket type B, VCOM driver				
USB response time	SCPI: max. 2 ms, ModBus RTU: max. 2 ms				
Ethernet specification <sup>(2)</sup>	RJ45, 10/100Mbit, TCP/IP, ICMP, HTTP, DHCP				
Ethernet response time	SCPI: max. 7 ms, ModBus RTU: 9-17 ms				
GPIB specification (optional)	24 pin Centronics socket acc. IEEE-488, for standard GPIB cables				
GPIB response time	max. 5 ms				
<b>Terminals</b>					
Rear side	Share Bus, DC output, AC input, remote sensing, analog interface, USB-B, Ethernet				
<b>Dimensions</b>					
Enclosure (WxHxD)	19" x 3 U x 670 mm				
Total (WxHxD)	483 x 133 x 775 mm				
<b>Weight</b>	~ 24 kg	~ 24 kg	~ 24 kg	~ 24 kg	~ 30 kg
<b>Article number <sup>(3)</sup></b>	06238259	06238260	06238261	06238262	06238264

(1) For technical specifications of the analog interface see „3.5.4.4 Analog interface specification“ on page 62

(2) Only in the standard US version

(3) Article number of the standard US version, devices with options will have a different number

15 kW	Model US		
	PS 9200-210	PS 9360-120	PS 9500-90
<b>AC Input</b>			
Voltage (L-L)	208 V, $\pm 10\%$ , 45 - 65 Hz		
Input connection	3ph,PE	3ph,PE	3ph,PE
Input fuse (internal)	6x T16 A	6x T16 A	6x T16 A
Leak current	< 3.5 mA	< 3.5 mA	< 3.5 mA
Power factor	> 0.99	> 0.99	> 0.99
<b>DC Output</b>			
Max. output voltage $U_{Max}$	200 V	360 V	500 V
Max. output current $I_{Max}$	210 A	120 A	90 A
Max. output power $P_{Max}$	15 kW	15 kW	15 kW
Overvoltage protection range	0...220 V	0...396 V	0...550 V
Overcurrent protection range	0...231 A	0...132 A	0...99 A
Overpower protection range	0...16.5 kW	0...16.5 kW	0...16.5 kW
Temperature coefficient for set values $\Delta/K$	Voltage / current: 100 ppm		
Output capacitance (approx.)	7560 $\mu$ F	1200 $\mu$ F	760 $\mu$ F
<b>Voltage regulation</b>			
Adjustment range	0...204 V	0...367.2 V	0...510 V
Accuracy <sup>(1)</sup>	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$
Load regulation at 0...100% load	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$
Rise time 10...90%	Max. 30 ms	Max. 30 ms	Max. 30 ms
Settling time after load step	< 2 ms	< 2 ms	< 2 ms
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$
Ripple <sup>(2)</sup>	< 300 mV <sub>PP</sub> < 40 mV <sub>RMS</sub>	< 550 mV <sub>PP</sub> < 65 mV <sub>RMS</sub>	< 350 mV <sub>PP</sub> < 70 mV <sub>RMS</sub>
Remote sensing compensation	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$
Fall time at no load after switching DC output off	Down from 100% to <60 V: less than 10 s		
<b>Current regulation</b>			
Adjustment range	0...214.2 A	0...122.4 A	0...91.8 A
Accuracy <sup>(1)</sup>	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$
Load regulation at 0...100% $\Delta U_{OUT}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$
Ripple <sup>(2)</sup>	< 66 mA <sub>RMS</sub>	< 15.6 mA <sub>RMS</sub>	< 48 mA <sub>RMS</sub>
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$
<b>Power regulation</b>			
Adjustment range	0...15.3 kW	0...15.3 kW	0...15.3 kW
Accuracy <sup>(1)</sup>	< 1% $P_{Max}$	< 1.2% $P_{Max}$	< 1.2% $P_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$
Load reg. at 10-90% $\Delta U_{OUT} \cdot \Delta I_{OUT}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.8\% P_{Max}$	$\leq 0.85\% P_{Max}$	$\leq 0.85\% P_{Max}$
Efficiency <sup>(3)</sup>	~ 95%	~ 94%	~ 95%

(1) Related to the nominal values, the accuracy defines the maximum deviation between an adjusted values and the true (actual) value.

Example: a 80 V model has min. 0.1% voltage accuracy, that is 80 mV. When adjusting the voltage to 5 V, the actual value is allowed to differ max. 80 mV, which means it might be between 4.92 V and 5.08 V.

(2) RMS value: LF 0...300 kHz, PP value: HF 0...20MHz

(3) Typical value at 100% output voltage and 100% power

(4) The display error adds to the error of the related actual value on the DC output

15 kW	Model US		
	PS 9200-210	PS 9360-120	PS 9500-90
<b>Analog interface <sup>(1)</sup></b>			
Set value inputs	U, I, P	U, I, P	U, I, P
Actual value output	U, I	U, I	U, I
Control signals	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off
Status signals	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT
Galvanic isolation to the device	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC
Sample rate of inputs & outputs	500 Hz		
<b>Insulation</b>	Allowed float (potential shift) on the DC output:		
Negative terminal to PE Max.	±400 V DC	±400 V DC	±725 V DC
Positive terminal to PE Max.	+600 V DC	+600 V DC	+1000 V DC
<b>Miscellaneous</b>			
Cooling	Temperature controlled fans, front inlet, rear exhaust		
Ambient temperature	0..50°C		
Storage temperature	-20...70°C		
Humidity	< 80%, not condensing		
Standards	EN 61010 EMC TÜV approved acc. IEC 61000-6-2:2005 and IEC 61000-6-3:2006 Class B		
Overvoltage category	2		
Protection class	1		
Pollution degree	2		
Operational altitude	< 2000 m		
<b>Digital interfaces</b>			
Featured	1x USB-B, 1x Ethernet <sup>(2)</sup> , 1x GPIB (optional with option 3W)		
Galvanic isolation from device	Max. 1500 V DC		
USB specification	USB 2.0, socket type B, VCOM driver		
USB response time	SCPI: max. 2 ms, ModBus RTU: max. 2 ms		
Ethernet specification <sup>(2)</sup>	RJ45, 10/100Mbit, TCP/IP, ICMP, HTTP, DHCP		
Ethernet response time	SCPI: max. 7 ms, ModBus RTU: 9-17 ms		
GPIB specification (optional)	24 pin Centronics socket acc. IEEE-488, for standard GPIB cables		
GPIB response time	max. 5 ms		
<b>Terminals</b>			
Rear side	Share Bus, DC output, AC input, remote sensing, analog interface, USB-B, Ethernet		
<b>Dimensions</b>			
Enclosure (WxHxD)	19" x 3 U x 670 mm		
Total (WxHxD)	483 x 133 x 775 mm		
<b>Weight</b>	~ 30 kg	~ 30 kg	~ 30 kg
<b>Article number <sup>(3)</sup></b>	06238265	06238266	06238267

(1) For technical specifications of the analog interface see „3.5.4.4 Analog interface specification“ on page 62

(2) Only in the standard US version

(3) Article number of the standard US version, devices with options will have a different number

15 kW	Model US		
	PS 9750-60	PS 91000-40	PS 91500-30
<b>AC Input</b>			
Voltage (L-L)	208 V, $\pm 10\%$ , 45 - 65 Hz		
Input connection	3ph,PE	3ph,PE	3ph,PE
Input fuse (internal)	6x T16 A	6x T16 A	6x T16 A
Leak current	< 3.5 mA	< 3.5 mA	< 3.5 mA
Power factor	> 0.99	> 0.99	> 0.99
<b>DC Output</b>			
Max. output voltage $U_{Max}$	750 V	1000 V	1500 V
Max. output current $I_{Max}$	60 A	40 A	30 A
Max. output power $P_{Max}$	15 kW	15 kW	15 kW
Overvoltage protection range	0...825 V	0...1100 V	0...1650 V
Overcurrent protection range	0...66 A	0...44 A	0...33 A
Overpower protection range	0...16.5 kW	0...16.5 kW	0...16.5 kW
Temperature coefficient for set values $\Delta/K$	Voltage / current: 100 ppm		
Output capacitance (approx.)	310 $\mu$ F	133 $\mu$ F	84 $\mu$ F
<b>Voltage regulation</b>			
Adjustment range	0...765 V	0...1020 V	0...1530 V
Accuracy <sup>(1)</sup>	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$	< 0.1% $U_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$	< 0.02% $U_{Max}$
Load regulation at 0...100% load	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$	< 0.05% $U_{Max}$
Rise time 10...90%	Max. 30 ms	Max. 30 ms	Max. 30 ms
Settling time after load step	< 2 ms	< 2 ms	< 2 ms
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$	$\leq 0.2\% U_{Max}$
Ripple <sup>(2)</sup>	< 800 mV <sub>PP</sub> < 200 mV <sub>RMS</sub>	< 2000 mV <sub>PP</sub> < 300 mV <sub>RMS</sub>	< 2400 mV <sub>PP</sub> < 400 mV <sub>RMS</sub>
Remote sensing compensation	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$	Max. 5% $U_{Max}$
Fall time at no load after switching DC output off	Down from 100% to <60 V: less than 10 s		
<b>Current regulation</b>			
Adjustment range	0...61.2 A	0...40.8 A	0...30.6 A
Accuracy <sup>(1)</sup>	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$	< 0.2% $I_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$	< 0.05% $I_{Max}$
Load regulation at 0...100% $\Delta U_{OUT}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$	< 0.15% $I_{Max}$
Ripple <sup>(2)</sup>	< 48 mA <sub>RMS</sub>	< 10 mA <sub>RMS</sub>	< 26 mA <sub>RMS</sub>
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$	$\leq 0.2\% I_{Max}$
<b>Power regulation</b>			
Adjustment range	0...15.3 kW	0...15.3 kW	0...15.3 kW
Accuracy <sup>(1)</sup>	< 1.2% $P_{Max}$	< 1% $P_{Max}$	< 1.2% $P_{Max}$
Line regulation at $\pm 10\% \Delta U_{AC}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$	< 0.05% $P_{Max}$
Load reg. at 10-90% $\Delta U_{OUT} \cdot \Delta I_{OUT}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$	< 0.75% $P_{Max}$
Display: Resolution	See section „1.9.6.4. Resolution of the displayed values“		
Display: Accuracy <sup>(4)</sup>	$\leq 0.85\% P_{Max}$	$\leq 0.85\% P_{Max}$	$\leq 0.85\% P_{Max}$
Efficiency <sup>(3)</sup>	~ 94%	~ 94%	~ 95%

(1) Related to the nominal values, the accuracy defines the maximum deviation between an adjusted values and the true (actual) value.

Example: a 80 V model has min. 0.1% voltage accuracy, that is 80 mV. When adjusting the voltage to 5 V, the actual value is allowed to differ max. 80 mV, which means it might be between 4.92 V and 5.08 V.

(2) RMS value: LF 0...300 kHz, PP value: HF 0...20MHz

(3) Typical value at 100% output voltage and 100% power

(4) The display error adds to the error of the related actual value on the DC output



15 kW	Model US		
	PS 9750-60	PS 91000-40	PS 91500-30
<b>Analog interface <sup>(1)</sup></b>			
Set value inputs	U, I, P	U, I, P	U, I, P
Actual value output	U, I	U, I	U, I
Control signals	DC on/off, Remote on/off	DC on/off, Remote on/off	DC on/off, Remote on/off
Status signals	CV, OVP, OT	CV, OVP, OT	CV, OVP, OT
Galvanic isolation to the device	Max. 1500 V DC	Max. 1500 V DC	Max. 1500 V DC
Sample rate of inputs & outputs	500 Hz		
<b>Insulation</b>	Allowed float (potential shift) on the DC output:		
Negative terminal to PE      Max.	±725 V DC	±725 V DC	±725 V DC
Positive terminal to PE      Max.	+1000 V DC	+1000 V DC	+1500 V DC
<b>Miscellaneous</b>			
Cooling	Temperature controlled fans, front inlet, rear exhaust		
Ambient temperature	0..50°C		
Storage temperature	-20...70°C		
Humidity	< 80%, not condensing		
Standards	EN 61010 EMC TÜV approved acc. IEC 61000-6-2:2005 and IEC 61000-6-3:2006 Class B		
Overvoltage category	2		
Protection class	1		
Pollution degree	2		
Operational altitude	< 2000 m		
<b>Digital interfaces</b>			
Featured	1x USB-B, 1x Ethernet <sup>(2)</sup> , 1x GPIB (optional with option 3W)		
Galvanic isolation from device	Max. 1500 V DC		
USB specification	USB 2.0, socket type B, VCOM driver		
USB response time	SCPI: max. 2 ms, ModBus RTU: max. 2 ms		
Ethernet specification <sup>(2)</sup>	RJ45, 10/100Mbit, TCP/IP, ICMP, HTTP, DHCP		
Ethernet response time	SCPI: max. 7 ms, ModBus RTU: 9-17 ms		
GPIB specification (optional)	24 pin Centronics socket acc. IEEE-488, for standard GPIB cables		
GPIB response time	max. 5 ms		
<b>Terminals</b>			
Rear side	Share Bus, DC output, AC input, remote sensing, analog interface, USB-B, Ethernet		
<b>Dimensions</b>			
Enclosure (WxHxD)	19" x 3 U x 670 mm		
Total (WxHxD)	483 x 133 x 775 mm		
<b>Weight</b>	~ 30 kg	~ 30 kg	~ 30 kg
<b>Article number <sup>(3)</sup></b>	06238268	06238270	06238269

(1) For technical specifications of the analog interface see „3.5.4.4 Analog interface specification“ on page 62

(2) Only in the standard US version

(3) Article number of the standard US version, devices with options will have a different number

## 1.8.5 Views

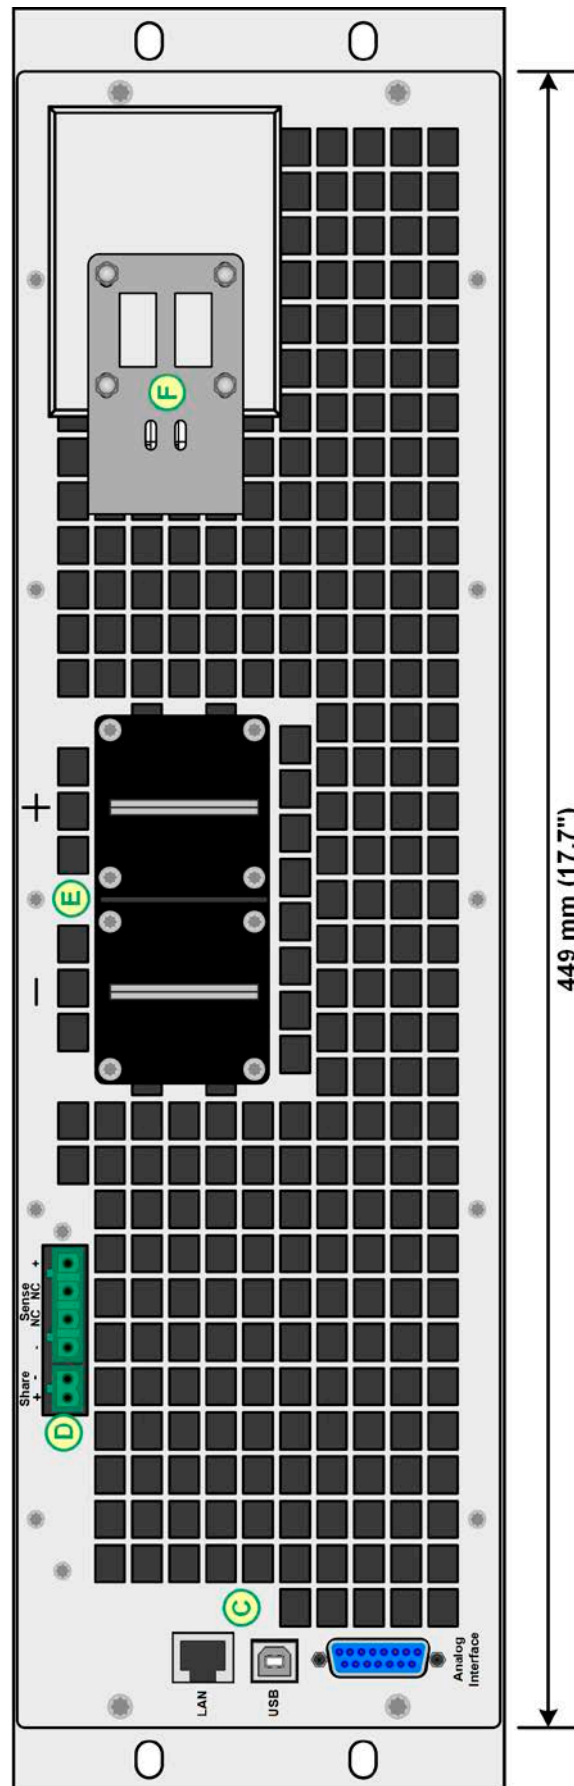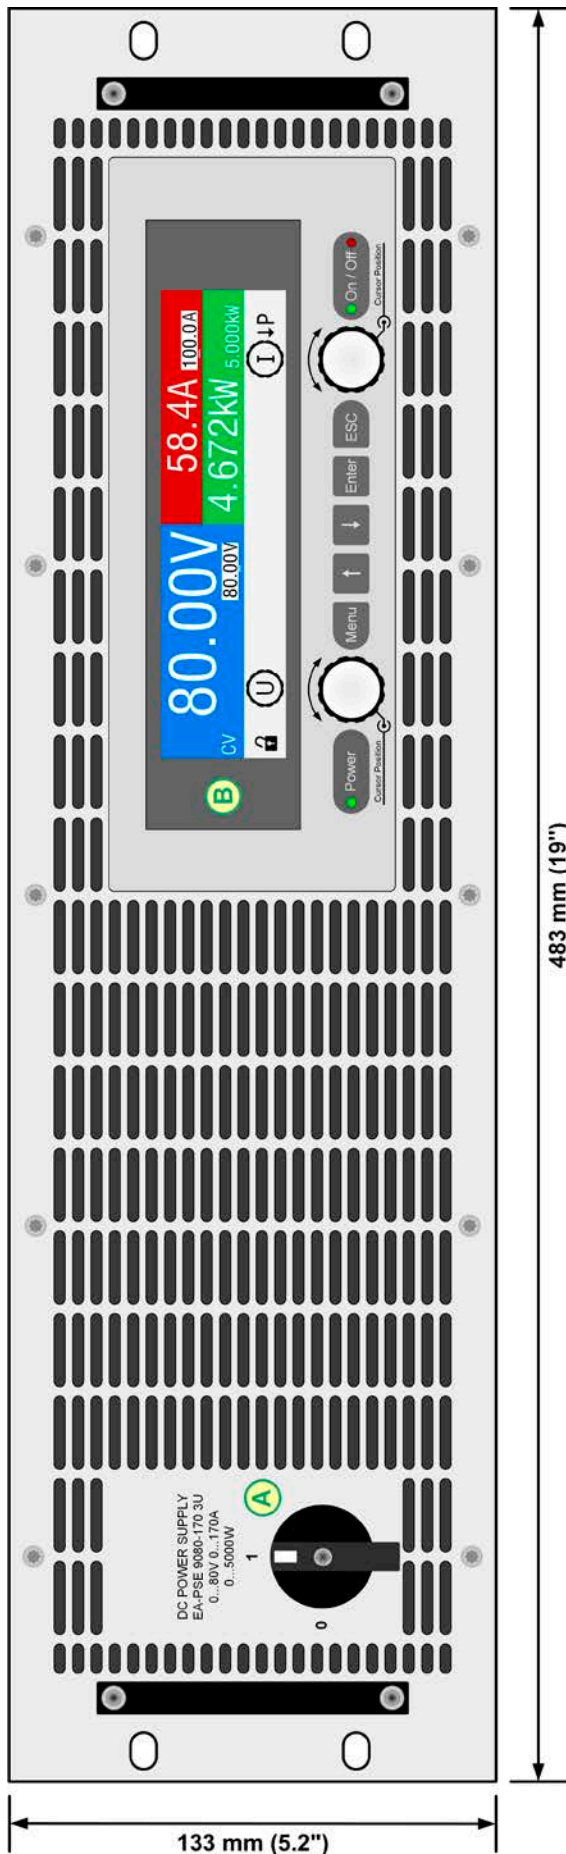

- A - Power switch  
 B - Control panel  
 C - Control interfaces (digital, analog)  
 D - Share Bus and remote sensing connection  
 E - DC output (view shows terminal type 1)  
 F - AC input with plug fixture & strain relief

Figure 1 - Front view

Figure 2 - Back view (standard EU version)

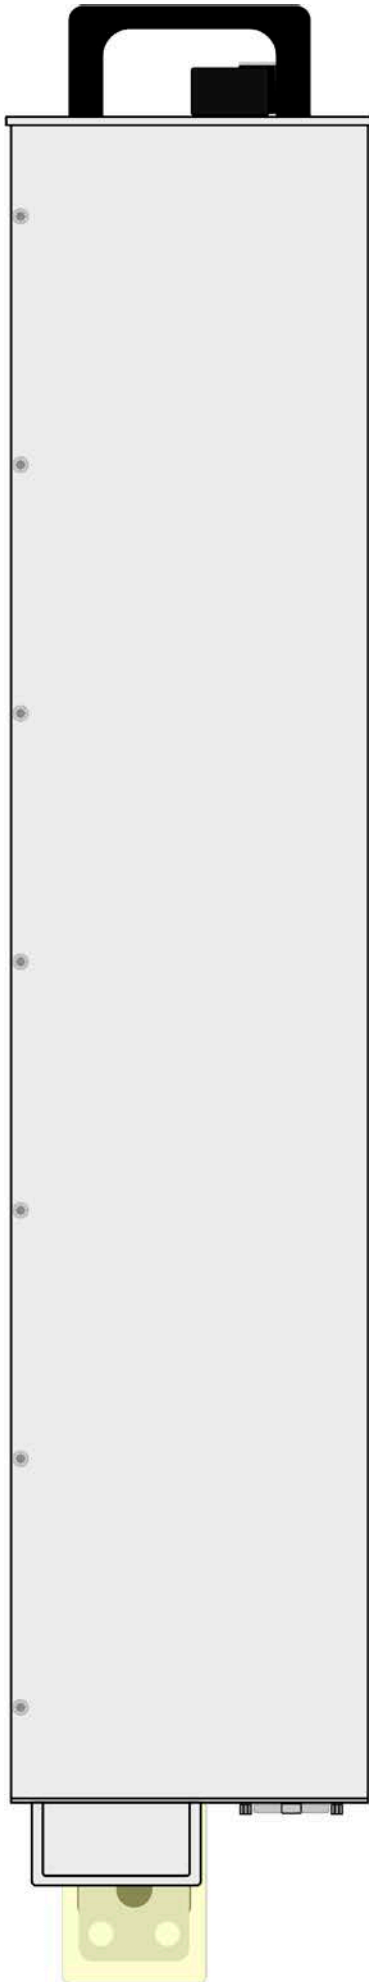


Figure 3 - Side view from left

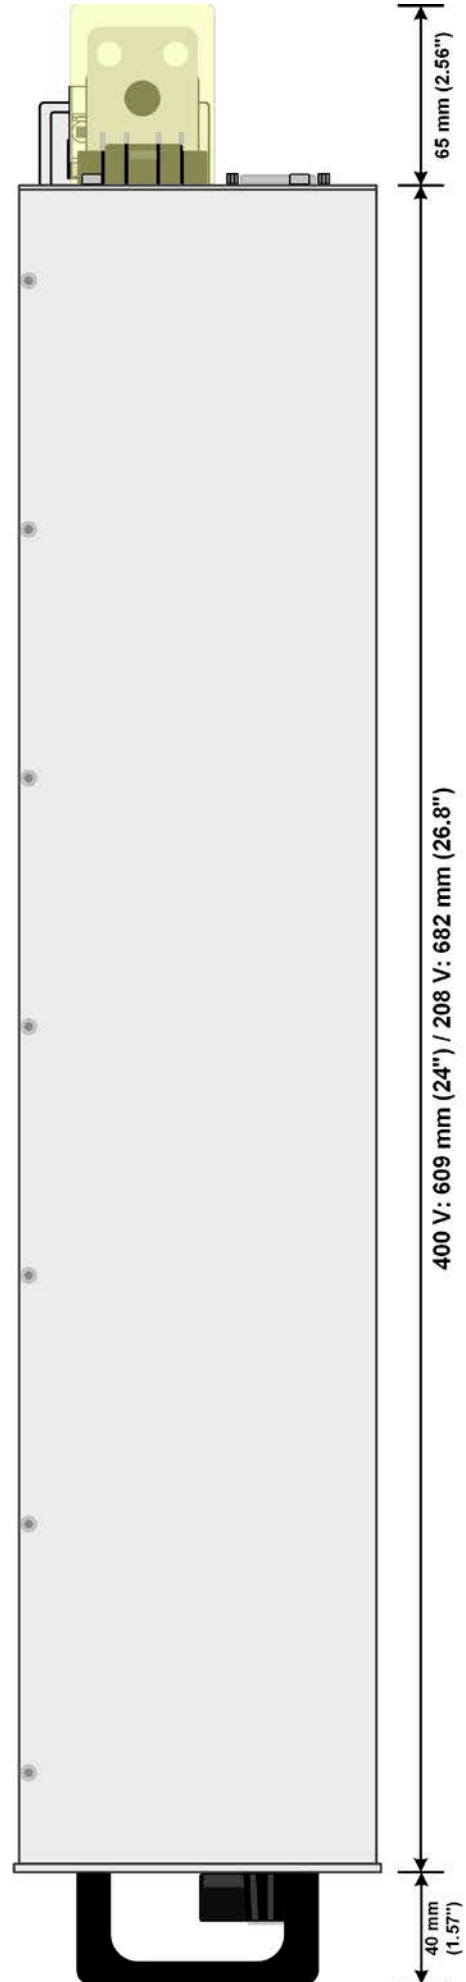


Figure 4 - Side view from right



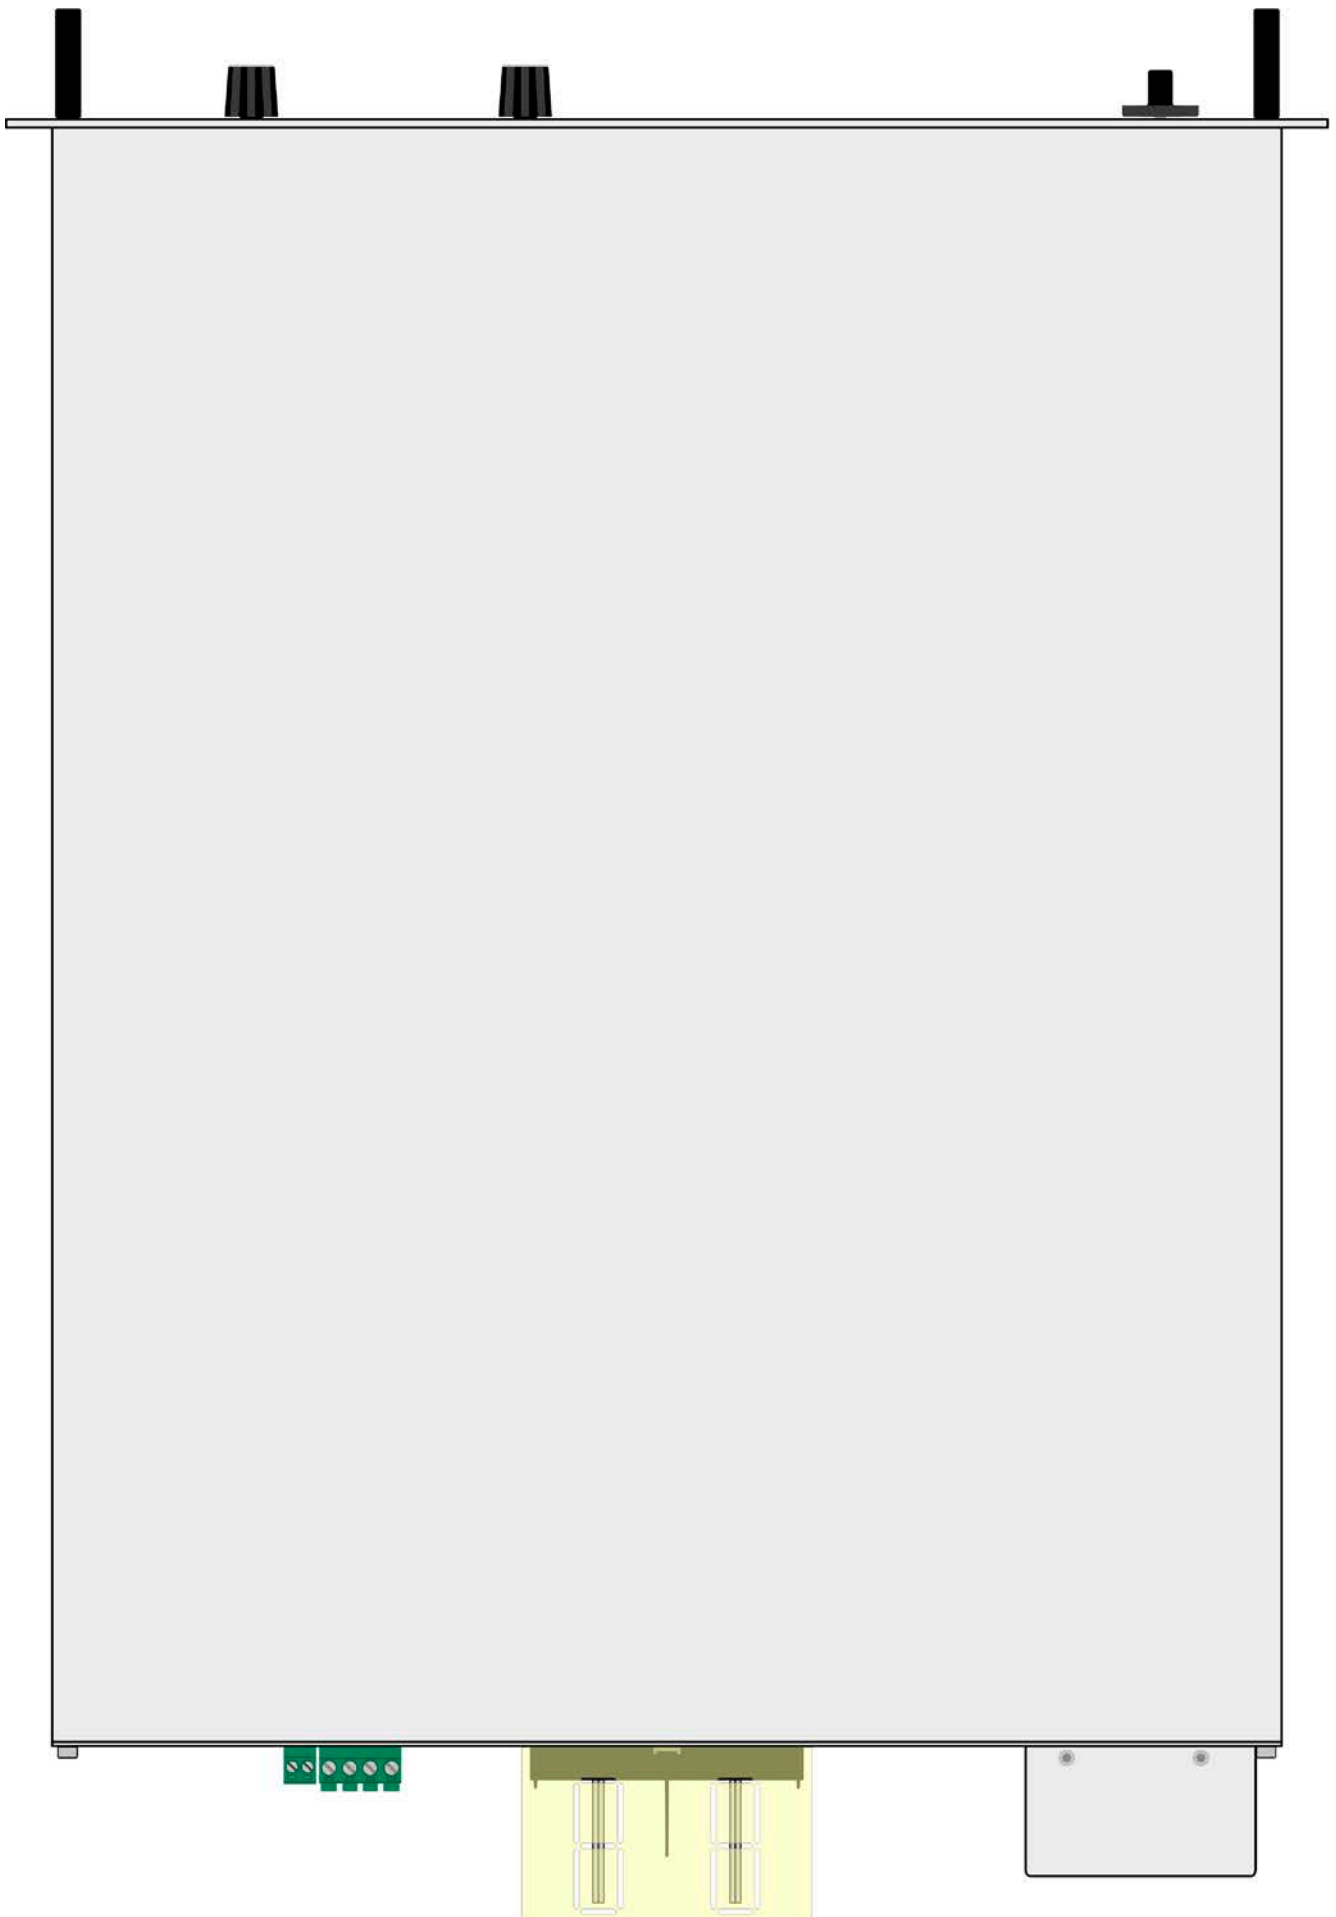


Figure 5 - Top view



## 1.8.6 Control elements

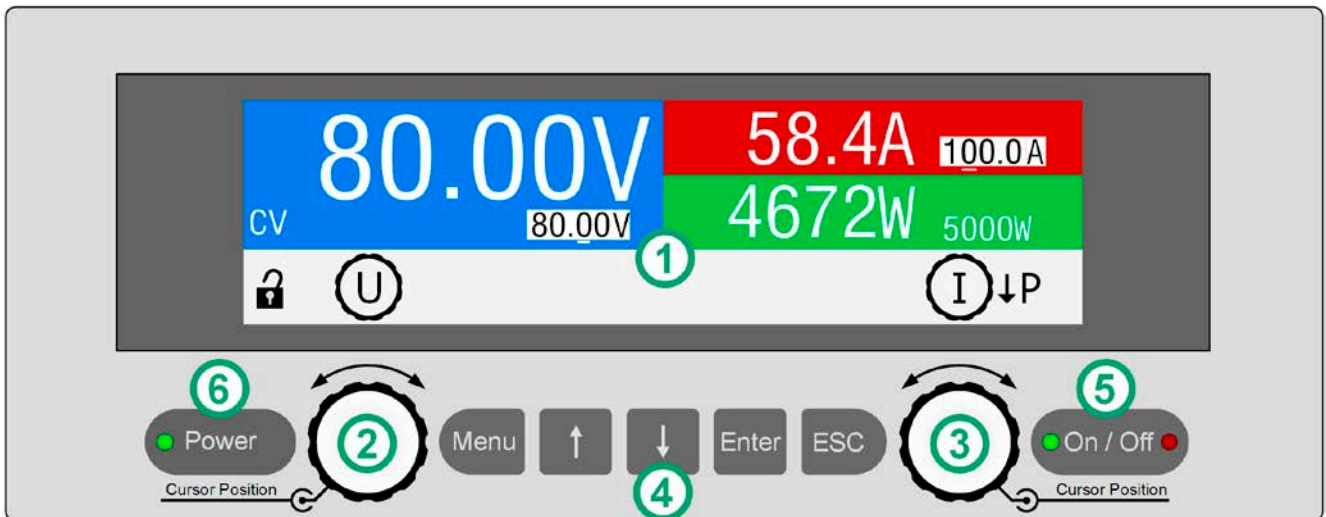








Figure 6- Control panel

**Overview of the elements on the control panel**

For a detailed description see section „1.9.6. The control panel (HMI)“.

(1)	<b>Display</b> Used for indication of set values, menus, conditions, actual values and status.
(2)	<b>Left hand rotary knob, with button function</b> Turn: adjusts various set values which are related to the DC output voltage. Push: selects the decimal position of a value to be changed (cursor)
(3)	<b>Right hand rotary knob, with button function</b> Turn: adjusts various set values which are related to the DC output current, the DC output power. Also adjusts parameters in the setup menu. Push: selects the decimal position of a value to be changed (cursor)
(4)	<b>Button bank</b> Button  : Activates the setup menu for various device settings (see „3.4.3. Configuration in the setup menu“) or the mini menu Button  : Navigates through menus, submenus and parameters (direction: up / left) Button  : Navigates through menus, submenus and parameters (direction: down / right) Button  : Submits altered parameters or set values in submenus, as well enters submenus. Can also be used to acknowledge alarms Button  : Cancels changes of parameters in the setup menu or leaves submenus
(5)	<b>On/Off Button for DC output</b>  Used to toggle the DC output between on and off, also used to acknowledge alarms. The LEDs “On” and “Off” indicate the state of the DC output, no matter if the device is manually controlled or remotely.
(6)	<b>LED “Power”</b> Indicates different colours during the start of the device and once ready for operation, it turns green and remains for the period of operation.

## 1.9 Construction and function

### 1.9.1 General description

The electronic high performance power supplies of the PS 9000 3U series are especially suitable for test systems and industrial controls due to their compact construction in a 19" enclosure with 3 height units (3U).

For remote control using a PC or PLC the devices are provided as standard with an USB port and an Ethernet port on the back side as well as an analog interface. All interfaces are galvanically isolated up to 1500 V DC.


In addition, the devices offer as standard the possibility for parallel connection in Share bus operation for constant current sharing. Operating in this way allows up to 16 units to be combined to a single system with a total power of up to 240 kW.

All models are controlled by microprocessors. These enable an exact and fast measurement and display of actual values.

### 1.9.2 Block diagram

The block diagram illustrates the main components inside the device and their relationships.

There are digital, microprocessor controlled components (KE, DR, HMI), which can be target of firmware updates.

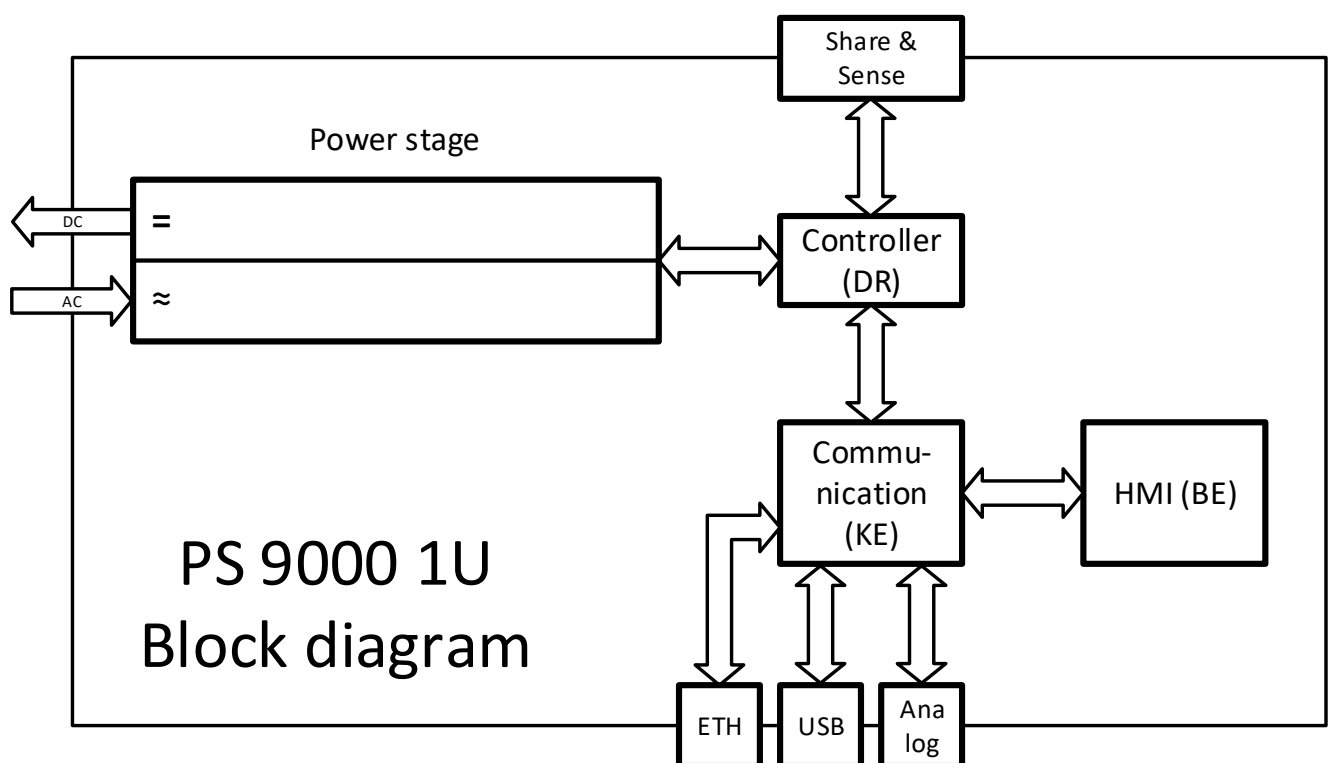

## 1.9.3 Scope of delivery

- 1 x Power supply device
- 1 x Share Bus plug
- 1 x Remote sensing plug
- 1 x 1.8 m USB cable
- 1 x Set of DC terminal covers
- 1 x Set of Share/Sense terminal cover (only models from rated 750 V)
- 1 x USB stick with drivers, software and documentation

## 1.9.4 Accessories

For these devices the following accessories are available:

<b>CABINET</b> 19"-rack	Racks in various configurations up to 47U as parallel systems are available, also mixed with electronic load devices to create test systems. Further information in our product catalogue, on our website or upon request.
----------------------------	--

## 1.9.5 Options

These options are usually ordered along with the order of a new unit, because they are permanently built-in during the manufacturing process. Possible retrofit upon request.


<b>HS</b> „High-Speed Ramping“	Increased output voltage dynamics by reduced filter capacity on the DC output. NOTE: other DC output related values, like the ripple, also increase. This is a permanent feature which cannot be switched off.
<b>3W</b> GPIB interface	Replaces the standard Ethernet port by a permanently installed GPIB port. The device will keep the USB and analog interfaces. Via the GPIB port, it can only support SCPI commands.

### 1.9.6 The control panel (HMI)

The HMI (Human Machine Interface) consists of a color TFT display, two rotary knobs with button function and six pushbuttons.

#### 1.9.6.1 Display

The graphic display is divided into a number of areas. In normal operation the upper part (2/3) is used to show actual and set values and the lower part (1/3) to display status information:

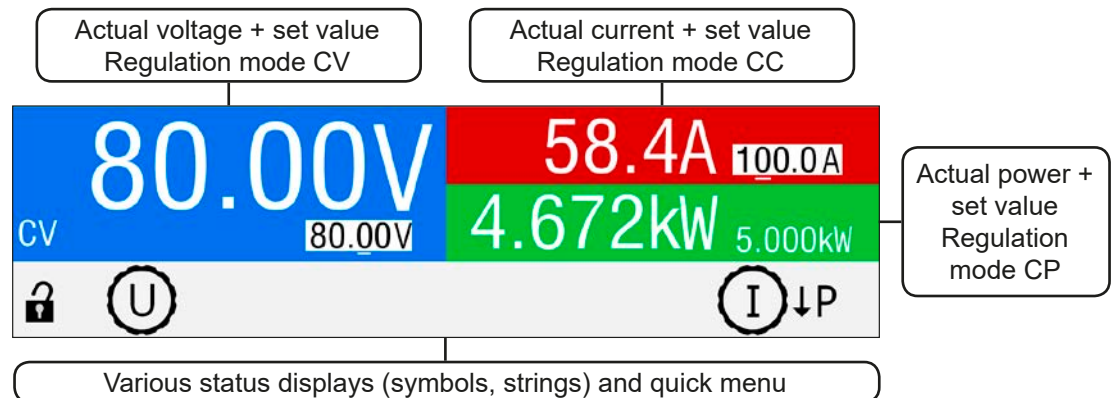

#### • Actual / set values area (blue / green / red)

In normal operation the DC output values (large numbers) and set values (small numbers) for voltage, current and power.

While the DC output is switched on, the actual regulation mode **CV**, **CC** or **CP** is displayed above to the corresponding set value, as shown in the figure above with example "CV".



The set values can be adjusted by rotating the knobs below the display, whereas pushing the knobs are used to select the digit to be changed. Logically, the values are increased by clockwise turning and decreased by anti-clockwise turning. The current assignment of set a value to a knob is indicated by the corresponding set value being displayed in inverted form and also by the knob depiction in the status area showing the physical sign (U, I, P). In case these are not shown, the values cannot be adjusted manually, like in HMI lock or remote control.

General display and settings ranges:

Display	Unit	Range	Description
Actual voltage	V	0-125% $U_{Nom}$	Actual values of DC output voltage
Set value voltage	V	0-102% $U_{Nom}$	Set value for limiting the DC output voltage
Actual current	A	0.2-125% $I_{Nom}$	Actual value of DC output current
Set value current	A	0-102% $I_{Nom}$	Set value for limiting the DC output current
Actual power	W	0-125% $P_{Nom}$	Actual value of output power, $P = U \cdot I$
Set value power	W	0-102% $P_{Nom}$	Set value for limiting DC output power
Adjustment limits	A, V, kW	0-102%	U-max, I-min etc., related to the physical quantities
Protection settings	A, V, kW	0-110%	OVP, OCP etc., related to the physical quantities

### • Status display (lower part)

This area displays various status texts and symbols:

Display	Description
	The HMI is locked
	The HMI is unlocked
<b>Remote:</b>	The device is under remote control from...
<b>Analog</b>	...the built-in analog interface
<b>USB</b>	...the built-in USB port
<b>Ethernet</b>	...the built-in Ethernet/LAN port
<b>Local</b>	The device has been locked by the user explicitly against remote control
<b>Alarm:</b>	Alarm condition which has not been acknowledged or still exists

### • Area for assigning the rotary knobs

The two rotary knobs below the display screen can be assigned to various functions. The status area in the display area depicts the actual assignments. After the device start and in the main screen the default assignment is voltage (left-hand knob) and current (right-hand knob):



These two values can then be adjusted manually. The decimal place to adjust is underlined, the currently selected value is displayed in inverted format:



There are following possible assignments, whereas the right-hand knob remains assigned to the set value of current:

**U I**

Left rotary knob: voltage  
Right rotary knob: current

**U P**

Left rotary knob: voltage  
Right rotary knob: power

The other set values can't be adjusted directly, until the assignment is changed. This is done using the "arrow down" button, as depicted by this symbol next to the corresponding knob depiction:



. With this being shown, the momentary assignment is to current and it can be changed to power.

#### 1.9.6.2 Rotary knobs



As long as the device is in manual operation, the two rotary knobs are used to adjust set values, as well as setting the parameters in the settings menu. For a detailed description of the individual functions see section „3.4 Manual operation“ on page 52. Both rotary knobs have an additional pushbutton function to select the decimal position of the value to be set. In this way the set current value for a device with, for example, nominal 510 A can be adjusted in various increments of 10 A or 0.1 A etc. Also see 1.9.6.4.

#### 1.9.6.3 Button function of the rotary knobs

The rotary knobs also have a pushbutton function which is used in all menu options for value adjustment to move the cursor by rotation as shown:



#### 1.9.6.4 Resolution of the displayed values

In the display, set values can be adjusted in fixed increments. The number of decimal places depends on the device model. The values have 3 to 5 digits. Actual and set values always have the same number of digits.

Adjustment resolution and number of digits of set values in the display:


Voltage, OVP, U-min, U-max			Current, OCP, I-min, I-max			Power, OPP, P-max		
Nominal	Digits	Increment	Nominal	Digits	Increment	Nominal	Digits	Increment
40 V / 80 V	4	0.01 V	20 A / 30 A	4	0.01 A	3.3 kW	3	0.01 kW
200 V	5	0.01 V	40 A / 60 A	4	0.01 A	5 kW	3	0.01 kW
360 V / 500 V	4	0.1 V	70 A / 80 A	4	0.01 A	6.6 kW	3	0.01 kW
750 V	4	0.1 V	90 A	4	0.01 A	10 kW	4	0.01 kW
1000 V	5	0.1 V	120 A / 140 A	4	0.1 A	15 kW	4	0.01 kW
1500 V	5	0.1 V	170 A / 210 A	4	0.1 A			
			340 A	4	0.1 A			
			510 A	4	0.1 A			

#### 1.9.7 USB port

The USB-B port on the back side of the device is provided for communication with the device and for firmware updates. The included USB cable can be used to connect the device to a PC (USB 2.0, USB 3.0). The driver is delivered on the included USB stick or is available as download and installs a virtual COM port. Details for remote control can be found in external documentation, such as a general programming guide, on the included USB stick or on the web site of the manufacturer.

The device can be addressed via the USB port either using the international standard Mod-Bus RTU protocol or by SCPI language. The device recognises the message protocol used automatically.

If remote control is in operation the USB port has no priority over either the analog interface or the Ethernet interface and can, therefore, only be used alternatively to these. However, monitoring is always available.

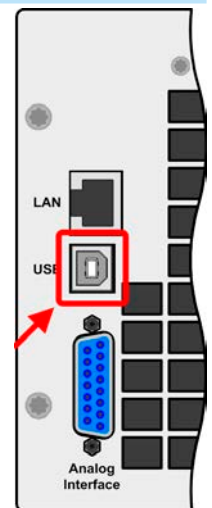

#### 1.9.8 Ethernet port


The Ethernet port on the back side of the device is provided for communication with the device in terms of remote control or monitoring. The user has basically two options of access:

1. A website (HTTP, port 80) which is accessible in a standard browser under the IP or the host name given for the device. This website offers to configuration page for network parameters, as well as a input box for SCPI commands to control the device remotely by manually entering commands.
2. TCP/IP access via a freely selectable port (except 80 and other reserved ports). The standard port for this device is 5025. Via TCP/IP and this port, communication to the device can be established in most of the common programming languages.

Using the Ethernet port, the device can either be controlled by commands from SCPI or Mod-Bus RTU protocol, while automatically detecting the type of message.

The network setup can be done manually or by DHCP. The transmission speed is set to "Auto negotiation" and means it can use 10MBit/s or 100MBit/s. 1GB/s is not supported. Duplex mode is always full duplex.

If remote control is in operation the Ethernet port has no priority over either the analog interface or the USB interface and can, therefore, only be used alternatively to these. However, monitoring is always available.

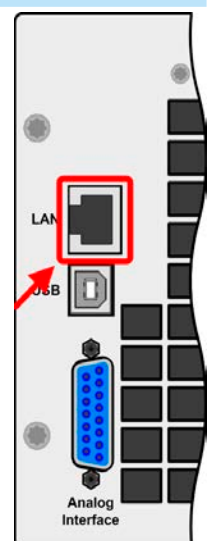




### 1.9.9 Analog interface

This 15 pole Sub-D socket on the back side of the device is provided for remote control of the device via analog signals or switching conditions.

If remote control is in operation this analog interface can only be used alternately to the digital interface. However, monitoring is always available.

The input voltage range of the set values and the output voltage range of the monitor values, as well as reference voltage level can be switched in the settings menu of the device between 0-5 V and 0-10 V, in each case for 0-100%.

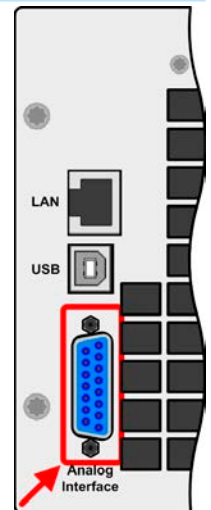


### 1.9.10 Share Bus connection

The 2 pole WAGO socket ("Share") on the back side of the device is provided for connection to equally named sockets on compatible power supplies series to achieve a balanced load current distribution during parallel connection of up to 16 units. For more information skip to „3.9.1. Parallel operation in Share bus mode“. There is furthermore to option to create a two-quadrants operation system with compatible electronic loads. For this, refer to „3.9.4. Two quadrants operation (2QO)“.


- PSI 9000 2U
- PSI 9000 3U / PSI 9000 WR
- ELR 9000 / ELR 9000 HP
- EL 9000 B
- PSE 9000
- PS 9000 1U \*
- PS 9000 2U \*
- PS 9000 3U \*

\* From hardware revision 2, see type label (in case the label doesn't show "Revision" on type label, it's revision 1)

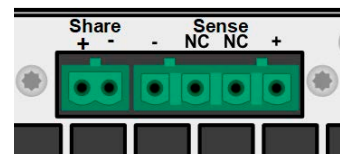

### 1.9.11 Sense connector (remote sensing)

If the output voltage has to be dependant on the consumer location rather than the DC output of the power supply, then the input "Sense" can be connected to the consumer where the DC connection is made. This compensates, up to a certain limit, the voltage difference between the power supply output and the consumer, which is caused by the high current through the load cables. The maximum possible compensation is given in the technical data.

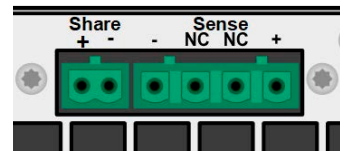


In order to ensure safety and to comply to international directives, insulation of high voltage models, i. e. such with a nominal voltage of 500 V or higher, is ensured by using only the two outer pins of the 4-pole terminal. The inner two pins, marked with NC, must remain unconnected.

### 1.9.12 GPIB port (optional)

The optional GPIB connector, which is available with option 3W, will replace the Ethernet connector of standard version devices. Option 3W then offers a different three-way interface with GPIB, USB and analog interfaces.

The connection to a PC or other GPIB port is done with standard GPIB cables from stock, which can have straight or 90° connectors.

When using cable with 90° connectors, the USB port will be inaccessible.

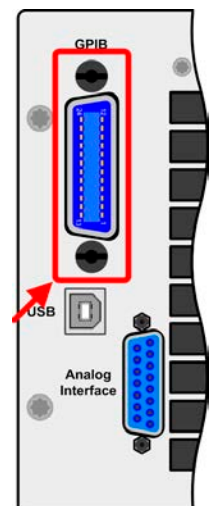

## 2. Installation & commissioning

### 2.1 Transport and storage

#### 2.1.1 Transport



- The handles on the front side of the device are **not** for carrying!
- Because of its weight, transport by hand should be avoided where possible. If unavoidable then only the housing should be held and not on the exterior parts (handles, DC output terminal, rotary knobs).
- Do not transport when switched on or connected!
- When relocating the equipment use of the original packing is recommended
- The device should always be carried and mounted horizontally
- Use suitable safety clothing, especially safety shoes, when carrying the equipment, as due to its weight a fall can have serious consequences.

#### 2.1.2 Packaging

It is recommended to keep the complete transport packaging for the lifetime of the device for relocation or return to the manufacturer for repair. Otherwise the packaging should be disposed of in an environmentally friendly way.

#### 2.1.3 Storage

In case of long term storage of the equipment it is recommended to use the original packaging or similar. Storage must be in dry rooms, if possible in sealed packaging, to avoid corrosion, especially internal, through humidity.

### 2.2 Unpacking and visual check

After every transport, with or without packaging, or before commissioning, the equipment should be visually inspected for damage and completeness using the delivery note and/or parts list (see section „1.9.3. *Scope of delivery*“). An obviously damaged device (e.g. loose parts inside, damage outside) must under no circumstances be put in operation.

### 2.3 Installation

#### 2.3.1 Safety procedures before installation and use



- The device may, according to model, have a considerable weight. Therefore the proposed location of the equipment (table, cabinet, shelf, 19" rack) must be able to support the weight without restriction.
- When using a 19" rack, rails suitable for the width of the housing and the weight of the device are to be used. (see „1.8.3. *Specific technical data (EU models)*“)
- Before connecting to the mains ensure that the supply voltage is as shown on the product label. Overvoltage on the AC supply can cause equipment damage.



## 2.3.2 Preparation

Mains connection for the PS 9000 3U series is done via the included 5 pole plug on the back of the device. Wiring of the plug is at least 3 strand (L2+L3+PE) or, for some models, 4 strand (L1+L2+L3+PE) of suitable cross section and length. For recommendations for cable cross section see „2.3.4. Connection to AC supply“.

Dimensioning of the DC wiring to the load/consumer has to reflect the following:



- The cable cross section should always be specified for at least the maximum current of the device.
- Continuous operation at the approved limit generates heat which must be removed, as well as voltage loss which depends on cable length and heating. To compensate for these the cable cross section should be increased and the cable length reduced.


## 2.3.3 Installing the device



- Select the location for the device so that the connection to the load is as short as possible.
- Leave sufficient space behind the equipment, minimum 30cm, for ventilation.

A device in a 19" housing will usually be mounted on suitable rails and installed in 19" racks or cabinets. The depth of the device and its weight must be taken into account. The handles on the front are for sliding in and out of the cabinet. Slots on the front plate are provided for fixing the device (fixing screws not included).

Acceptable and unacceptable installation positions:

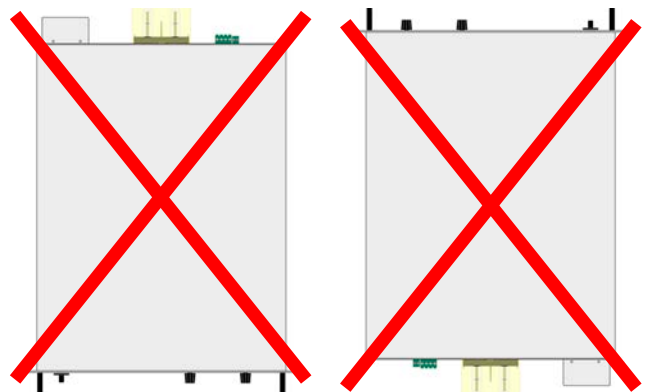

Standing surface

### 2.3.4 Connection to AC supply



- Connection to an AC mains supply may only be carried out by qualified personnel!
- Cable cross section must be suitable for the maximum input current of the device (see table below)!
- Before plugging in the input plug ensure that the device is switched off by its mains switch!

#### 2.3.4.1 European models for 400 V

The equipment is delivered with a 5 pole mains plug. Depending on model, this will be connected to either a 2-phase or 3-phase mains supply and wired on the plug according to the labelling on the plug and the table below. Required for the mains connection are following phases:

Nominal power	Phases	Supply type
3.3 kW / 5 kW	L2, L3, PE	Three-phase
6.6 kW / 10 kW	L1, L2, L3, PE	Three-phase
15 kW	L1, L2, L3, PE	Three-phase
>15 kW	L1, L2, L3, PE	Three-phase



**The PE conductor is imperative and must always be wired!**

For the sizing of wiring **cross section**, the power of the device and the cable length are decisive. The table below gives the maximum output current for each phase.

Based on the connection of a **standalone unit**:

Nominal power	L1		L2		L3	
	Ø	I <sub>max</sub>	Ø	I <sub>max</sub>	Ø	I <sub>max</sub>
3.3 kW	-	-	2,5 mm <sup>2</sup>	11 A	2,5 mm <sup>2</sup>	11 A
5 kW	-	-	2,5 mm <sup>2</sup>	16 A	2,5 mm <sup>2</sup>	16 A
6.6 kW	2,5 mm <sup>2</sup>	19 A	2,5 mm <sup>2</sup>	11 A	2,5 mm <sup>2</sup>	11 A
10 kW (except for 40 V models)	4 mm <sup>2</sup>	28 A	4 mm <sup>2</sup>	16 A	4 mm <sup>2</sup>	16 A
10 kW (40 V models)	2,5 mm <sup>2</sup>	19 A	2,5 mm <sup>2</sup>	19 A	2,5 mm <sup>2</sup>	19 A
15 kW	4 mm <sup>2</sup>	28 A	4 mm <sup>2</sup>	28 A	4 mm <sup>2</sup>	28 A

The included connection plug can receive lose/soldered cable ends of up to 10 mm<sup>2</sup> resp. cable end sleeves up to 6 mm<sup>2</sup>. The longer the connection cable, the higher the voltage loss due to the cable resistance. Therefore the mains cables should be kept as short as possible or use bigger cross section.

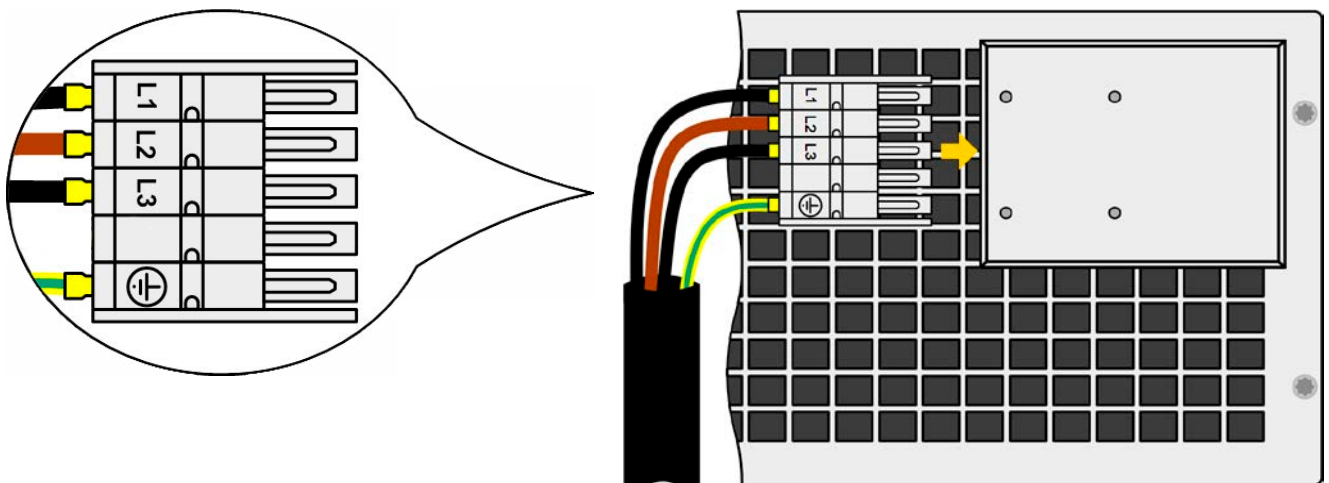


Figure 7 - Example for a mains cable (cable not included in delivery)

### 2.3.4.2 US models for 208 V

The equipment is delivered with a 4 pole mains plug. Depending on model, this will be connected with a 2-phase or 3-phase mains supply, which has to be connected according to the labelling on the plug and the table below. Required for the mains connection are following phases:

Nominal power	Phases	Supply type
3.3 kW / 5 kW	L2, L3, PE	Three-phase
6.6 kW / 10 kW	L1, L2, L3, PE	Three-phase
15 kW	L1, L2, L3, PE	Three-phase
>15 kW	L1, L2, L3, PE	Three-phase



**The PE conductor is imperative and must always be wired!**

For the sizing of wiring **cross section**, the power of the device and the cable length are decisive. The table below gives the maximum output current for each phase.

Based on the connection of a **standalone unit**:

Nominal power	L1		L2		L3	
	$\varnothing$	$I_{\max}$	$\varnothing$	$I_{\max}$	$\varnothing$	$I_{\max}$
3.3 kW	-	-	AWG 14	22 A	AWG 14	22 A
5 kW	-	-	AWG 12	32 A	AWG 12	32 A
6.6 kW	AWG 10	38 A	AWG 10	22 A	AWG 10	22 A
10 kW (except for 40 V models)	AWG 8	56 A	AWG 8	32 A	AWG 8	32 A
10 kW (40 V models)	AWG 10	38 A	AWG 10	38 A	AWG 10	38 A
15 kW	AWG 8	56 A	AWG 8	56 A	AWG 8	56 A

The included connection plug can receive lose/soldered cable ends of up to 16 mm<sup>2</sup> (AWG 6). The longer the connection cable, the higher the voltage loss due to the cable resistance. Therefore the mains cables should be kept as short as possible or use bigger cross section.

Connection schemes:

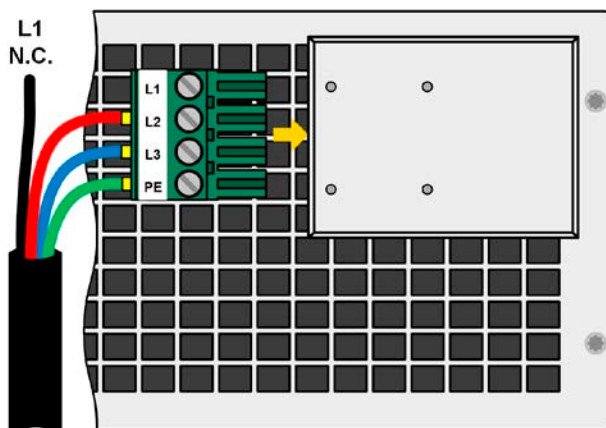


Figure 8 - L2+L3+PE connection scheme for 3.3/5 kW models

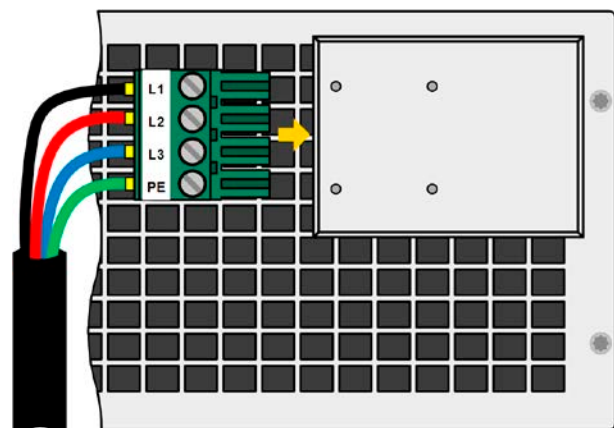




Figure 9 - Full connection scheme for 6.6 kW or higher models

## 2.3.4.3 Connection variants

Depending on the max. output power of a certain model, it requires two or three phases of a three-phase AC supply. In case **multiple units with 3.3 kW to 10 kW power rating** are connected to the same AC supply point, it is recommended to take care for balanced current distribution on the three phases. See table in 2.3.4 for the max. phase currents.

The **15 kW** models are an exception, because they already consume balanced current on all three phases they require. As long as only such models are installed, no unbalanced AC load is expected. Systems of 15 kW models mixed with 10 kW models (note: the 10 kW model PS 9040-510 3U is internally configured like a 15 kW) or models with lower power are not automatically balanced.

Suggestions to assign phases:

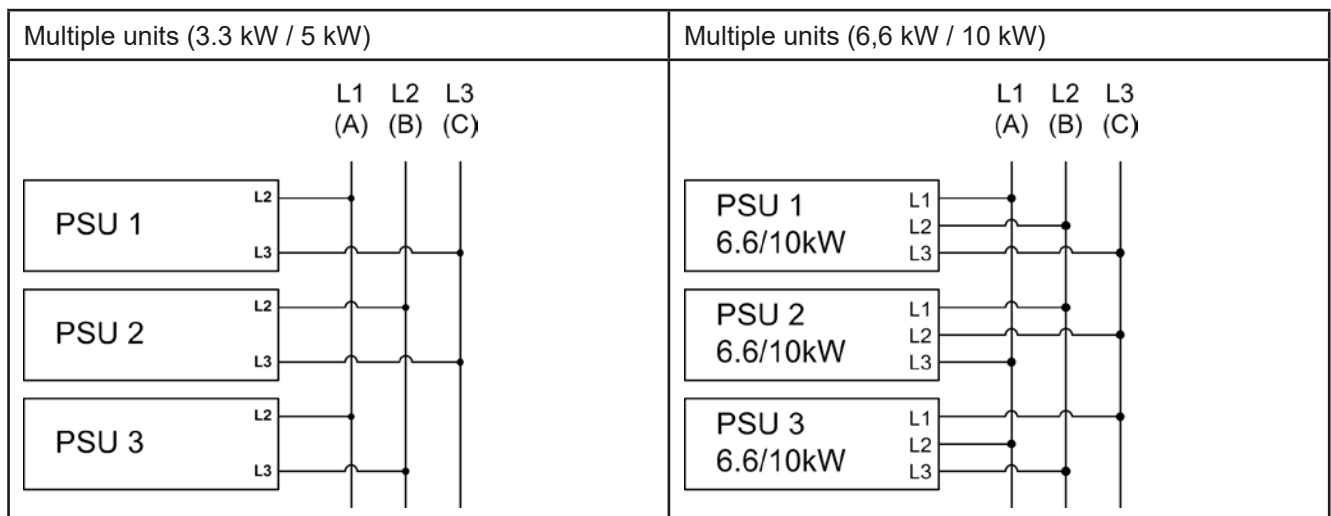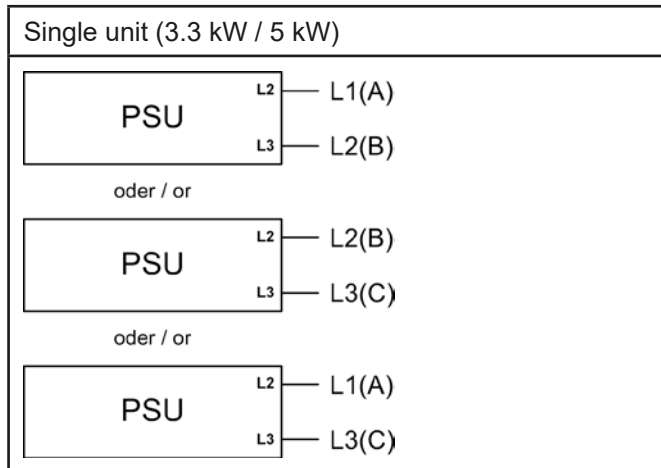

### 2.3.5 Connection to DC loads



- In the case of a device with a high nominal current and hence a thick and heavy DC connection cable it is necessary to take account of the weight of the cable and the strain imposed on the DC connection. Especially when mounted in a 19" cabinet or similar, where the cable hangs on the DC output, a strain reliever should be used.
- Connection to and operation with transformerless DC-AC inverters (for example solar inverters) is restricted, because the inverter can shift the potential of negative output (DC-) against PE (ground), which is generally limited to a specific level. See „1.8.3. Specific technical data (EU models)“ or „1.8.4. Specific technical data (US models)“, item “Insulation”

The DC load output is on the back side of the device and is **not** protected by a fuse. The cross section of the connection cable is determined by the current consumption, cable length and ambient temperature.







For cables up to 1.5 m and average ambient temperature up to 50°C, we recommend:

up to <b>30 A</b> :	6 mm <sup>2</sup>	up to <b>70 A</b> :	16 mm <sup>2</sup>
up to <b>90 A</b> :	25 mm <sup>2</sup>	up to <b>140 A</b> :	50 mm <sup>2</sup>
up to <b>170 A</b> :	70 mm <sup>2</sup>	up to <b>210 A</b> :	95 mm <sup>2</sup>
up to <b>340 A</b> :	2x70 mm <sup>2</sup>	up to <b>510 A</b> :	2x120 mm <sup>2</sup>

**per connection pole** (multi-conductor, insulated, openly suspended). Single cables of, for example, 70 mm<sup>2</sup> may be replaced by e.g. 2x35 mm<sup>2</sup> etc. If the cables are long then the cross section must be increased to avoid voltage loss and overheating.

#### 2.3.5.1 DC terminal types

The table below shows an overview of the various DC terminals. It is recommended that connection of load cables always utilises flexible cables with ring lugs.

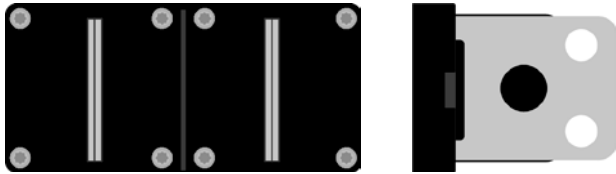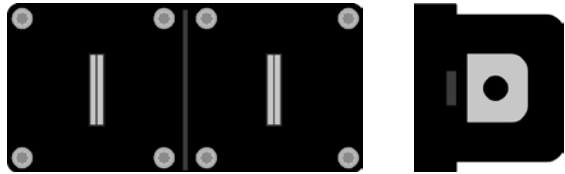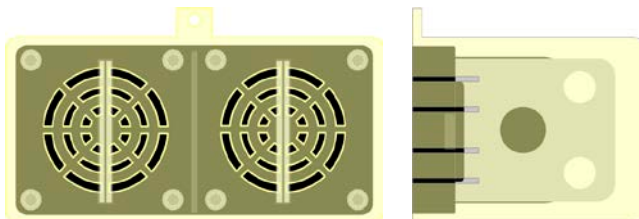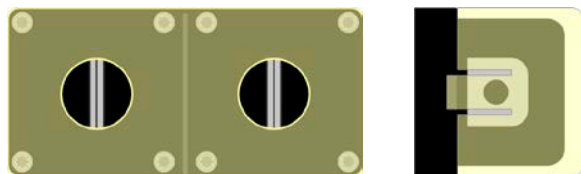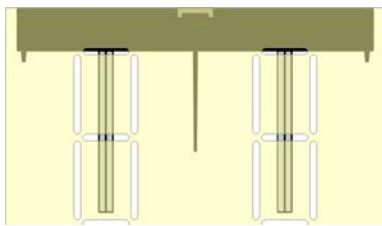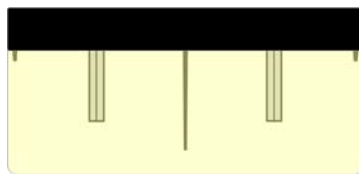Type 1: Models up to 360 V output voltage	Type 2: Models from 500 V output voltage
	
M8 bolt on a metal rail Recommendation: ring lug with a 8 mm hole	M6 bolt on a metal rail Recommendation: ring lug with a 6 mm hole
	
	


#### 2.3.5.2 Cable lead and plastic cover

A plastic cover for contact protection is included for the DC terminal. It should always be installed. The cover for type 2 (see picture above) is fixed to the connector itself, for type 1 to the back of the device. Furthermore the cover for type 1 has break outs so that the supply cable can be laid in various directions.




*The connection angle and the required bending radius for the DC cable must be taken into account when planning the depth of the complete device, especially when installing in a 19" cabinet or similar. For type 2 connectors only a horizontal lead can be used to allow for installation of the cover.*

Examples of the type 1 terminal:

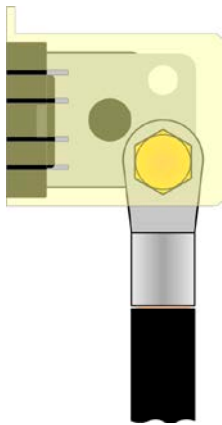

- 90° up or down
- space saving in depth
- no bending radius

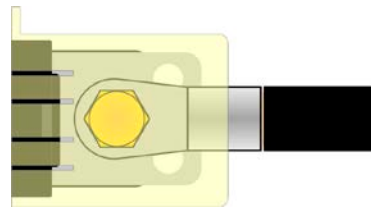

- horizontal lead
- space saving in height
- large bending radius

### 2.3.6 Connection of remote sensing

In order to compensate, to a certain degree, the voltage loss in a DC cable, the device provides the possibility to connect the remote sensing input "Sense" to the load. The device recognizes the remote sensing mode automatically and regulates the output voltage (only in CV operation) at the load rather than at its own DC output.

In the technical specifications (see section „1.8.3. Specific technical data (EU models)“) the level of maximum possible compensation is given. If that is insufficient, the cable cross section must be increased.



Both pins „NC“ of the Sense connector must not be wired!



- Remote sensing is only effective during constant voltage operation (CV) and for other regulation modes the sense input should be disconnected, if possible, because connecting it generally increases the oscillation tendency.
- The cross section of the sense cables is noncritical. However, it should be increased with increasing cable length. Recommendation: for cables up to 5 m use at least 0.5 mm<sup>2</sup>
- Sense cables should be twisted and laid close to the DC cables to damp oscillation. If necessary, an additional capacitor should be installed at the load/consumer to eliminate oscillation
- The sense cables must be connected + to + and - to - at the load, otherwise both systems may be damaged

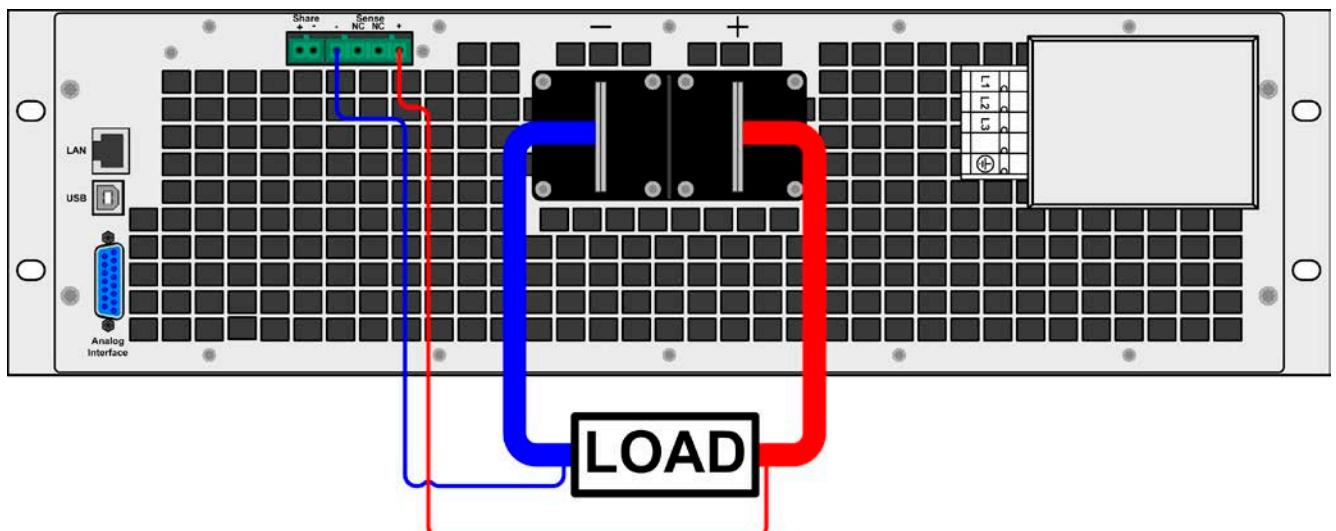


Figure 10 - Example for remote sensing wiring



### 2.3.7 Grounding of the DC output

Individually operated devices can always be grounded from the DC minus pole, i.e. can be directly connected to PE. The DC plus pole, however, may only be grounded for output voltages up to 400 V.

For this reason, for all models which can provide an output voltage of more than 400 V, earthing of the DC plus pole is not allowed, because it will shift the potential of the DC minus pole in negative direction.



- Grounding of the DC-plus pole for any model with >400 V nominal voltage only at one's own risk! Risk of damaging the device! Risk of voiding warranty!
- If grounding one of the DC output poles check if any pole of the load is already grounded. This could lead to a short circuit!

### 2.3.8 Connecting the "Share" bus

The "Share" connector on the back side is intended to balance the current of multiple units in parallel operation by balancing the output voltage in CV operation. Thus it's recommended to use the Share bus in this operation mode. For further information about this mode of operation can be found in section „3.9.1. *Parallel operation in Share bus mode*“.

The Share bus furthermore can be used to connect the power supply to a compatible electronic load (see section „1.9.10. *Share Bus connection*“), in order to achieve a correct switchover between sink and source in the so-called two-quadrants operation.

For the connection of the share bus the following must be paid attention to:



- Connection is only permitted between compatible devices (see „1.9.10. *Share Bus connection*“ for details) and between a max. of 16 units
- When switching off one or multiple units of a parallel system, because less power is required for an application, it's recommended to remove the Share bus plug from the inactive units, because their Share bus port's impedance could have a negative impact on the Share bus
- If a two-quadrants operation system has to be set up where multiple power supplies are connected to one electronic load unit or a group of electronic loads, all units should be connected via Share bus.
- The Share bus is referenced to DC minus. When building a series connection (where allowed, depending on model), the DC minus will shift its potential and so will the Share bus

### 2.3.9 Connecting the analog interface

The 15 pole connector (Type: Sub-D, D-Sub) on the rear side is an analog interface. To connect this to a controlling hardware (PC, electronic circuit), a standard plug is necessary (not included in the scope of delivery). It is generally advisable to switch the device completely off before connecting or disconnecting this connector, but at least the DC output.



The analog interface is galvanically isolated from the device internally. Therefore do not connect any ground of the analog interface (AGND) to the DC minus output as this will cancel the galvanic isolation.

### 2.3.10 Connecting the USB port

In order to remotely control the device via this port, connect the device with a PC using the included USB cable and switch the device on.

#### 2.3.10.1 Driver installation (Windows)

On the initial connection with a PC the operating system will identify the device as new hardware and will try to install a driver. The required driver is for a Communications Device Class (CDC) device and is usually integrated in current operating systems such as Windows 7 or 10. But it is strongly recommended to use and install the included driver installer (on CD or USB stick) to gain maximum compatibility of the device to our softwares.

#### 2.3.10.2 Driver installation (Linux, MacOS)

We cannot provide drivers or installation instructions for these operating systems. Whether a suitable driver is available is best found out by searching the Internet.

#### 2.3.10.3 Alternative drivers

In case the CDC drivers described above are not available on your system, or for some reason do not function correctly, commercial suppliers can help. Search the Internet for suppliers using the keywords "cdc driver windows" or "cdc driver linux" or "cdc driver macos".



### 2.3.11 Initial commission

For the first start-up after purchasing and installing the device, the following procedures have to be executed:

- Confirm that the connection cables to be used are of a satisfactory cross section
- Check that the default settings for set values, safety and monitoring functions and communication are suitable for your application and change them where necessary, as described in the manual
- In case of remote control via PC, read the additional documentation for interfaces and software
- In case of remote control via the analog interface, read the section in this manual concerning analog interfaces and, where needed, other appropriate documentation especially concerning the use of such interfaces

### 2.3.12 Initial network setup

The device is delivered with default network parameters (see „3.4.3.6. Menu “Communication”“). The Ethernet/ LAN port is immediately ready for use after the initial commission.

For wiring, i.e. the hardware connection to a network, contact and ask your IT manager or any similar responsible person. Network cable of common type (CAT5 or better) can be used.

In order to set up the network parameter to your needs, you have two options: the setup menu or the device's website. For the configuration in the setup menu please refer to „3.4.3.6. Menu “Communication”“.

For the configuration via the device's website, you need the device to be connected to a network or directly to a PC which can access the default IP 192.168.0.2.

#### ► How to do the network setup on the device website

1. In case the device display is in any kind of menu, leave menu to main display.
2. Open the device website in a browser by entering the default IP (<http://192.168.0.2>) or the default host name (<http://Client>, only possible if there is a running DNS in the network) into the URL box.
3. After the website has been completely loaded, check the status field item “**Access**” to show the status “**free**”. In case it shows different, the device is either already in remote control (**rem**) or blocked from remote control (**local**). If it shows “**local**”, first remove the block. Refer to section „3.5.2. Control locations“ to do that.
4. If it says “**rem**” in the “**Access**” item, skip to step 5. Else enter command **syst:lock on** (attention! space before **on**) into the **SCPI command** box and send with return key. Check if item “**Access**” in status field changes to “**rem-eth**” (means: remote Ethernet).
5. Switch to page **CONFIGURATION** (upper left corner) and set up the network parameters as well as the port here resp. activate DHCP and submit the change with **SUBMIT** button.
6. Wait a few seconds before testing the new IP by entering it in the browser's URL box. Opening the website again by using the host name is only possible after the device has restarted, because only then the new IP is reported to the DNS.

### 2.3.13 Commission after a firmware update or a long period of non-use

In case of a firmware update, return of the equipment following repair or a location or configuration change, similar measures should be taken to those of initial start up. Refer to „2.3.11. Initial commission“.

Only after successful checking of the device as listed may it be operated as usual.

### 3. Operation and application

#### 3.1 Important notes

##### 3.1.1 Personal safety



- In order to guarantee safety when using the device, it is essential that only persons operate the device who are fully acquainted and trained in the required safety measures to be taken when working with dangerous electrical voltages
- For models which can generate a voltage which is dangerous by contact, or is connected to such, the included DC terminal cover, or an equivalent, must always be used
- Whenever the load and DC output are being re-configured, the device should be disconnected from the mains, not only the DC output switched off!

##### 3.1.2 General



- Operation of a power supply without any load or a very small load ( $<0.5\%$  of  $I_{Nom}$ ) is not considered as a normal operation mode
- Technical specifications can probably not be guaranteed when running a power supply without a load
- It is recommended to run a power supply always with at least 10% voltage and current load

### 3.2 Operating modes

A power supply is internally controlled by different control or regulation circuits, which shall bring voltage, current and power to the adjusted values and hold them constant, if possible. These circuits follow typical laws of control systems engineering, resulting in different operating modes. Every operating mode has its own characteristics which is explained below in short form.

#### 3.2.1 Voltage regulation / Constant voltage

Voltage regulation is also called constant voltage operation (CV).

The DC output voltage of a power supply is held constant on the adjusted value, unless the output current or the output power according to  $P = U_{OUT} \cdot I_{OUT}$  reaches the adjusted current or power limit. In both cases the device will automatically change to constant current or constant power operation, whatever occurs first. Then the output voltage can not be held constant anymore and will sink to a value resulting from Ohm's law.

While the DC output is switched on and constant voltage mode is active, then the condition "CV mode active" will be indicated on the display by the abbreviation CV and this message will be passed as a signal to the analog interface, as well stored as status which can also be read as a status message via digital interface.

#### 3.2.2 Current regulation / constant current / current limiting

Current regulation is also known as current limitation or constant current mode (CC).

The DC output current is held constant by the power supply, once the output current to the load reaches the adjusted limit. Then the power supply automatically switches. The current flowing from the power supply is determined by the output voltage and the load's true resistance. As long as the output current is lower than the adjusted current limit, the device will be either in constant voltage or constant power mode. If, however, the power consumption reaches the set maximum power value, the device will switch automatically to power limiting and sets the output current according to  $I_{MAX} = P_{SET} / U_{IN}$ , even if the maximum current value is higher. The current set value, as determined by the user, is always an upper limit only.

While the DC output is switched on and constant current mode is active, then the condition "CC mode active" will be indicated on the display by the abbreviation CC and this message will be passed as a signal to the analog interface, as well stored as status which can also be read as a status message via digital interface.


### 3.2.3 Power regulation / constant power / power limiting

Power regulation, also known as power limiting or constant power (CP), keeps the DC output power of a power supply constant if the current flowing to the load in relation to the output voltage and the resistance of load reaches the adjusted value according to  $P = U \cdot I$  resp.  $P = U^2 / R$ . The power limiting then regulates the output current according to  $I = \sqrt{P / R}$ , where  $R$  is the load's resistance.

Power limiting operates according to the auto-range principle such that at lower output voltages higher current flows and vice versa in order to maintain constant power within the range  $P_N$  (see diagram to the right)

Constant power operation primarily impacts the output current. This means, the adjusted maximum output current can not be achieved if the maximum power value limits the output current according to  $I = P / U$ . The adjustable set value of current, as indicated in the display, is always only an upper limit.

While the DC output is switched on and constant power mode is active, then the condition "CP mode active" will be shown on the display by the abbreviation CP, as well stored as status which can also be read as a status message via digital interface.

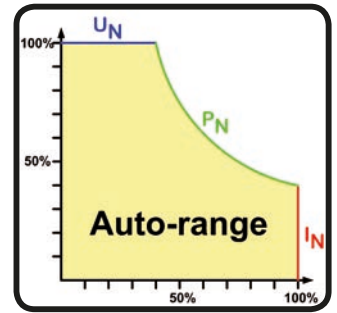

### 3.3 Alarm conditions



*This section only gives an overview about device alarms. What to do in case your device indicates an alarm condition is described in section „3.6. Alarms and monitoring“.*

As a basic principle, all alarm conditions are signalled optically (Text + message in the display), acoustically (if activated) and as a readable status via the digital interface. With any alarm occurring, the DC output of the device is switched off. In addition, the alarms OT and OVP are reported as signals on the analogue interface.

#### 3.3.1 Power Fail

Power Fail (PF) indicates an alarm condition which may have various causes:

- AC input voltage too low (mains undervoltage, mains failure)
- Defect in the input circuit (PFC)



*Switching off the device by the mains switch can not be distinguished from a mains blackout and thus the device will signalise a PF alarm every time the device is switched off. This can be ignored.*

#### 3.3.2 Overtemperature

An overtemperature alarm (OT) can occur if an excess temperature inside the device causes to switch off the DC output. This alarm condition is shown as the message “Alarm: OT” in the display. In addition, the condition will be passed as a signal to the analog interface, as well as alarm status and counter which both can be read via digital interface.

#### 3.3.3 Overvoltage

An overvoltage alarm (OVP) will switch off the DC output and can occur if:

- the power supply itself, as a voltage source, generates an output voltage higher than set for the overvoltage alarm limit (OVP, 0...110%  $U_{Nom}$ ) or the connected load somehow returns voltage higher than set for the overvoltage alarm limit
- the OV threshold has been adjusted too close above the output voltage. If the device is in CC mode and if it then experiences a negative load step, it will make the voltage rise quickly, resulting in a voltage overshoot for a short moment which can already trigger the OVP

This function serves to warn the user of the power supply acoustically or optically that the device probably has generated an excessive voltage which could damage the connected load application.



The device is not fitted with protection from external overvoltage.

#### 3.3.4 Overcurrent

An overcurrent alarm (OCP) will switch off the DC output and can occur if:

- The output current in the DC output reaches the adjusted OCP limit.

This function serves to protect the connected load application so that this is not overloaded and possibly damaged due to an excessive current.

#### 3.3.5 Overpower

An overpower alarm (OPP) will switch off the DC output and can occur if:

- the product of the output voltage and output current in the DC output reaches the adjusted OPP limit.

This function serves to protect the connected load application so that this is not overloaded and possibly damaged due to an excessive power consumption.

### 3.4 Manual operation

#### 3.4.1 Switching the device on

The device should, as far as possible, always be switched on using the rotary switch on the front of the device. Alternatively this can take place using an external cutout (contactor, circuit breaker) of suitable current capacity.

After switching on, the display will show the manufacturers logo for a few seconds, plus some information like device model, firmware version(s), serial number and item number and will then be ready for use. In setup (see section „3.4.3. Configuration in the setup menu“) in the second level menu “**General settings**” is an option “**Output after power ON**” in which the user can determine the condition of the DC output after power-up. Factory setting here is “**OFF**”, meaning that the DC output on power-up is always switched off. Selection “**Restore**” means that the last condition of the DC output will be restored, either on or off. All set values are always saved and restored.




*For the time of the start phase the analog interface can signal undefined statuses on the output pins such as OT or OVP. Those signals must be ignored until the device has finished booting and is ready to work.*

#### 3.4.2 Switching the device off

On switch-off the last output condition and the most recent set values are saved. Furthermore, a PF alarm (power failure) will be reported, but can be ignored.

The DC output is immediately switched off and after a short while fans will shut down and after another few seconds the device will be completely powered off.

#### 3.4.3 Configuration in the setup menu

The setup menu serves to configure all operating parameters which are not constantly required. It can be entered by pushing , but only while the DC output is switched off. See figures below.

If the DC output is switched on the settings menu will not be shown, but the quick menu and some status information.

Menu navigation is done with the pushbuttons ,  and . Parameters (values, settings) are set using the rotary knobs.


The assignments of the rotary knobs, if multiple values can be set in a particular menu, is always the same: parameters on the left-hand side -> left-hand knob, parameters on the right-hand side -> right-hand knob



The menu structure is shown schematically on the next page. Some setting parameters are self-explanatory, others are not. The latter will be explained on the pages following.



*Underlined parameters show the default value after delivery or reset.*

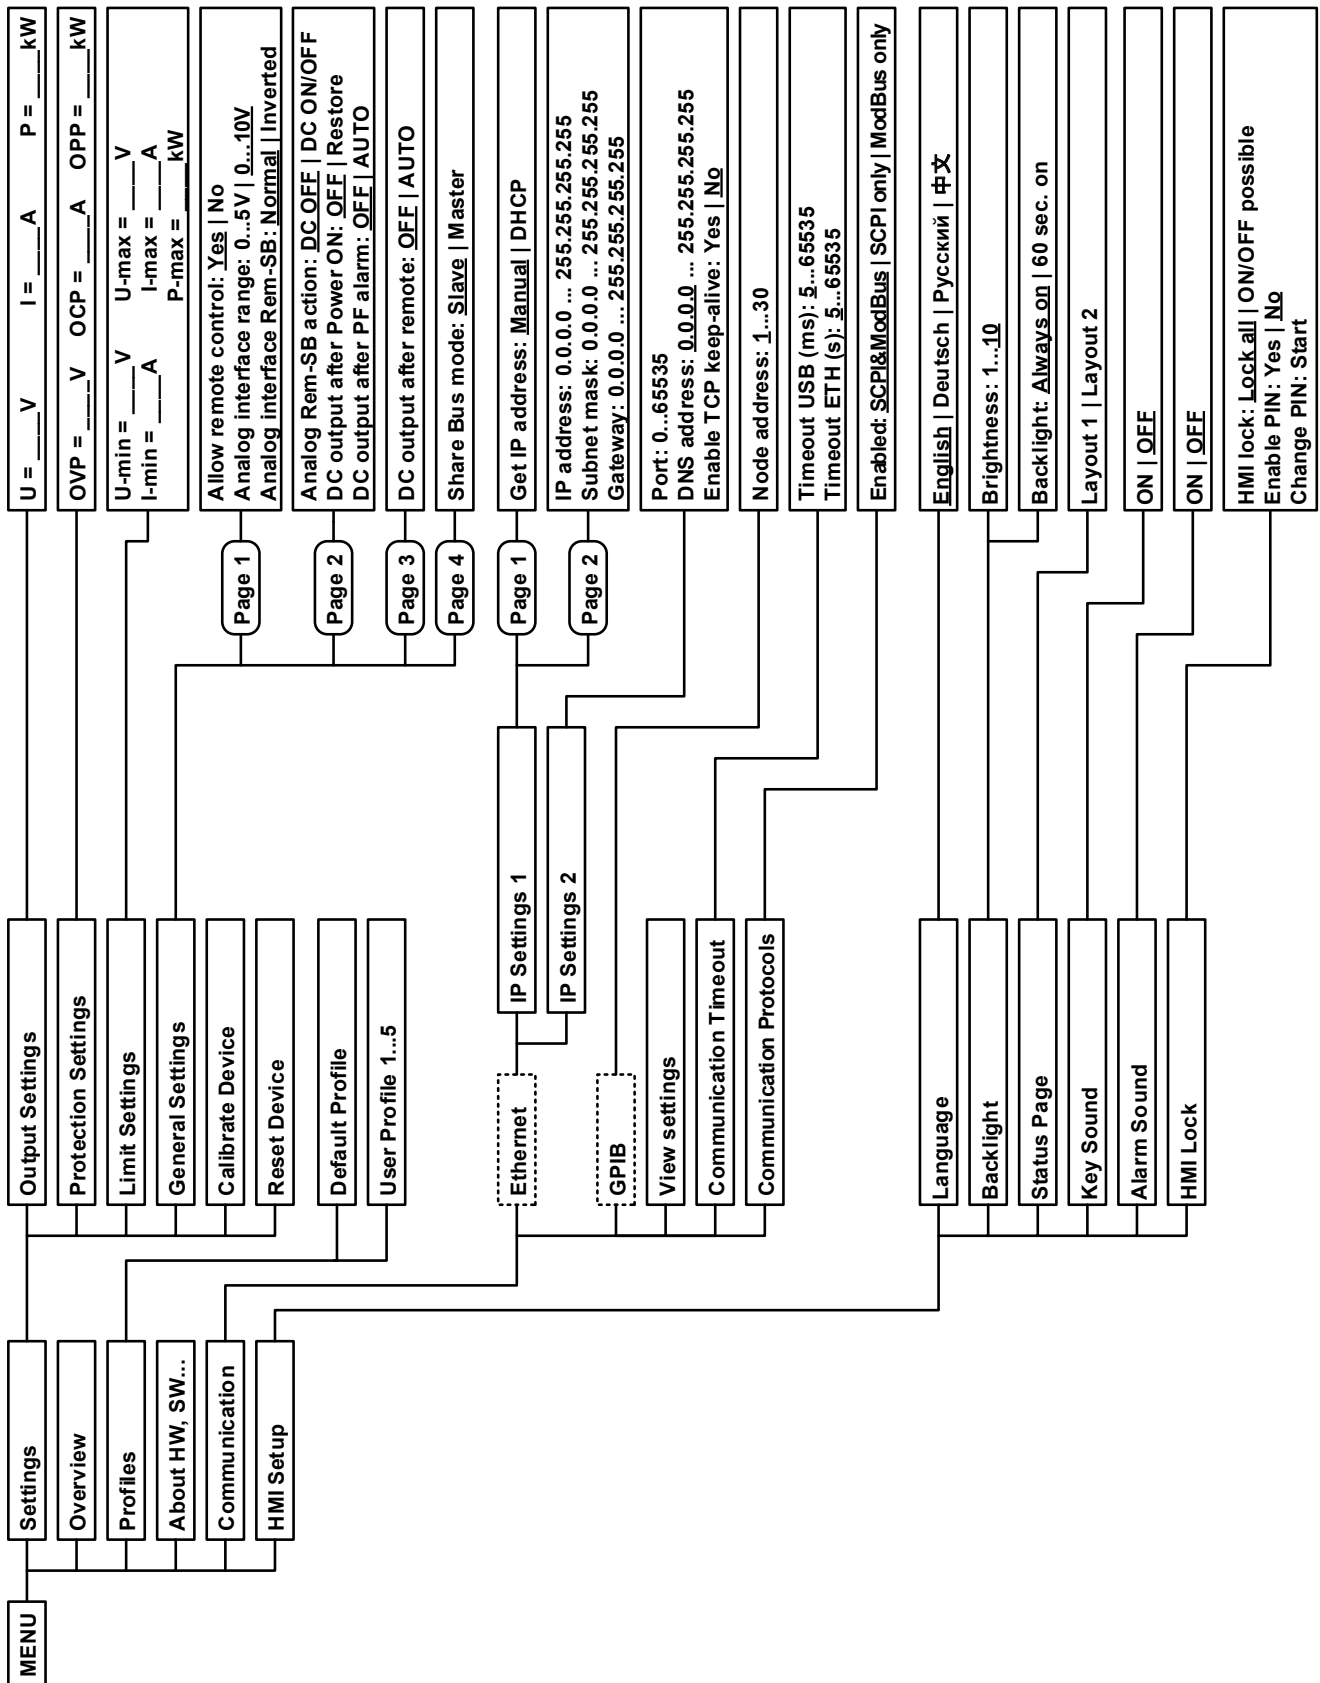



## 3.4.3.1 Menu “General Settings”


Element	P.	Description
Allow remote control	1	Selection “NO” means that the device cannot be remotely controlled over any of the digital or analog interfaces. If remote control is not allowed, the status will be shown as “Local” in the status area on the main display. Also see section 1.9.6.1
Analog interface range	1	Selects the voltage range for the analog set input values, actual output values and reference voltage output of the analog interface on the rear. <ul style="list-style-type: none"> <li>• <b>0...5 V</b> = Range is 0...100% set /actual values, reference voltage 5 V</li> <li>• <b>0...10 V</b> = Range is 0...100% set /actual values, reference voltage 10 V</li> </ul> See also section „3.4.3. Configuration in the setup menu“
Analog interface Rem-SB	1	Determines with “normal” (default), that the function and levels of input Rem-SB are as described in „3.5.4.4. Analog interface specification“. With selection “inverted”, the described function is logically inverted. Also see example a) in „3.5.4.7. Application examples“.
Analog Rem-SB action	2	Since Firmware 2.03, the input REM-SB of the analog interface can be used to control the DC output of the device even without remote control via analog interface being activated. This setting determines the type of action: <ul style="list-style-type: none"> <li>• <b>DC OFF</b> = Toggling the pin only switches the DC output off</li> <li>• <b>DC ON/OFF</b> = If the DC output has been switched on before, toggling the pin can switch the output off and on again</li> </ul>
DC output after power ON	2	Determines the condition of the DC output after power-up. <ul style="list-style-type: none"> <li>• <b>OFF</b> = DC output is always off after switching on the device.</li> <li>• <b>Restore</b> = DC output condition will be restored to the condition prior to switch off.</li> </ul>
DC output after PF alarm	2	Determines how the DC output shall react after a power fail (PF) alarm has occurred: <ul style="list-style-type: none"> <li>• <b>OFF</b> = DC output will be switched off and remain until user action</li> <li>• <b>AUTO</b> = DC output will switch on again after the PF alarm cause is gone and if it was switched on before the alarm occurred</li> </ul>
DC output after remote	3	Determines the condition of the DC output after leaving remote control either manually or by command. <ul style="list-style-type: none"> <li>• <b>OFF</b> = DC output will be always off when switching from remote to manual</li> <li>• <b>AUTO</b> = DC output will keep the last condition</li> </ul>
Share Bus mode	4	Default setting: <b>Slave</b>  For parallel operation of multiple units, where the Share bus connection is used. In parallel operation, any unit can be master and all other shall be set to “Slave”, else the bus cannot work correctly.

## 3.4.3.2 Menu “Calibrate Device”

From within this menu, a calibration and readjustment procedure for output voltage and current can be started. For further details refer to „4.3. Calibration (readjustment)“.

Element	Description
Voltage calibration	Starts the semi-automatic calibration procedure for output voltage U
Sense volt. calibration	Starts the semi-automatic calibration procedure for remote sensing input „Sense“
Current calibration	Starts the semi-automatic calibration procedure for output current I
Set calibration date	Here you can enter the date of the most recent calibration (year, month, day)
Save and exit	This menu item saves and leaves the setup menu to main display

## 3.4.3.3 Menu “Reset Device”

Entering this menu item will prompt for acknowledgement to reset the device completely to default settings and set values. Selection “No” will cancel the reset procedure, while selection “Yes”, submitted by  button, will instantly reset the device.



### 3.4.3.4 Menu “Profiles”

See „3.8 Loading and saving a user profile“ on page 67.

### 3.4.3.5 Menus “Overview” and “About HW, SW...”

This menu pages display an overview of the set values (U, I, P) and related protection settings (OVP, OCP, OPP) as well as limits settings and an alarm history (counter) of alarms that might have occurred since the last time the unit was switched on. Furthermore they show device relevant data such as serial number, article number etc.

### 3.4.3.6 Menu “Communication”


Here settings for the Ethernet port (on rear side of device, only available with standard models) or the optional GPIB port are made. The USB port there doesn't require any settings.

When delivered or after a complete reset, the Ethernet port has following **default settings** assigned:

- DHCP: off
- IP: 192.168.0.2
- Subnet mask: 255.255.255.0
- Gateway: 192.168.0.1
- Port: 5025
- DNS: 0.0.0.0
- Host name: Client (not configurable via HMI)
- Domain: Workgroup (not configurable via HMI)

Those settings can be changed anytime and configured to meet local requirements. Furthermore, there are global communication settings available regarding timing and protocols.

#### Submenu “IP Settings 1”

Element	Description
<b>Get IP address</b>	<p><b>Manual</b> (default): uses the default (after delivery or reset) or the last set network parameters. Those parameters are not overwritten by selection “<b>DHCP</b>” and remain when switching back from “<b>DHCP</b>” to “<b>Manual</b>”</p> <p><b>DHCP</b>: after switching to DHCP and submitting the change with button , the device will instantly try to get network parameters (IP, subnet mask, gateway, DNS) assigned from a DHCP server. If the attempt fails, the device will use the settings from “<b>Manual</b>” again. In this case, the overview in screen “<b>View settings</b>” will indicated the DHCP status as “<b>DHCP (failed)</b>”, otherwise as “<b>DHCP(active)</b>”</p>
<b>IP address</b>	Only available with setting “ <b>Get IP address = Manual</b> ”. Default value: 192.168.0.2 Permanent manual setting of the device's IP address in standard IP format
<b>Subnet mask</b>	Only available with setting “ <b>Get IP address = Manual</b> ”. Default value: 255.255.255.0 Permanent manual setting of the subnet mask in standard IP format
<b>Gateway</b>	Only available with setting “ <b>Get IP address = Manual</b> ”. Default value: 192.168.0.1 Permanent manual setting of the gateway address in standard IP format

#### Submenu “IP Settings 2”

Element	Description
<b>Port</b>	<p>Default value: 5025</p> <p>Adjust the socket port here, which belongs to the IP adress and serves for TCP/P access when controlling the device remotely via Ethernet</p>
<b>DNS address</b>	<p>Default value: 0.0.0.0</p> <p>Permanent manual setting of the network address of a domain name server (short: DNS) which has to be present in order to translate the host name to the device's IP, so the device could alternatively access by the host name</p>
<b>Enable TCP keep-alive</b>	<p>Default setting: No</p> <p>Activates/deactivates the so-called “keep-alive” functionality of Ethernet connections</p>

Submenu “**Node address**” (only displayed for devices with GPIB interface)

Element	Description
<b>Node address</b>	Default value: 1 Adjusts the primary GPIB address for the GPIB port which is available with installed option 3W. Address range: 1...30. Secondary address is not used.

Submenu “**Communication Protocols**”

Element	Description
<b>Enabled</b>	Default value: SCPI&ModBus Enables or disables SCPI or ModBus communication protocols for the device. The change is immediately effective after submitting it with ENTER button. Only one of both can be disabled. The optional GPIB port only supports SCPI protocol, so this settings is ignored for this port.

Submenu “**Communication Timeout**”

Element	Description
<b>Timeout USB (ms)</b>	Default value: 5 USB/RS232 communication timeout in milliseconds. Defines the max. time between two subsequent bytes or blocks of a transferred message. For more information about the timeout refer to the external programming documentation “Programming ModBus & SCPI”.
<b>Timeout ETH (s)</b>	Default value: 5 Defines a timeout after which the device would close the socket connection if there was no command communication between the controlling unit (PC, PLC etc.) and the device for the adjusted time. The timeout is ineffective as long as option “TCP Keep-alive” (see above) is enabled.

Screen “**View settings**”

This screen lists an overview of all active network and Ethernet port related settings and parameters, the status of DHCP, the MAC address and also the domain and host name, which can not be set in the device’s setup menu.

### 3.4.3.7 Menu “HMI Setup”

These settings refer exclusively to the control panel (HMI) and the display. The table lists all available settings for the HMI, no matter in which submenu they can be found.

Element	Description
<b>Language</b>	Selection of the display language between German, English, Russian or Chinese. Default setting: English
<b>Backlight</b>	The choice here is whether the backlight remains permanently on or if it should be switched off when no input via push buttons or rotary knob is done for 60 s. As soon as input is done, the backlight returns automatically. Furthermore the backlight intensity can be adjusted here. Default settings: 100, Always on
<b>Status page</b>	Switches to a different main screen layout. The user can select between two layouts which are depicted by small graphics as a preview. Also see section „3.4.6. Switching the main screen view“. Default setting: Layout 1
<b>Key Sound</b>	Activates or deactivates sounds when pressing a button on the HMI. It can usefully signal that the action has been accepted. Default setting: off
<b>Alarm Sound</b>	Activates or deactivates the additional acoustic signal of an alarm or user defined event which has been set to “Action = ALARM”. See also „3.6. Alarms and monitoring“. Default setting: off
<b>HMI Lock</b>	Activates the HMI lock. See „3.7. Control panel (HMI) lock“ for details Default settings: Lock all, No

### 3.4.4 Adjustment limits

By default, all set values (U, I, P) are freely adjustable from 0 to 102% of rated value. This may be obstructive in some applications, especially for protection of applications against overcurrent. Therefore upper and lower limits for current and voltage can be set which limit the range of the adjustable set values.

For power only an upper value limit can be set.








These limits apply to every kind setting a value. That also includes remote control via analog or digital interface. In remote control, the global range of 0...102% (digital) resp. 0...5 V / 0...10 V remains, only narrowed by the limits defined here.

An example: you would define the limits for a model with 80 V, 170 A and 5 kW as depicted in the screen above, with U-min = 10 V and U-max = 75 V. In analog remote control, the active control voltage range for mode 0...10 V results as 1.25 V...9.375 V. As soon as the device is switched to analog remote control, it would put out minimum 10V, even there is nothing connected to voltage control input VSEL.

Beyond those limits, values given by digital commands are not accepted and will return an error (when using SCPI). Values given from analog control voltages are ignored (clipping).

Limit Settings			
U-min=	10.00V	U-max=	75.00V
I-min=	005.0A	I-max=	100.0A
		P-max=	1.50kW

#### ► How to configure the adjustment limits

1. Switch off the DC output and push button  to call the setup menu.
2. Push button  to call submenu **"Settings"**. In the submenu navigate to **"Limit Settings"** and push  again.
3. In the screen you can now adjust the settings **I-min**, **I-max**, **U-min**, **U-max** and **P-max** with the rotary knobs. Switching between values is done with the arrow buttons  .
4. Accept the settings with  or discard them with .



*The adjustment limits are coupled to the set values. It means, that the upper limit (-max) may not be set lower than the corresponding set value. Example: If you wish to set the limit for the current set value I-max to 120 A while the currently adjusted current set value is 150 A, then the set value first would have to be reduced to 120 A or less. The same applies vice versa when adjusting I-min.*

### 3.4.5 Manual adjustment of set values

The set values for voltage, current and power are the fundamental operating possibilities of a power supply and hence the two rotary knobs on the front of the device are usually assigned two of the three values in manual operation. Default assignment is voltage and current.

The set values can only be adjusted with the **rotary knobs**.








*Entering a value changes it at any time, no matter if the output is switched on or off.*



*When adjusting the set values, upper or lower limits may come into effect. See section „3.4.4. Adjustment limits“. Once a limit is reached, the display will show a note like “Limit: U-max” etc. or “[i]” for 1.5 seconds.*

#### ► How to adjust values U, I or P with the rotary knobs

1. First check whether the value to be changed is assigned to one of the rotary knobs. The assignment can be changed by switching the assignment of the right-hand rotary knob with the arrow buttons.
2. With mode **UI** selected and as long as the main display is active, turn the left-hand knob to adjust output voltage and the right-hand knob to adjust the output current. In mode **UP**, turn the right-hand knob to adjust the output power. The arrow buttons   can be used to toggle between adjustment of current and power set value.
3. Any set values can be adjusted with the adjustment limits. For switching the digit to adjust, push the rotary knob that you are currently using to adjust the value. Every push moves the cursor under the digit in clockwise order:  →  → 

### 3.4.6 Switching the main screen view

The main screen, also called status page, with its set values, actual values and device status can be switched from the standard view mode with three values to a simpler mode which only shows two physical values.

The advantage of the alternative view mode is that both actual values are displayed with **bigger numbers**, so they read be read from a larger distance. Refer to „3.4.3.7. Menu “HMI Setup”“ to see where to switch the view mode in the MENU. Comparison:

Layout 1 (standard)



Layout 2 (alternative)



Differences of layout 2:




- The hidden value is shown when switching the knob assignment, which also changes the upper right half of the display
- The actual regulation mode is displayed no matter what pair of physical values is currently shown, as the example in the upper figure on the right side depicts with CV


### 3.4.7 The quick menu

The quick menu offers access to some feature which are also accessible from the regular menu, but here they can be used while the DC output is switched on.

The quick menu is shown when pressing the  button and looks like this:



Navigation in the menu is also done with arrow buttons  /  and .

For example, in this menu it's possible to preset the output values and to submit with button  which allows for set value steps which would not be possible when rotating a knob. Furthermore, the HMI lock can be activated here in a shorter way.


### 3.4.8 Switching the DC output on or off

The DC output of the device can be manually or remotely switched on and off. This can be restricted in manual operation by the control panel being locked.



*Switching the DC output on during manual operation or digital remote control can be disabled by pin REM-SB of the built-in analog interface. For more information refer to 3.4.3.1 and example a) in 3.5.4.7.*

#### ► How to manually switch the DC output on or off

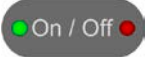1. As long as the control panel (HMI) is not fully locked press the button ON/OFF. Otherwise you are asked to disable the HMI lock first.
2. This button toggles between on and off, as long as a change is not restricted by an alarm or the device is locked in "remote". The current condition is displayed with the green LED in button .

#### ► How to remotely switch the DC output on or off via the analog interface

1. See section „3.4.3. Configuration in the setup menu“.

#### ► How to remotely switch the DC output on or off via the digital interface

1. See the external documentation "Programming Guide ModBus & SCPI" if you are using custom software, or refer to the external documentation of LabView VIs or other software provided by the manufacturer.

## 3.5 Remote control

### 3.5.1 General

Remote control is principally possible via any of the built-in interface ports USB, Ethernet/LAN, analog or optional GPIB. Important here is that only the analog or any digital interface can be in control. It means that if, for example, an attempt were to be made to switch to remote control via the digital interface whilst analog remote control is active (pin Remote = LOW) the device would report an error at the digital interface. In the opposite direction a switch-over via pin Remote would be ignored. In both cases, however, status monitoring and reading of values are always possible.

### 3.5.2 Control locations

Control locations are those locations from where the device can be controlled. Essentially there are two: at the device (manual operation) and outside (remote control). The following locations are defined:

Displayed location	Description
-	If neither of the other locations is displayed then manual control is active and access from the analog or digital interfaces is allowed. This location is not explicitly displayed
<b>Remote</b>	Remote control via any interface is active
<b>Local</b>	Remote control is locked, only manual operation is allowed.

Remote control may be allowed or inhibited using the setting “**Allow remote control**” (see „3.4.3.1. Menu “General Settings”). In inhibited condition the status “**Local**” will be displayed in the status area (lower half, middle) of the display. Activating the inhibit can be useful if the device is remotely controlled by software or some electronic device, but it is required to make adjustments at the device or deal with emergency, which would not be possible remotely.

Activating condition “**Local**” causes the following:

- If remote control via the digital interface is active (“**Remote**”), then remote control is immediately terminated and must be reactivated at the PC once “**Local**” is no longer active
- If remote control is via the analog interface is active (“**Remote**”), then remote operation is only interrupted until remote control is allowed again, because pin “Remote” continues to signal “remote control = on”. Exception: if the level of pin “Remote” is changed to HIGH during the “**Local**” phase

### 3.5.3 Remote control via a digital interface

#### 3.5.3.1 Selecting an interface

The device only supports the built-in digital interfaces USB and Ethernet (standard models) resp. GPIB (optional). For USB, a standard USB cable is included in the delivery, as well as a driver for Windows on CD. The USB interface requires no setup.

The Ethernet interface typically requires network setup (manual or DHCP), but can also be used with its default parameters right from the start.

The GPIB interface requires you to select a unique address in case it is connected to other GPIB bus members.

#### 3.5.3.2 General

For the network port installation refer to „1.9.8. Ethernet port“.

The digital interface require little or no setup for operation and can be directly used with their default configuration. All specific settings will be permanently stored, but could also be reset to defaults with the setup menu item “**Reset Device**”.

Via the digital interface primarily the set values (voltage, current, power) and device conditions can be set and monitored. Furthermore, various other functions are supported as described in separate programming documentation.

Changing to remote control will retain the last set values for the device until these are changed. Thus a simple voltage control by setting a target value is possible without changing any other values.

#### 3.5.3.3 Programming

Programming details for the interfaces, the communication protocols etc. are to be found in the documentation “Programming Guide ModBus & SCPI” which is supplied on the included CD or which is available as download from the manufacturer’s website.



### 3.5.4 Remote control via the analog interface (AI)

#### 3.5.4.1 General

The built-in, up to 1500 V DC galvanically isolated, 15-pole analog interface (short: AI) is on the rear side of the device offers the following possibilities:

- Remote control of current, voltage and power
- Remote status monitoring (CC/CP, CV)
- Remote alarm monitoring (OT, OVP, PF)
- Remote monitoring of actual values
- Remote on/off switching of the DC output

Setting the **three** set values via the analog interface always takes place concurrently. It means, that for example the voltage can not be given via the AI and current and power set by the rotary knobs, or vice versa.

The OVP set value and other supervision (events) and alarm thresholds cannot be set via the AI and therefore must be adapted to the given situation before the AI is put in operation. Analog set values can be fed in by an external voltage or generated by the reference voltage on pin 3. As soon as remote control via the analog interface is activated, the values displayed will be those provided by the interface.

The AI can be operated in the common voltage ranges 0...5 V and 0...10 V in each case 0...100% of the nominal value. The selection of the voltage range can be done in the device setup. See section „3.4.3. Configuration in the setup menu“ for details.

The reference voltage sent out from Pin 3 (VREF) will be adapted accordingly and is then:

**0-5 V:** Reference voltage = 5 V, 0...5 V set values (VSEL, CSEL, PSEL) correspond to 0...100% nominal values, 0...100% actual values correspond to 0...5 V at the actual value outputs (CMON, VMON).

**0-10 V:** Reference voltage = 10 V, 0...10 V set values (VSEL, CSEL, PSEL) correspond to 0...100% nominal values, 0...100% actual values correspond to 0...10 V at the actual value outputs (CMON, VMON).

Input of excess set values (e.g. >5 V in selected 5 V range or >10 V in the 10 V range) are clipped by setting the set value at 100%.

**Before you begin, please read these important notes about the use of the interface:**



*After powering the device and during the start phase the AI signals undefined statuses on the output pins such as OT/PF or OVP. Those must be ignored until is ready to work.*

- Analog remote control of the device must be activated by switching pin “REMOTE” (5) first
- Before the hardware is connected that will control the analog interface, it shall be checked that it can't provide voltage to the pins higher than specified
- Set value input, such as VSEL, CSEL and PSEL, must not be left unconnected (i.e. floating)
- It is always required to provide all three set values at once. In case any of the set values is not used for adjustment, it can be tied to a defined level or connected to pin VREF (solder bridge or different), so it gives 100%



**The analog interface is galvanically isolated from the DC output. Therefore do not connect any ground of the analog interface to the DC- or DC+ output, if not absolutely necessary!**

#### 3.5.4.2 Resolution and sample rate

The analog interface is internally sampled and processed by a digital microcontroller. This causes a limited resolution of analog steps. The resolution is the same for set values (VSEL etc.) and actual values (VMON/CMON) and is 26214. Due to tolerances, the truly achievable resolution can be slightly lower.

There is furthermore a max. sample rate of 500 Hz. It means, the device can acquire analog set values and states on digital pins 500 times per second.



### 3.5.4.3 Acknowledging device alarms

Device alarms (see 3.6.2) are always indicated in the front display and some of them are also reported as signal on the analog interface socket (see 3.5.4.4), for example the overvoltage alarm (OV), which is considered as critical.

In case of a device alarm occurring during remote control via analog interface, the DC output will be switched off the same way as in manual control. While alarms OT and OV can be monitored via the corresponding pins of the interface, other alarms like power fail (PF) can't. Those could only be monitored and detected via the actual values of voltage and current being all zero contrary to the set values.

Device alarms such as OV, OC and OP have to be acknowledged, either by the user or by the controlling unit. Also see „3.6.2. Device alarm handling“. Acknowledgement is done with pin REM-SB switching the DC output off and on again, means a HIGH-LOW-HIGH edge (min. 50ms for LOW) when using the default level setting for this pin.

### 3.5.4.4 Analog interface specification

Pin	Name	Type*	Description	Default levels	Electrical specification
1	VSEL	AI	Set voltage value	0...10 V or. 0...5 V correspond to 0..100% of $U_{Nom}$	Accuracy 0-5 V range: < 0.4% ***** Accuracy 0-10 V range: < 0.2% ***** Input impedance $R_i > 40\text{ k} \dots 100\text{ k}$
2	CSEL	AI	Set current value	0...10 V or. 0...5 V correspond to 0..100% of $I_{Nom}$	
3	VREF	AO	Reference voltage	10 V or 5 V	Tolerance < 0.2% at $I_{max} = +5\text{ mA}$ Short-circuit-proof against AGND
4	DGND	POT	Ground for all digital signals		For control and status signals.
5	REMOTE	DI	Switching internal / remote control	Remote = LOW, $U_{Low} < 1\text{ V}$ Internal = HIGH, $U_{High} > 4\text{ V}$ Internal = Open	Voltage range = 0...30 V $I_{Max} = -1\text{ mA}$ bei 5 V $U_{LOW}$ to HIGH typ. = 3 V Rec'd sender: Open collector against DGND
6	OT / PF	DO	Overheating or power fail*** alarm	Alarm OT= HIGH, $U_{High} > 4\text{ V}$ No Alarm OT= LOW, $U_{Low} < 1\text{ V}$	Quasi open collector with pull-up against $V_{cc}$ ** With 5 V on the pin max. flow +1 mA $I_{Max} = -10\text{ mA}$ at $U_{CE} = 0,3\text{ V}$ $U_{Max} = 30\text{ V}$ Short-circuit-proof against DGND
7	-	-	-	-	-
8	PSEL	AI	Set power value	0...10 V or. 0...5 V correspond to 0..100% von $P_{Nom}$	Accuracy 0-5 V range: < 0.4% ***** Accuracy 0-10 V range: < 0.2% ***** Input impedance $R_i > 40\text{ k} \dots 100\text{ k}$
9	VMON	AO	Actual voltage	0...10 V or. 0...5 V correspond to 0..100% von $U_{Nom}$	
10	CMON	AO	Actual current	0...10 V or. 0...5 V correspond to 0..100% von $I_{Nom}$	Accuracy < 0.2% at $I_{Max} = +2\text{ mA}$ Short-circuit-proof against AGND
11	AGND	POT	Ground for all analog signals		For -SEL, -MON, VREF Signals
12	-	-	-	-	-
13	REM-SB	DI	DC output OFF (DC output ON) (ACK alarms ****)	Off = LOW, $U_{Low} < 1\text{ V}$ On= HIGH, $U_{High} > 4\text{ V}$ On = Open	Voltage range = 0...30 V $I_{Max} = +1\text{ mA}$ at 5 V Rec'd sender: Open collector against DGND
14	OVP	DO	Overvoltage alarm	Alarm OV = HIGH, $U_{High} > 4\text{ V}$ No alarm OV = LOW, $U_{Low} < 1\text{ V}$	Quasi open collector with pull-up against $V_{cc}$ ** With 5 V on the pin max. flow +1 mA $I_{Max} = -10\text{ mA}$ at $U_{CE} = 0,3\text{ V}$ , $U_{Max} = 30\text{ V}$ Short-circuit-proof against DGND
15	CV	DO	Constant voltage regulation active	CV = LOW, $U_{Low} < 1\text{ V}$ CC/CP = HIGH, $U_{High} > 4\text{ V}$	

\* AI = Analog Input, AO = Analog Output, DI = Digital Input, DO = Digital Output, POT = Potential


\*\* Internal  $V_{cc}$  approx. 14.3 V

\*\*\* Mains blackout, mains undervoltage or PFC error

\*\*\*\* Only during remote control

\*\*\*\*\* The error of a set value input adds to the general error of the related value on the DC output of the device

### 3.5.4.5 Overview of the Sub-D Socket

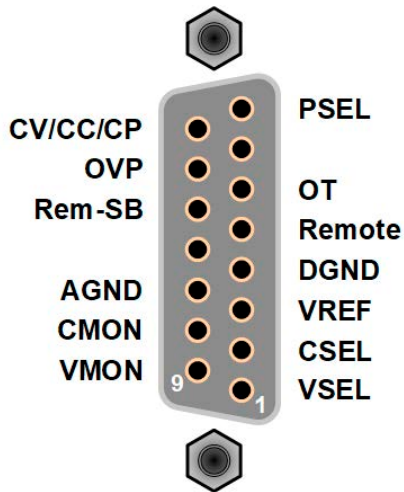

### 3.5.4.6 Simplified diagram of the pins

	<b>Digital Input (DI)</b> The internal circuit requires that a switch with low resistance should be used (relay, switch, circuit breaker etc.) in order to send a clean signal to the DGND.		<b>Analog Input (AI)</b> High resistance input (impedance >40 k....100 kΩ) for an OA circuit.
	<b>Digital Output (DO)</b> A quasi open collector, realised as high resistance pull-up against the internal supply. In condition LOW it can carry no load, merely switch, as shown in the diagram with a relay as example.		<b>Analog Output (AO)</b> Output from an OA circuit, only minimally impedant. See specifications table above.

### 3.5.4.7 Application examples

#### a) Switching off the DC output via the pin "REM-SB"



A digital output, e.g. from a PLC, may be unable to cleanly pull down the pin as it may not be of low enough resistance. Check the specification of the controlling application. Also see pin diagrams above.

In remote control, pin REM-SB is used to switch the DC output of the device on and off. This function is also available without remote control being active and can on one hand block the DC terminal from being switched on in manual or digital remote control and on the other hand the pin can switch the DC output on or off, but not standalone. See below at "Remote control has not been activated".

It is recommended that a low resistance contact such as a switch, relay or transistor is used to switch the pin to ground (DGND).


Following situations can occur:

- **Remote control has been activated**

During remote control via analog interface, only pin "REM-SB" determines the states of the DC output, according to the levels definitions in 3.5.4.4. The logical function and the default levels can be inverted by a parameter in the setup menu of the device. See 3.4.3.1.



If the pin is unconnected or the connected contact is open, the pin will be HIGH. With parameter "Analog interface REM-SB" being set to "normal", it requests "DC output on". So when activating remote control, the DC output will instantly switch on.

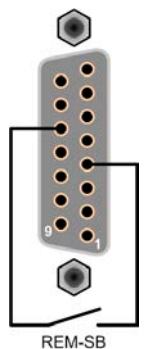

## • Remote control is not active

In this mode of operation pin "REM-SB" can serve as lock, preventing the DC output from being switched on by any means. This results in following possible situations:

DC-output	+	Pin „REM-SB“	+	Parameter „REM-SB“	→	Behaviour
is off	+	HIGH	+	normal	→	DC output not locked. It can be switched on by pushbutton "On/Off" (front panel) or via command from digital interface.
		LOW	+	inverted		
	+	HIGH	+	inverted	→	DC output locked. It can not be switched on by pushbutton "On/Off" (front panel) or via command from digital interface. When trying to switch on, a popup in the display resp. an error message will be generated.
		LOW	+	normal		

In case the DC output is already switched on, toggling the pin will switch the DC output off, similar to what it does in analog remote control:

DC-output	→	Pin „REM-SB“	+	Parameter „REM-SB“	→	Behaviour
is on	→	HIGH	+	normal	→	DC output remains on, nothing is locked. It can be switched on or off by pushbutton or digital command.
		LOW	+	inverted		
	→	HIGH	+	inverted	→	DC output will be switched off and locked. Later it can be switched on again by toggling the pin. During lock, pushbutton or digital command can delete the request to switch on by pin.
		LOW	+	normal		

## b) Remote control of current and power

Requires remote control to be activated (Pin "Remote" = LOW)


The set values PSEL CSEL are generated from, for example, the reference voltage VREF using potentiometers for each. Hence the power supply can selectively work in current limiting or power limiting mode. According to the specification of max. 5 mA for the VREF output, potentiometers of at least 10 kΩ must be used.

The voltage set value VSEL is permanently assigned to VREF and will thus be permanently 100%.

If the control voltage is fed in from an external source it is necessary to consider the input voltage ranges for set values (0...5 V oder 0...10 V).




*Use of the input voltage range 0...5 V for 0...100% set value halves the effective resolution.*

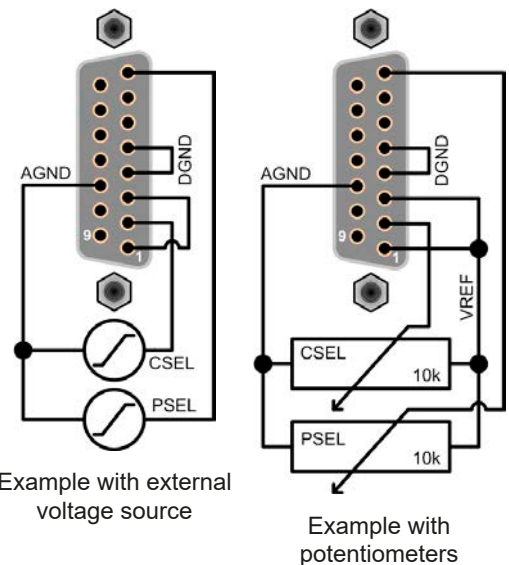

## c) Reading actual values

Via the AI the output values for current and voltage can be monitored. These can be read using a standard multimeter or similar.

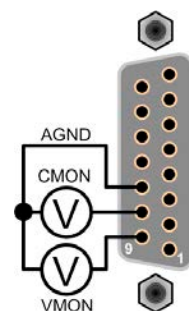

## 3.6 Alarms and monitoring

### 3.6.1 Definition of terms

Device alarms (see „3.3. Alarm conditions“) are defined as conditions like overvoltage or overtemperature, signalled in any form to the user of the device in order to take notice.

Those alarms are always indicated in the front display as readable abbreviated text, as well as status readable via digital interface when controlling or just monitoring remotely and, if activated, emitted as audible signal (buzzer). Furthermore, the most important alarms are also signalled by output pins on the analog interface.

There is furthermore an alarm history available in the submenu “Overview”. It counts alarms that occurred since the last time the unit was switched on, for statistics and later check.

### 3.6.2 Device alarm handling

A device alarm incident will usually lead to DC output switch-off. Some alarms must be acknowledged (see below), which can only happen if the cause of the alarm is not persistent anymore. Other alarms acknowledge themselves if the cause has vanished, like the OT and the PF alarm.

#### ► How to acknowledge an alarm in the display (during manual control)

1. Push button  once.

#### ► How to acknowledge an alarm on the analog interface (during analog remote control)

1. Switch off the DC output by pulling pin REM-SB to the level that corresponds to “DC output off” switch it on again. See section „3.5.4.7. Application examples“ for levels and logic.

#### ► How to acknowledge an alarm in the alarm buffer/status (during manual control)

1. Read the error buffer (SCPI protocol) or send a specific command to acknowledge, i.e. reset alarms (Mod-Bus RTU).






Some device alarms are configurable by adjusting a threshold:

Alarm	Meaning	Description	Range	Indication
OVP	OverVoltage Protection	Triggers an alarm if the DC output voltage reaches the defined threshold. This can be caused by the device being faulty or by an external source. The DC output will be switched off.	$0 \text{ V} \dots 1.1 \cdot U_{\text{Nom}}$	Display, analog IF, digital IF
OCP	OverCurrent Protection	Triggers an alarm if the DC output current reaches the defined threshold. The DC output will be switched off.	$0 \text{ A} \dots 1.1 \cdot I_{\text{Nom}}$	Display, digital IF
OPP	OverPower Protection	Triggers an alarm if the DC output power reaches the defined threshold. The DC output will be switched off.	$0 \text{ W} \dots 1.1 \cdot P_{\text{Nom}}$	Display, digital IF

These device alarms can't be configured and are based on hardware:

Alarm	Meaning	Description	Indication
PF	Power Fail	AC supply undervoltage. Triggers an alarm if the AC supply is out of specification or when the device is cut from supply, for example when switching it off with the power switch. The DC output will be switched off.	Display, digital IF
OT	OverTemperature	Triggers an alarm if the internal temperature reaches a certain limit. The DC output will be switched off.	Display, analog IF, digital IF






## ► How to configure the device alarms OVP, OCP and OPP

1. Switch off the DC output and push button  to call the setup menu.
2. In the menu navigate to “**Settings**” and push . Then in the submenu navigate to “**Protection Settings**” and push  again.
3. Set the limits for the equipment alarm relevant to your application if the default value of 110% of nominal is unsuitable.
4. Accept the settings with  or discard them with .



*Those thresholds are reset to defaults when using the function “**Reset Device**” in setup menu.*





## ► How to configure the alarm sound

1. Switch off the DC output and push button  to call the setup menu.
2. In the menu navigate to “**HMI Setup**” and push . Then in the submenu navigate to “**Alarm Sound**” and push  again.
3. In the following screen set parameter “**Alarm Sound**” to either **OFF** or **ON**.
4. Accept the settings with  or discard them with .

### 3.7 Control panel (HMI) lock

In order to avoid the accidental alteration of a value during manual operation the rotary knobs or the key strip of the control panel (HMI) can be locked so that no alteration will be accepted without prior unlocking. For additional safety, the panel lock can be secured by a PIN in order to only allow access from authorised personnel.

## ► How to lock the HMI


1. Switch off the DC output and push button  to call the setup menu.
2. In the menu navigate to “**HMI Setup**” and push . Then in the submenu navigate to “**HMI Lock**” and push  again.
3. Make your selection for parameter “**HMI Lock**”. With selection “**Lock all**” everything on the HMI is locked and you can’t even switch on the DC output. In order to be able to do at least that, use “**ON/OFF possible**”.
4. If required, activate the additional PIN feature with “**Enable PIN: Yes**”. In case you are not sure about the number, define a new one via “**Change user PIN:**”.
5. The lock is activated as soon as you confirm your selection with . The device will automatically exit the menu and jump back to normal display with status “**Locked**” now being indicated.

If an attempt is made to alter something whilst the HMI is locked, a requester appears in the display asking if the lock should be disabled.

### ► How to unlock the HMI

1. Rotate any knob or push any button except ON/OFF.

2. This request pop-up will appear:



3. Unlock the HMI by pushing **Enter** within 5 seconds, otherwise the pop-up will disappear and the HMI remains locked. In case the additional **PIN code lock** has been activated in the menu **"HMI Lock"**, another requester will pop up asking you to enter the **PIN** before it finally unlocks the HMI.

## 3.8 Loading and saving a user profile

The menu **"Profiles"** serves to select between a default profile and up to 5 user profiles. A profile is a collection of all settings and set values. Upon delivery, or after a reset, all 6 profiles have the same settings and all set values are 0. If the user changes settings or sets target values then these create a work profile which can be saved to one of the 5 user profiles. These profiles or the default one can then be switched. The default profile is read-only.

The purpose of a profile is to load a set of set values, settings limits and monitoring thresholds quickly without having to readjust these. As all HMI settings are saved in the profile, including language, a profile change can also be accompanied by a change in HMI language.

On calling up the menu page and selecting a profile the most important settings can be seen, but not changed.

### ► How to save the current values and settings (work profile ) as a user profile

1. Switch off the DC output and push button **Menu** to call the setup menu.
2. In the menu navigate to **"Profiles"** and push **Enter**.
3. In the submenu (see figure to the right) select a user profile (1-5) to save to and push **Enter** again.
4. From the selection on screen chose **"Save settings into Profile n"** and overwrite that profile with the current settings and values by confirming with **Enter**.



### ► How to load a user profile

1. Switch off the DC output and push button **Menu** to call the setup menu.
2. In the menu navigate to **"Profiles"** and push **Enter**.
3. In the submenu (see figure to the right) select a user profile (1-5) to load and push **Enter** again.
4. In the screen you can now select **"View Profile n"** in order to check the stored settings and to decide, whether this profile is going to be loaded or not. Navigate to **"Load Profile n"** and confirm with **Enter** to finally load the profile into the work profile.





### 3.9 Other applications

#### 3.9.1 Parallel operation in Share bus mode

Multiple devices of same kind and model can be connected in parallel in order to create a system with higher total current and hence higher power. To achieve that, the units have to be connected on their DC outputs and their Share Bus. The Share Bus will balance the units in their internal voltage regulation and thus current regulation, which will result in a balanced load distribution. It means that the Share bus is only effective in constant voltage operation.

In the parallel operation, a specific unit, a "Share Bus master", has to be picked as leading unit which drives the "Share Bus slaves". The master unit will remain fully controllable, also via analog or digital interface. The slaves, however, are restricted regarding set value adjustment. Their set values are just limits for the units while it is controlled via the Share Bus. A slave unit still can be controlled remotely, but not regarding output voltage. All slaves can be monitored (actual values, status), no matter via analog or digital interface.



*The Share Bus only control the process variable U (voltage). It means, the DC outputs of slave units have to be switched on or off either manually or remotely, which is very easy in analog remote control, because the related pins REM-SB could simply be connected in parallel, too. Furthermore, the Share Bus makes the set values of current and power ineffective on the slave units, so it is recommended to carefully set the protection thresholds OCP and OPP.*

##### 3.9.1.1 Wiring the DC outputs

The DC output of every unit in the parallel operation is simply connected to the next unit using cables with cross section according to the maximum current and with short as possible length.

##### 3.9.1.2 Wiring the Share bus

The Share bus is wired from unit to unit with an ideally twisted pair of cables with non-critical cross section. We recommend to use 0.5 mm<sup>2</sup> to 1.0 mm<sup>2</sup>.



The Share bus is poled. Take care for correct polarity of the wiring!



*A max. of 16 units can be connected via Share bus.*







##### 3.9.1.3 Configuring units for Share Bus operation

For correct Share Bus operation in parallel connection, the formerly picked master unit has to be configured as "Share Bus master". By default, these power supplies are set as "Share Bus slaves", so that this configuration step is not necessary for all slave units.



*Only one unit in the Share Bus connection must be configured as Share Bus master, else the Share Bus won't work.*

#### ► How to configure a device as Share Bus master

1. Switch off the DC output and push button  to call the setup menu. Push  again to enter submenu "Settings".
2. In the submenu navigate to "General Settings" and push  once again.
3. Use arrow button  to navigate to item "Share Bus mode" on the 2nd page and switch to setting "Master" by using the right-hand rotary knob.
4. Accept the settings with  or discard them with .

##### 3.9.1.4 Operating the Share Bus system

After successful configuration and initialisation of the master and slave units, it is recommended to check all set values and protection settings of all slaves and possibly adjust to identical values.

The slaves can be controlled manually as usual or remotely via the analog or via digital interfaces, but they don't react to voltage set values changes the same way as the master. They can, if needed, be monitored by reading actual values and status.

The master unit is not restricted and can be used like a stand-alone unit.



### 3.9.1.5 Alarms and other problem situations

Parallel operation, due to the connection of multiple units and their interaction, can cause additional problem situations which do not occur when operating individual units. For such occurrences the following regulations have been defined:

- If one or more slave units are switched off on the AC side (power switch, supply undervoltage) and come back later, they're automatically included again in the system. The remaining units will continue to work without interruption, but the entire system will provide less power
- If the DC output of the master unit is switched off due to a defect or overheating, then the total parallel system can provide no output power
- If accidentally multiple or no units are defined as master the Share Bus parallel system cannot be initialised

In situations where one or multiple units generate a device alarm like OV, PF or OT following applies:

- Any alarm of a slave is indicated on the slave's display only

### 3.9.2 Series connection

Series connection of two or multiple devices is basically possible. But for reasons of safety and isolation, some restrictions apply:



- Both, negative (DC-) and positive (DC+) output poles, are connected to PE via type X capacitors
- None DC minus pole of any unit in the series connection must have a potential against ground (PE) higher than specified in the technical data! The maximum allowed potential shift varies from model to model and is different for DC plus and DC minus
- The Share Bus must not be wired and used!
- Remote sensing must not be used!
- Series connection is only allowed with devices of the same kind and model, i.e. power supply with power supply, like for example PS/PSI 9080-170 3U with PSI 9080-170 3U or PS 9080-170 3U

Series connection in Master-Slave mode is not supported. It means, all units have to be controlled separately regarding set values and DC output status, whether it is manual control or remote control (digital or analog).

Due to the max. allowed potential shift on the DC output certain models are not allowed for series connection at all, like the 1000 V model, because the DC plus there is only isolated up to 1000 V. On the contrary, two 500 V models are eligible for series connection.

Analog interfaces on the units in serial connection can be connected in parallel, because they are galvanically isolated. It is also allowed to ground the GND pins of the analog interfaces connected in parallel, which may happen automatically, when connecting them to a controlling device such as a PC, where grounds are directly tied to PE.

In digital remote control, an almost synchronous control can be achieved by using any available Ethernet interface module and sending message as broadcast, so they address multiple units at once.

### 3.9.3 Operation as battery charger

A power supply can be used as a battery charger, but with some restrictions, because it misses a battery supervision and a physical separation from the load in form of a relay or contactor, which is featured with some real battery chargers as a protection.

Following has to be considered:

- No false polarity protection inside! Connecting a battery with false polarity will damage the power supply severely, even if it is not powered.
- Models from 200 V rating feature an internal discharge circuit for faster down-ramping of the output voltage after switching the output off. This small load can discharge the battery more or less slowly while the DC output is switched on and the power supply's output voltage is set to be lower than the battery voltage. This would, however, not occur when the power supply is not powered at all. It is thus recommended to leave the DC output switched off as long as the battery is not supposed to be charged.


### 3.9.4 Two quadrants operation (2QO)

#### 3.9.4.1 Introduction

This way of operating refers to the use of a source, in this case a power supply of series PS 9000 3U (only from revision 2, see type label), and a sink, in this case a series ELR 9000 or series EL 9000 B electronic load. The source and the sink function alternately in order to test a device, such as a battery, by deliberately charging and discharging it as part of a functional or final test.

The user can decide whether the system is operated manually or the power supply only as the dominant unit or both devices should be controlled by PC. We recommend to focus on the power supply, which is intended to control the load via the Share Bus connection. The two quadrants operation is only suitable for constant voltage operation (CV).

Clarification:

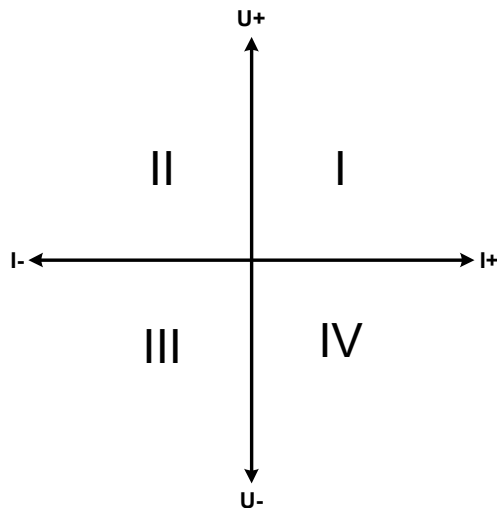


A combination of source and sink can only map the quadrants I + II. This means that only positive voltages are possible. The positive current is generated by the source or application and the negative current flows into the load..

The maximum approved limits for the application should be set in the power supply. This can be done via the interface. The electronic load should preferably be in operating mode CV. The load will then, using the Share Bus, control the output voltage of the power supply.


Typical applications:

- Fuel cells
- Capacitor tests
- Motor driven applications
- Electronic tests where a high dynamic discharge is required.

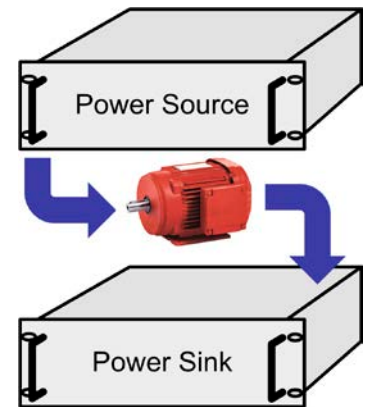

#### 3.9.4.2 Connecting devices to a 2QO


There are a number of possibilities to connect source(s) and sink(s) to make a 2QO:

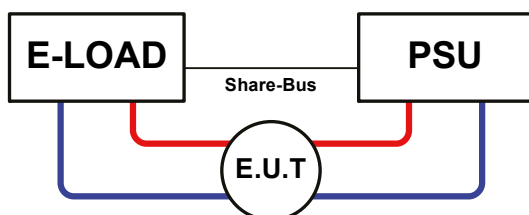

##### Configuration A:

1 e-load and 1 power supply, plus 1 test object (E.U.T).

This is the most common configuration for 2QO. The nominal values for U, I and P of the two devices should match, such as ELR 9080-170 and PS 9080-170 3U. The system is controlled by the power supply, which has to be set to "Master" in the setup menu (parameter "Share Bus mode").

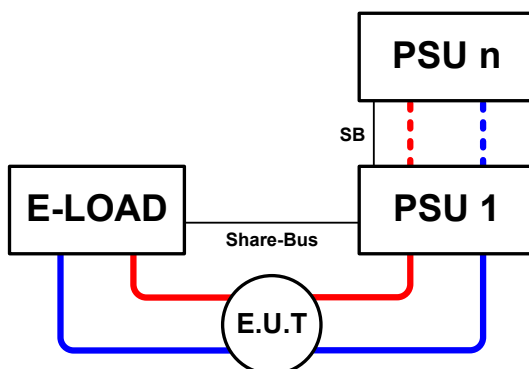

##### Configuration B:

1 e-load and multiple power supplies, plus 1 test object (E.U.T).

For adapting the total power of the power supply device to the possibly higher input power of the load, the power supplies are connected via Master-Slave and the load's current is shared across the power supplies when wiring the Share bus to gain a balanced load distribution. The system is controlled by one of the power supplies, which has to be set to "Master" in the setup menu (parameter "Share Bus mode").

### 3.9.4.3 Settings on the devices

The master-slave settings in the MENU of the load device(s) also affect the Share bus. For correct 2QO operation, all involved load units must be slaves on the Share bus. This is achieved by setting the master-slave mode to OFF or SLAVE, depending on if there is digital master-slave in use or not. For the one load that is master (setting: MASTER) in the master-slave system the additional parameter "PSI/ELR system" resp. "PSI/EL system" has to be activated.

On any of the power supplies, you need set parameter "Share bus mode" to MASTER. Also see 3.4.3.1.

For safety of the connected E.U.T / D.U.T and to prevent damage, we recommend to adjust supervision thresholds like OVP, OCP or OPP on all units to the desired levels, which will then switch off the DC output resp. the DC input in case of excess.

### 3.9.4.4 Restrictions

After all electronic loads have been connected to the Sharebus with one power supply as master, they cannot limit their input voltage anymore to what you adjust as "U set" on the device. The correct voltage level comes from the 2QO master unit (power supply) and has to be adjusted there.

If the applications requires to use the remote sensing feature in order to achieve a higher voltage accuracy on the E.U.T. only the master must be wired its Sense connector.



*Using the Sense input must be considered with caution, because it could increase the tendency of oscillation.*

### 3.9.4.5 Application example

Charging and discharging a battery with 24 V / 400 Ah, using configuration A from above.

- Power supply PS 9080-170 3U with:  $I_{\text{Set}} = 40 \text{ A}$  (charging current, 1/10 of capacity),  $P_{\text{Set}} = 5000 \text{ W}$
- Electronic load ELR 9080-170 set to:  $I_{\text{Set}} = \text{max.}$  discharging current of the battery (eg. 100 A),  $P_{\text{Set}} = 3500 \text{ W}$ , plus probably UVD = 20 V with event type "Alarm" to stop discharging at a certain low voltage threshold
- Assumption: battery has a voltage of 26 V at test start
- DC input(s) and DC output(s) of all units switched off



*In this combination of devices it is recommended to always switch on the DC output of the source first and then the DC input of the sink.*

### 1. Discharge of the battery to 24 V

Setup: Voltage on the power supply set to 24 V, DC output of power supply and DC input of load activated

Reaction: the e-load will load the battery with a maximum current of 40 A in order to discharge it to 24 V. The power supply delivers no current at this moment, because the battery voltage is still higher than what is adjusted on the power supply. The load will gradually reduce the input current in order to maintain the battery voltage at 24 V. Once the battery voltage has reached 24 V with a discharge current of approx. 0 A, the voltage will be maintained at this level by charging from the power supply.



*The power supply determines the voltage setting of the load via the Share bus. In order to avoid deep discharge of the battery due to accidentally setting the voltage on the power to a very low value, it is recommended to configure the undervoltage detection feature (UVD) of the load, so it will switch off the DC input when reaching the discharge voltage. The settings of the load, as given via the Share bus, can't be read from the load's display.*

### 2. Charging the battery to 27 V

Setup: Voltage on the power supply set to 27 V

Reaction: the power supply will charge the battery with a maximum current of 40 A, which will gradually reduce with increasing voltage as a reaction to the changing internal resistance of the battery. The load absorbs no current at this charging phase, because it is controlled via the Share bus and set to a certain voltage, which is still higher than the actual battery voltage and the actual output voltage of the power supply. When reaching 27 V, the power supply will deliver only the current needed to maintain the battery voltage.

## 4. Service and maintenance

### 4.1 Maintenance / cleaning

The device needs no maintenance. Cleaning may be needed for the internal fans, the frequency of cleanse is depending on the ambient conditions. The fans serve to cool the components which are heated by the inherent power loss. Heavily dirt filled fans can lead to insufficient airflow and therefore the DC output would switch off too early due to overheating or possibly lead to defects.

Cleaning the internal fans can be performed with a vacuum cleaner or similar. For this the device needs to be opened.

### 4.2 Fault finding / diagnosis / repair

If the equipment suddenly performs in an unexpected way, which indicates a fault, or it has an obvious defect, this can not and must not be repaired by the user. Contact the supplier in case of suspicion and elicit the steps to be taken.

It will then usually be necessary to return the device to the supplier (with or without guarantee). If a return for checking or repair is to be carried out, ensure that:

- the supplier has been contacted and it is clarified how and where the equipment should be sent.
- the device is in fully assembled state and in suitable transport packaging, ideally the original packaging.
- a fault description in as much detail as possible is attached.
- if shipping destination is abroad, the necessary customs papers are attached.

#### 4.2.1 Replacing a defect mains fuse

The device is protected by up to six 6.3x32 mm fuses (T16 A, 500 V, ceramic) inside the device. To replace these the device must be opened. Inside are 1-3 power modules in black plastic housings, each of which holds two of the fuses.



Opening the device and replacing the fuses must only be carried out by technically trained personnel!

Tools required: Torx 10 screwdriver, flat screwdriver approx. 5 mm, multimeter

#### ► Step 1: Opening the device

1. Switch off at the mains switch and remove plug.
2. Remove the top cover of the device (5 screws at the back, 5 on the front, 7 on each side, all Torx 10)
3. Remove the plastic cover(s) of the power modules.

#### ► Step 2: Replacing a defect fuse.

1. As it is usually unknown which fuse is defect, they should all be checked. The fuses are on the front side wall (looking from the front of the device) of the power modules and are covered with a soft plastic cap.
2. Remove the soft plastic cap from the fuse to be tested and carefully prise out the fuse with a flat screwdriver.
3. Check whether the fuse is intact with a multimeter, and if defective, replace with a similar type (size, values, lag)
4. Repeat step 2 for all fuses.

Once all fuses have been checked and replaced, and if no other defect is apparent, the device can be reassembled (step 1 in reverse order).

## 4.2.2 Firmware updates



Firmware updates should only be installed when they can eliminate existing bugs in the firmware in the device or contain new features.

The firmware of the control panel (HMI), of the communication unit (KE) and the digital controller (DR), if necessary, is updated via the rear side USB port. For this the software EPS Power Control is needed which is included with the device or available as download from our website together with the firmware update, or upon request.

However, be advised not to install updates promptly. Every update includes the risk of an inoperable device or system. We recommend to install updates only if...

- an imminent problem with your device can directly be solved, especially if we suggested to install an update during a support case
- a new feature has been added which you definitely want to use. In this case, the full responsibility is transferred to you.

Following also applies in connection with firmware updates:

- Simple changes in firmwares can have crucial effects on the application the devices are use in. We thus recommend to study the list of changes in the firmware history very thoroughly.
- Newly implemented features may require an updated documentation (user manual and/or programming guide, as well as LabView VIs), which is often delivered only later, sometimes significantly later

## 4.3 Calibration (readjustment)

### 4.3.1 Preface

The devices of series PS 9000 feature a function to re-adjust the most important DC output related values, which can help in case these values are out of tolerance. The procedure is limited to compensate small differences of up to 1% or 2% of the ratings. There are several reasons which could make it necessary to readjust a unit: component aging, component deterioration, extreme ambient conditions, high frequent use.

In order to determine if a value is out of tolerance, the parameter must be verified first with measurement tools of high accuracy and with at least half the error of the PS device. Only then a comparison between values displayed on the PS device and true DC output values is possible.

For example, if you want to verify and possibly readjust the output current of model PS 9080-510 3U which has 510 A maximum current, stated with a max. error of 0.2%, you can only do that by using a high current shunt with max. 0.1% error or less. Also, when measuring such high currents, it is recommended to keep the process short, in order to avoid the shunt heating up too much. It is furthermore recommended to use a shunt with at least 25% reserve.

When measuring the current with a shunt, the measurement error of the multimeter on the shunt adds to the error of the shunt and the sum of both must not exceed the max. error of the device under calibration.

### 4.3.2 Preparation

For a successful calibration and readjustment, a few tools and certain ambient conditions are required:

- A measurement device (multimeter) for voltage, with a max. error of half the PS's voltage error. That measurement device can also be used to measure the shunt voltage when readjusting the current
- If the current is also going to be calibrated: a suitable DC current shunt, ideally specified for at least 1.25 times the max. output current of the PS and with a max. error that is half or less than the max. current error of the PS device
- Normal ambient temperature of approx. 20-25°C
- An adjustable load, such as an electronic load, which is capable of consuming at least 102% of the max. voltage and current of the PS device

Before you can start calibrating, a few measures have to be taken:

- Let the PS device warm up in connection with the voltage / current source
- In case the remote sensing input is going to be calibrated, prepare a cable for the remote sensing connector to DC output, but leave it yet unconnected
- Abort any form of remote control, deactivate master-slave mode, set device to **U/I** mode
- Install the shunt between PS device and load and make sure the shunt is cooled somehow
- Connect external measurement device to the DC output or to the shunt, depending on whether the voltage is going to be calibrated first or the current

### 4.3.3 Calibration procedure

After the preparation, the device is ready to be calibrated. From now on, a certain sequence of parameter calibration is important. Generally, you don't need to calibrate all three parameters, but it is recommended to do so.

Important:



- *It is recommended to do the calibration of current before any voltage calibration*
- *When calibrating the voltage, the input "Sense" on the rear of the device must be disconnected*
- *During the calibration, the user is asked to enter measured values. If these value differ too much from the value measured by the device or wrong values are entered, the calibration fails and has to be repeated.*

The calibration procedure, as explained below, is an example with model PS 9080-170 3U. Other models are treated the same way, with values according to the particular PS model and the required load.



#### 4.3.3.1 Calibrating the set values

##### ► How to calibrate the DC output voltage

1. Connect a multimeter to the DC output. Connect a load and set it to approx. 5% of the nominal current of the power supply as load current, in this example ~8 A.
2. In the display enter the setup menu with **Menu**, then push button **Enter**. In the submenu navigate to “**Calibrate Device**”. Push **Enter** again.
3. In the next screen select “**Voltage calibration**” + **Enter**, then “**Calibrate output value**” + 2x **Enter**. The power supply will switch the DC output on, set a certain output voltage and start to measure it (**U-mon**).
4. The next screen requests you to enter the measured output voltage from the multimeter at **Measured data=**. Enter it using the right-hand rotary knob, just like would adjust a set value. Assure yourself the value is correct and submit with **Enter**.
5. Repeat point 4. for the next three steps (total of four steps).



##### ► How to calibrate the DC output current

1. Set the load to >100% nominal current of the PS device, for the sample model with 170 A let's say 173 A.
2. In the display enter the setup menu with **Menu**, then push button **Enter**. In the submenu navigate to “**Calibrate Device**”. Push **Enter** again.
3. In the next screen select “**Current calibration**” + **Enter**, then “**Calibrate output value**” + 2x **Enter**. The device will switch on the DC output, set a certain current limit while loaded by the load or sink and start to measure the output current (**I-mon**).
4. The next screen requests you to enter the output current **Measured data=** measured with the shunt. Enter it using the right-hand rotary knob, just like would adjust a set value. Assure yourself the value is correct and submit with **Enter**.
5. Repeat point 4. for the next three steps (total of four steps).


#### 4.3.3.2 Calibrating the remote sensing

In case you are generally using the remote sensing feature, no matter if in sink or source mode, it is recommended to also calibrate it for best results. The procedure is identical to the calibration of voltage, except for it requires to have the sensing connector (Sense) on the rear to be plugged and connected with correct polarity to the DC output of the PS.


##### ► How to calibrate the DC output voltage for remote sensing


1. Connect a load and set it to approx. 3% of the nominal current of the power supply as load current, in this example ~5 A. Connect the remote sensing input (Sense) to the load with correct polarity.
2. Connect an external multimeter to the DC terminal of the load.
3. In the display enter the setup menu with **Menu**, then push button **Enter**. In the submenu navigate to “**Calibrate Device**”. Push **Enter** again.
4. In the next screen select “**Sense volt. calibration**” + **Enter**, then “**Calibrate output value**” + 2x **Enter**.
5. The next screen requests you to enter the measured sensing voltage at **Measured data=**. Enter it using the right-hand rotary knob, just like would adjust a set value. Assure yourself the value is correct and submit with **Enter**.
6. Repeat point 5. for the next three steps (total of four steps).

#### 4.3.3.3 Calibrating the actual values

Actual values of output voltage (with and without remote sensing) and output current are calibrated almost the same way as the set values, but here you don't need to enter anything, just confirm the displayed values. Please proceed the above steps and instead of **"Calibrate output value"** select **"Calibrate actual value"** in the submenus. After the device shows measured values on display, wait at least 2s for measured value to settle and then simply confirm with , until you are through all steps.

#### 4.3.3.4 Save calibration data

After calibration you may furthermore enter the current date. To do so, navigate to menu item **"Calibration date"** and enter the date in format YYYY / MM / DD and submit with .

Last but not least save the calibration data permanently confirming menu item **"Save and exit"** with .



Leaving the calibration selection menu without saving via **"Save and exit"** will discard calibration data and the procedure would have to be repeated!

## 5. Contact and support

### 5.1 Repairs

Repairs, if not otherwise arranged between supplier and customer, will be carried out by the manufacturer. For this the device must generally be returned to the manufacturer. No RMA number is needed. It is sufficient to package the equipment adequately and send it, together with a detailed description of the fault and, if still under guarantee, a copy of the invoice, to the address below.

### 5.2 Contact options

Questions or problems with operation of the device, use of optional components, with the documentation or software, can be addressed to technical support either by telephone or e-Mail.

Address	e-Mail	Telephone
EPS Stromversorgung GmbH Alter Postweg 101 86159 Augsburg Germany	All topics: info@eps-germany.de	Switchboard: +49 821 / 570451-0



